

www.orioncontrols.com

# VCM-X / RNE Controller Operator Interface SD Technical Guide

VCM-X Controller Code: SS1026  
 VCM-X E-BUS Controller Codes: SS1030, SS1032, SS1033, SS1034  
 RNE Controller Code: SS1045  
 VAV/Zone Controller Code: SS1001, SS1005, SS1025  
 Requires Modular Service Tool SD Code: SS1063  
 Requires Modular System Manager SD Code: SS1064



RS-485 COMMUNICATION LOOP WIRE  
 "R" TO "R", "T" TO "T", "SHLD" TO "SHLD"

**AAON**  
 www.aaon.com

**Orion Control Systems**  
 www.orioncontrols.com

RNE MODULAR CONTROLLER  
 Orion No.: OE332-23E-RNE-A

AAON No.: V17110

RELAY CONTACT RATING IS 1 AMP MAX @ 24 VAC

RELAY COMMON FAN  
 RELAY 2  
 RELAY 3  
 RELAY 4  
 RELAY 5

AA1 = SPC (SPACE TEMPERATURE SENSOR)  
 AA2 = SAT (SUPPLY AIR TEMPERATURE SENSOR)  
 AA3 = RAT (RETURN AIR TEMPERATURE SENSOR)  
 AA4 = OAT (OUTDOOR AIR TEMPERATURE SENSOR)  
 AA5 = SUCTION PRESSURE SENSOR (FROM EXP. MODULE)  
 AT7 = SPACE TEMPERATURE SENSOR (SLIDE ADJUST OR VOLTAGE RESET SOURCE)  
 AR1 = ECONOMIZER (2-10 VDC OUTPUT)  
 AR2 = SUPPLY FAN VFD (0-10 VDC OUTPUT)

E-BUS CONNECTOR

ANALOG INPUT JUMPER SETTINGS

LED NAME	STATUS1	STATUS2
NORMAL OPERATION	0	1
DAT FAL.	1	2
OAT FAL.	2	2
SPC FAL.	3	2
MODULE ALARM	4	2
MECH COOL FAL.	1	3
MECH HEAT FAL.	2	3
FAN PROOF FAL.	3	3
DRYTY FILTER	4	3
EMERGENCY SHUTDOWN	5	3
LOW SAT	1	4
HIGH SAT	2	4
CONT. TEMP COOL FAL.	3	4
CONT. TEMP HEAT FAL.	4	4
PUSH BUTTON OVR.	1	5
ZONE OVR.	2	5
OUTPUT FORCE ACTIVE	0	6

ANALOG INPUT JUMPER SETTINGS MUST BE SET AS SHOWN FOR PROPER OPERATION

AL VAC POWER ONLY WARNING! POLARITY MUST BE OBSERVED OR THE CONTROLLER WILL BE DAMAGED

STATIC PRESSURE    WorthMaster Label #1810121 Rev. 1A    I/C EXPANSION    I/C DIGITAL SENSOR

# IMPORTANT NOTICE

This technical guide provides instructions for using the Modular Service Tool SD and Modular System Manager SD with the VCM-X, VCM-X E-BUS, RNE & VAV/Zone Controllers only. If you are using a different controller, you can download the applicable SD Technical Guide listed below from our website—[orioncontrols.com](http://orioncontrols.com). The technical guides can also be printed from the SD card.

SA E-BUS Controller - AA-SAOISD-TGD

VCB-X Controller - OR-VCBXOISD-TGD

VCM Controller - OR-VCMOISD-TGD

VAV/CAV and MUA II Controllers - OR-VAVCAVMUAOISD-TGD

# SD CARD UPDATING INSTRUCTIONS

The Modular Service Tool and Modular System Manager are equipped with an SD memory card. This SD card can be removed and easily updated through a computer by downloading updates, as they become available, from our website to your computer.

In order to perform any updates, your computer needs an SD card drive or you will need to purchase an SD card adapter.

Download instructions are found in Appendix B on page 81 of this manual.



[www.orioncontrols.com](http://www.orioncontrols.com)

WattMaster Controls, Inc.  
8500 NW River Park Drive · Parkville, MO 64152  
Toll Free Phone: 866-918-1100  
PH: (816) 505-1100 · FAX: (816) 505-1101  
E-mail: [mail@wattmaster.com](mailto:mail@wattmaster.com)  
Visit our website at [www.orioncontrols.com](http://www.orioncontrols.com)

AAON® is a registered trademark of AAON, Inc., Tulsa, OK.  
WattMaster Controls, Inc. assumes no responsibility for errors or omissions.  
This document is subject to change without notice.  
Form: OR-VCMXRNEOISD-TGD-01J  
Copyright September 2016 WattMaster Controls, Inc.

OVERVIEW & SYSTEM CONNECTION..... 5  
 Modular Service Tool ..... 5  
 Modular System Manager SD ..... 6

MODULAR SERVICE TOOL SD ..... 10  
 Display Screens and Data Entry Keys..... 10  
 Initialization & Setting the Time & Date ..... 11  
 Setting the Operating Mode & Energy Timer..... 12  
 Alarm Search & Override Search ..... 13  
 Schedules & Holidays..... 14  
 Schedule Override..... 15

SYSTEM MANAGER SD ..... 16  
 Display Screens and Data Entry Keys..... 16  
 Initialization & Setting the Time & Date ..... 17  
 Setting the Operating Mode..... 18  
 Changing Passcodes..... 19  
 Loop Search and System Alarm Search..... 20  
 Unit Alarm Search & Override Search..... 21  
 Schedules & Holidays..... 22  
 Schedule Override..... 23

PROGRAMMING..... 24  
 VCM-X Configuration Screen Index ..... 24  
 Configuring VCM-X Controllers ..... 25  
 RNE Configuration Screen Index ..... 34  
 Configuring RNE Controllers ..... 35  
 VCM-X / RNE Setpoint Screen Index ..... 44  
 Configuring VCM-X / RNE Setpoints..... 45  
 VCM-X / RNE Status Screen Index..... 55  
 VCM-X / RNE Status Screens..... 56  
 VAV/Zone Configuration Screens ..... 66  
 VAV/Zone Setpoint Screens ..... 69  
 VAV/Zone Status Screens ..... 73  
 VAV/Zone Damper Force Modes..... 75  
 MiniLink PD Configuration Screens..... 76  
 MiniLink PD Status Screens ..... 77

TROUBLESHOOTING..... 78  
 VCM-X / RNE Outputs Force..... 78

APPENDIX A - SAVING, LOADING, AND COPYING SETPOINTS ..... 80


APPENDIX B - UPDATING THE SD MEMORY CARD ..... 82

APPENDIX C - UPDATING CONTROLLER & E-BUS MODULE SOFTWARE ..... 83

INDEX..... 85

## Modular Service Tool SD

### Modular Service Tool SD

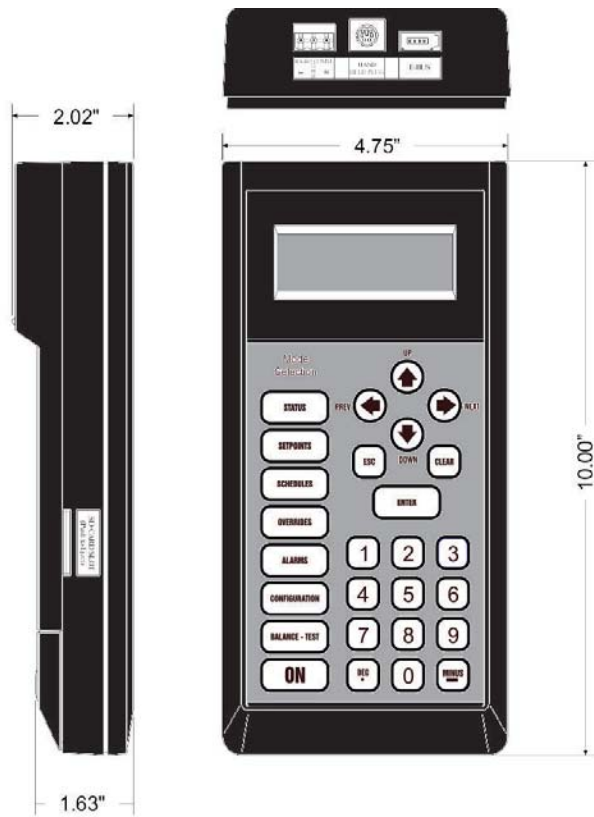

**Figure 1: Modular Service Tool Dimensions**

The OE391-12 Modular Service Tool is a system operator interface that provides a direct link to enable the system operator to view the status, configure, and adjust the setpoints of the VAV/CAV, MUA II, VCM, VCM-X, VCM-X E-BUS, RNE, VCB-X, SA E-BUS or VAV/Zone Controller on the control system communications loop. However, this manual only applies to VCM-X, VCM-X E-BUS, RNE, and VAV/Zone Controllers. See note in the inside front cover for the list of manuals that pertain to other controllers.

The Modular Service Tool is housed in an attractive black plastic enclosure. The display area is covered with a clear plastic bezel for protection of the display screen. The Modular Service Tool has a 4-line-by-20-character display panel with adjustable contrast control and a 27-key membrane keypad for data selection and entry. All keypad operations are simple and straight forward, utilizing non-cryptic plain English language messages. Menu-driven programming allows for easy setup and operation without the need for specialized training. The Modular Service Tool is supplied with a programmable 4 Gigabyte SD memory card, with (4) AA 1.5 V batteries, a wall mount a DC power supply, a mini-Din communication cable, and an E-BUS communication cable. The mini-Din cable allows you to connect the Modular Service Tool to any Orion controller which has a mini-Din connector socket for programming, monitoring, and troubleshooting purposes.

The Modular Service Tool is also equipped with an EBC E-BUS port and an RS-485 three conductor terminal block port. The E-BUS port and included E-BUS cable are used for updating E-BUS Module software. The RS-485 port is used for hard-wiring to older controllers that do not have a mini-DIN connector socket.

The Modular Service Tool is designed to be hand-carried. Its rugged plastic housing provides superior protection for the electronic components housed inside. The Modular Service Tool is a top-quality service tool that will stand up to the demands of the typical job site environment for many years.

Modular Service Tool SD

Whether you have a Stand Alone, Interconnected, or Networked Orion Controls System, the Modular Service Tool always connects to the controller or a VAV/Zone Controller via a prefabricated cable that is supplied with the service tool. The Modular Service Tool cable is terminated on both ends with a mini-DIN connector. Attach one end to the Modular Service Tool and the other end to the mini-DIN connector on the controller. If this is an Interconnected System, all controllers that are interconnected with communications cable can be programmed from any controller on the loop. If this is a Networked System, all controllers on the entire Networked System can be programmed from one controller.

Be sure that the Modular Service Tool's SD memory card is inserted correctly and that the Modular Service Tool has fresh batteries installed or that it is connected to a power source using the supplied power pack before attempting any programming of the controller. See **Figure 2** for connection details.


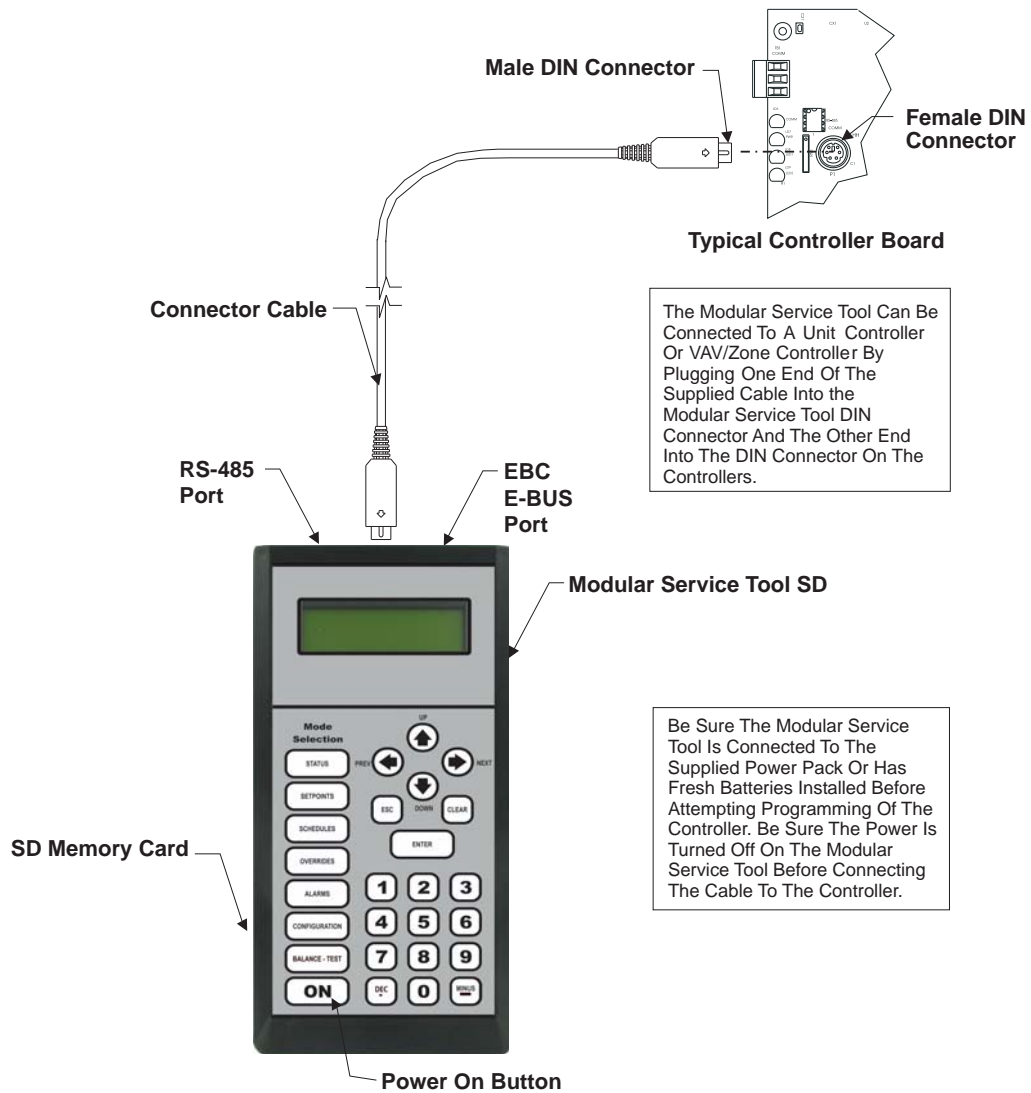


Figure 2: Modular Service Tool SD

## Modular System Manager SD

### Modular System Manager SD

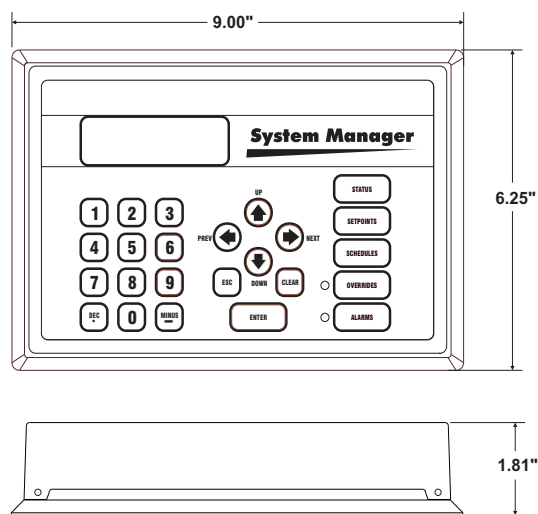

**Figure 3: Modular System Manager SD Dimensions**

The OE392-12 Modular System Manager SD provides a direct link to enable you to view the status and adjust the setpoints of the VCM-X, VCM-X E-BUS, VCB-X, RNE, SA E-BUS, VCM, VAV/CAV, MUA II or VAV/Zone Controller on the control system communications loop. The System Manager SD is housed in a beige-colored plastic enclosure. The System Manager has a programmable 4 Gigabyte SD card and is equipped with a 4-line-by-20-character backlighted display panel and a 24-key membrane keypad for data selection and entry. All keypad operations are simple and straight forward, utilizing non-cryptic plain English language messages. Menu-driven programming allows for easy setup and operation without the need for specialized training. The System Manager also has 2 integral LEDs for user notification of system alarm conditions and override initiations. Protection from unauthorized users is provided by the System Manager's integral multi-level passcode authorization programming.

On a Networked System, the Modular System Manager is connected to the communications and power loop of the system via modular cables that simply plug into the System Manager board and the Power/Comm Distribution Board. This virtually eliminates wiring errors and makes installation fast and easy. When it is to be connected to a Stand-Alone system, a cable with modular connectors on one end and stripped wire ends on the other end is provided to facilitate connecting communications and power to the Modular System Manager from the 24 VAC power source and the HVAC unit controller communication wiring terminals.

The Modular System Manager is designed for wall mounting. Mounting holes are provided to attach the Modular System Manager to a standard handy box. It is recommended that the System Manager be mounted at approximately eye level to allow for ease of programming and reading of the display. The System Manager is typically mounted in the building manager's or superintendent's office or in an equipment room. The attractive enclosure is quite suitable for mounting in any location.

Modular System Manager SD Network Connection

Network Connection

As previously described, when you are connecting the Modular System Manager to a Networked System, the Modular System Manager is connected to the communications and power loop of the system via modular cables. These cables simply plug into the System Manager board and to any device with modular connectors on any local loop on the system. Devices with modular connectors include the Power/Comm Distribution Board, VAV/Zone controller, and MiniLink Polling Device. By using these plug-in connections, wiring errors are virtually eliminated and system installation is fast and easy. See **Figure 4** below for typical connection information. See **Figure 5 on page 8** for typical Power/Comm board wiring and connection information.

When the System Manager is to be connected to a Stand Alone system, a 12-foot cable with modular connectors on one end and stripped wire ends on the other end is provided for this purpose. This is used to facilitate connecting communications and power wiring to the Modular System Manager from a 24 VAC power source and to the HVAC unit controller communication wiring terminals. See **Figure 6 on page 9** for wiring details. If the supplied cable wire is not long enough for your installation, a standard modular cable of the correct length can be purchased through WattMaster and one of the modular connectors can be cut off to allow for the transformer and communication terminal wiring connections. It is recommended that you do not splice the communications wire if at all possible. The transformer should be rated at 6 VA minimum power output.

Modular System Manager SD Back View

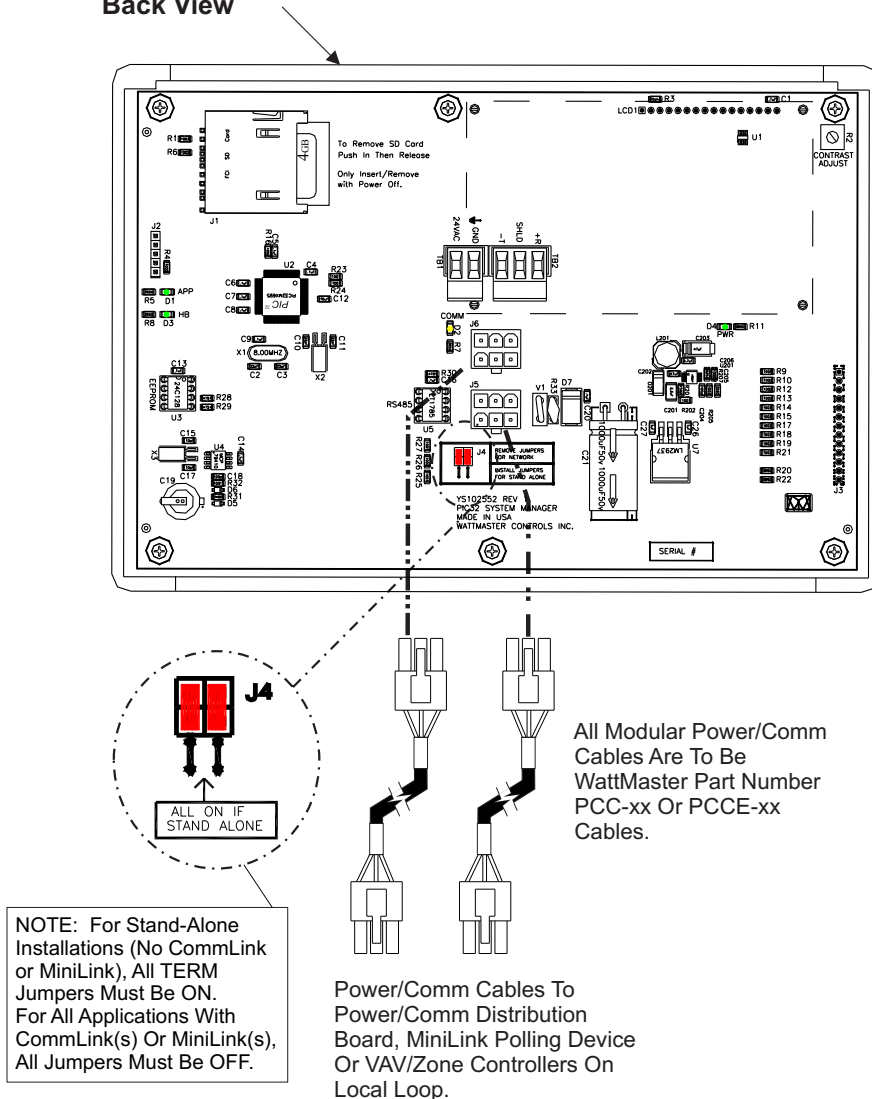


Figure 4: Modular System Manager SD - Network

# SYSTEM CONNECTION


## Power/Comm Board Wiring

### WARNING!

**DO NOT GROUND THE 24V TRANSFORMER THAT IS TO BE USED WITH THE POWER/COMM BOARDS. GROUNDING OF THE TRANSFORMER WILL DAMAGE THE POWER/COMM BOARD AND ALL BOARDS CONNECTED TO IT. A SEPARATE TRANSFORMER MUST BE USED FOR EACH POWER/COMM BOARD. NO EXCEPTIONS. DO NOT CONNECT ANY OTHER DEVICES TO THE TRANSFORMER USED FOR THE POWER/COMM BOARD!**

A Power/Comm Cable Can Be Used To Connect With The MiniLink PD Instead Of Using 2 Conductor Twisted Pair With Shield Cable. You Can Also Use A Power/Comm Cable To Connect With Another Power/Comm Board, A System Manager Or A VAV/Zone Controller.

If Desired, Instead Of Using A Power/Comm Cable, You Can Use 2 Conductor Twisted Pair With Shield Cable To Connect To The Power/Comm Board From The Unit Controller, MiniLink PD, Or Another Power/Comm Board.

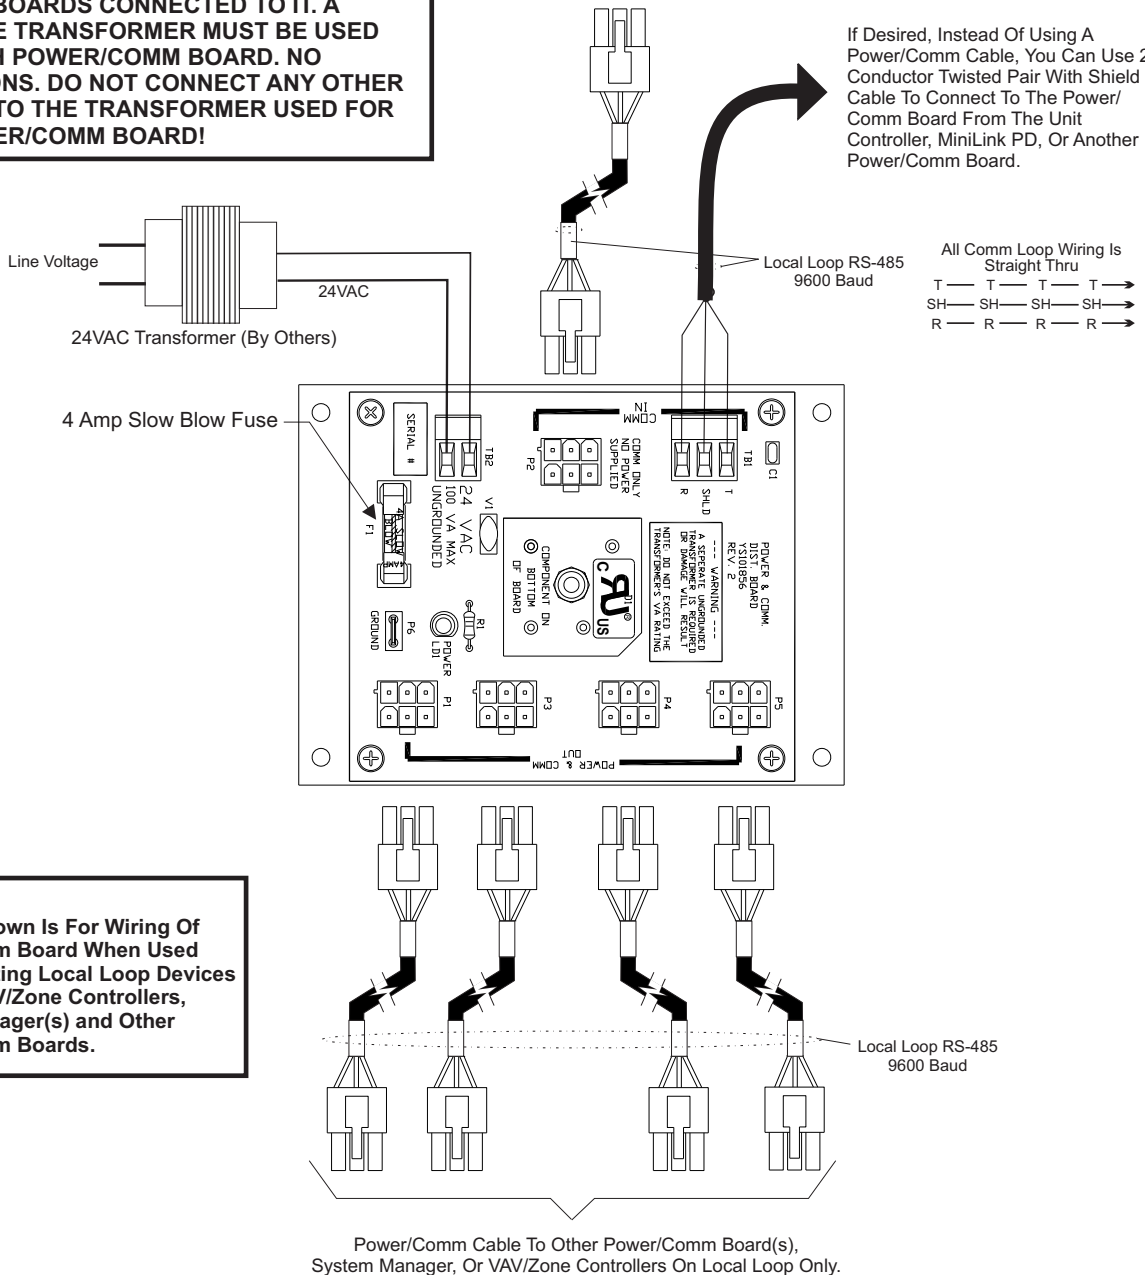


**NOTE:**  
Diagram Shown Is For Wiring Of Power/Comm Board When Used For Connecting Local Loop Devices Such As VAV/Zone Controllers, System Manager(s) and Other Power/Comm Boards.


Figure 5: Typical Power/Comm Board Wiring



Modular System Manager SD  
Back View

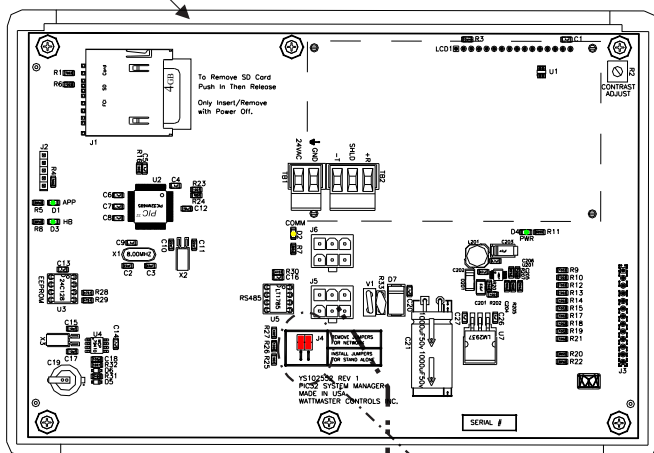

**NOTE:** If Desired A Power/Comm Board As Used With The Networked System Can Be Installed And Wired Instead Of Using The Pigtail Cable Wiring Shown Below. See The Networked System Wiring Diagram For Details.

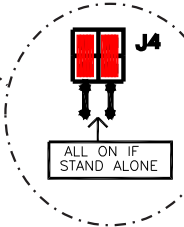

**NOTE:** For Stand-Alone Installations (No CommLink or MiniLink), All TERM Jumpers Must Be ON. For All Applications With CommLink(s) Or MiniLink(s), All Jumpers Must Be OFF.

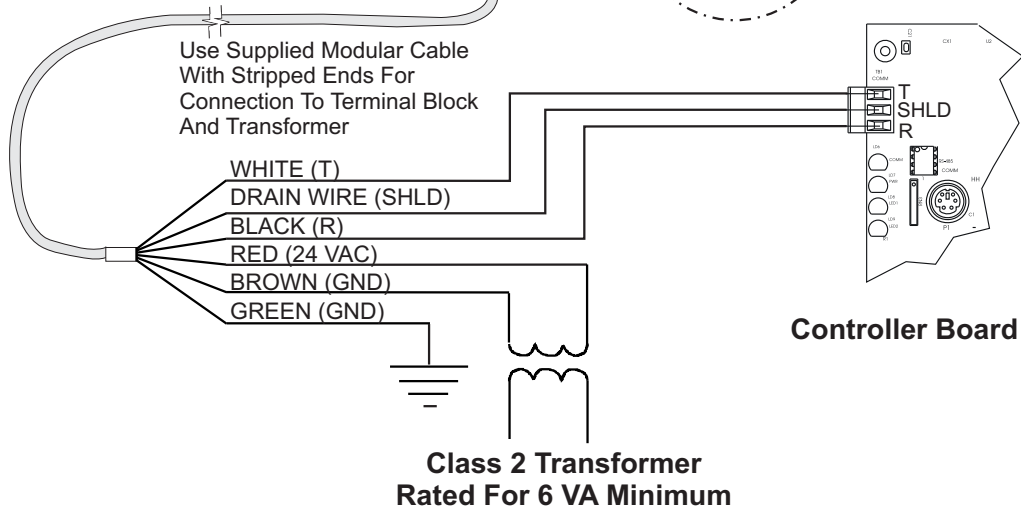


Figure 6: Modular System Manager SD - Stand Alone

## Modular Service Tool Keys

### Operator Interfaces

In order to configure and program the Orion System controllers, you must have an Operator's Interface or a personal computer with the Prism II computer front-end software installed. Three different Operator Interfaces are available for programming of the Orion Controls System—the Modular Service Tool SD, the Modular System Manager (VCM-X and VAV/Zone Controllers only), and/or the System Manager TS II. These devices allow you to access the status and setpoints of the controllers on your communications loop. This manual describes the Modular Service Tool SD. If using the Modular System Manager or System Manager TS II, please see the *VCM-X / RNE Operator Interfaces Technical Guide* or the *System Manager TS II Technical Guide*. If using Prism II, please see the *Prism II Technical Guide*.

The Modular Service Tool allows you to view any input or output status and change any setpoint to fine-tune the operations of the total system. All keypad operations are simple and straightforward, utilizing non-cryptic plain English messages.

### Display Screens & Data Entry Keys

See the chart below for a list of the keypad descriptions and functions.

Keypad Description	Key Function
NEXT	Use this key to access the Setup Screens
ESC	Use this key to exit from screens or from data entry or to return to the Main Screen from any screen in the system.
ENTER	Use this key to enter a new value.
Clear	If a data entry mistake is made, press this key to clear the data entry field and start over. This key also turns off the power to the Service Tool when on the Main Screen
Minus	If a setpoint with a negative value is required, press this key for the minus sign.
DEC	Press this key when entering data that requires a decimal point.
← →	Use these keys to change values in the Configuration Screens as prompted.
↑ ↓	Use these keys to step backward or forward through the screens.

**Table 1: Keypad Descriptions**

### Mode Selection Buttons

The Modular Service Tool is provided with “Mode Selection Buttons.” These buttons give you instant access to the specific mode desired without having to scroll through several menu screens to get there.

Button Description	Mode Selection Buttons
STATUS	Pressing this button takes you directly to the controller “Status” screens.
SETPOINTS	Pressing this button takes you directly to the controller “Setpoints” screens.
SCHEDULES	Pressing this button takes you directly to the controller “Schedules” screens.
OVERRIDES	Pressing this button takes you directly to the controller “Overrides” screen. See the “Override Button” section on <b>page 13</b> for a description of this function. See Note 1 below.
ALARMS	Pressing this button takes you directly to the controller “Alarms” screen. See the “Alarms Button” section on <b>page 13</b> for a description of this function.
CONFIGURATION	Pressing this button takes you directly to the controller “Configuration” screens.
BALANCE-TEST	Pressing this button takes you directly to the controller “Balance-Test” screens.
Notes: (1) The Modular Service Tool will only search the Overrides one loop at a time. You must enter the Loop number and the MiniLink PD unit ID (60).	

**Table 2: Button Descriptions**

Initialization & Setting the Time & Date

Modular Service Tool Initialization

Modular Service Tool Initialization Screen and Setup Screens

After connecting the Service Tool to the controller with the supplied cable, *press* <ON>. The *Initialization Screen* will appear followed by the *Setup Screens* as shown below. If there is no SD card installed, the second screen will display, "No SD Card Connected! Powering Down!"

```

    Initializing
  Service Tool vX.XX
  WattMaster Controls
  
```

```

    1) Set Time & Date
    2) Communications
  NEXT) More Options
  ESC) Exit Menu
  
```

```

    3) Energy Saving
    4) Update Software
  NEXT) More Options
  ESC) Exit Menu
  
```

NOTE: Once you *press* <ESC> while at the *Setup Screens* shown above, you can access them again by pressing <NEXT> or cycling power.

Setting The Time & Date

The Modular Service Tool is equipped with a real time clock chip allowing it to maintain the correct time. Once you have programmed the correct time and date, the information is broadcast globally to all controllers on the entire system.

NOTE: If you are in a time zone that has daylight savings, you will need to manually adjust the time twice a year.

Programming the Time

From the *Setup Screen* shown below, *press* <1> on your keypad to access the *Set Time & Date Screens*. (You may have to *press* <NEXT> to access this screen.)

```

    1) Set Time & Date
    2) Communications
  NEXT) More Options
  ESC) Exit Menu
  
```

Although the times are displayed on the *Main Screen* in a standard 12-hour format, you must program them using the 24-hour military format. If you configured the VCM-X or RNE Controller to use its own Internal Schedules, the Occupied/Unoccupied modes are calculated on the basis of the current real time clock reading.

The two screens that follow will appear. To scroll through the fields, *press* <↓> or <ENTER>. In order to save a new value, you must *press* <ENTER>.

```

    Program Time/Date
  Day   (Sunday=0):  X
  Enter Hr. (0-23): XX
  Enter Minutes   : XX
  
```

**Day** - Enter the Day of the Week (0 to 6)  
Sunday = 0

**Hours (Hr)** - Enter Hours in 24-Hour Military Format  
(1700 = 5:00 PM)

**Minutes** - Enter the Minutes  
(0 to 59)

Programming the Date

To scroll through the fields, *press* <↓> or <ENTER>. In order to save a new value, you must *press* <ENTER>.

```

    Program Time/Date
  Month   (1-12):  XX
  Day     (1-31):  XX
  Year    (0-99):  XX
  
```

**Month** - Enter the Month (1 to 12)

**Day** - Enter the Day of the Month (1 to 31)

**Year** - Enter the current Year (0 to 99)

When you have finished programming the time and date, *press* <ESC> to return to the *Setup Screen* shown below.

```

    1) Set Time & Date
    2) Communications
  NEXT) More Options
  ESC) Exit Menu
  
```

## Setting the Operating Mode and Energy Saving Timer

### Setting the Operating Mode

The Operating Mode is displayed on the last line of the *Main Screen* as shown below. The factory default setting for the Service Tool is **LS (Low Speed) Stand Alone Mode**. **LS Stand Alone Mode** is the correct configuration for the VCM-X E-BUS Controller or RNE Controller when in Stand Alone Mode.

```
Service Tool SD vX.XX
01/16/15 02:21 PM
LS Stand Alone
No Communication
```

If you are using this Service Tool on a communications loop and have an installed MiniLink PD or CommLink, you will need to change the setting to **LS (Low Speed) Network Mode**.

If your display indicates a different mode than the one you need, *press* <2> at the *Setup Screen* shown below. You may have to *press* <NEXT> to access this screen.

```
1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
```

The *Communications Screen* will appear as shown below.

```
Stand Alone Mode
Lo Speed Connection
Use Left/Right Arrow
To Change Selections
```

*Press* <←> or <→> if you need to change the mode of operation.

When you have made your selection, *press* <ENTER>. The following screen will appear.

```
You Have Changed The
System Mode
Press Any Key To
Continue
```

*Press* any key to continue. The *Setup Screen* will appear as shown below:

```
1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
```

### Setting the Energy Saving Timer

The Modular Service Tool has a built-in timer that can be programmed to shut the Service Tool off after a specified period of time if no buttons are pressed. This is a very useful feature if you are powering the Service Tool from the internal batteries.

To set the Energy Saving Timer, *press* <NEXT> at the first *Setup Screen* and <3> at the second *Setup Screen* shown below. (You may have to cycle power to get to these screens).

```
1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
```

```
3) Energy Saving
4) Update Software
NEXT) More Options
ESC) Exit Menu
```

The *Energy Saving Screen* will appear as shown below:

```
Energy Saving
Automatic Power Down
Minutes: xx
Press ESC to Exit
```

Enter the number of minutes you want the Service Tool to stay active before it automatically powers down and *press* <ENTER>. To cancel the automatic power down, *enter* <99> and *press* <ENTER>. After you have entered a number between 1 and 99 minutes, *press* <ESC> to exit the screen.


The *Setup Screen* will appear again as shown below:

```
1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
```

Modular Service Tool Alarm Search

NOTE: When you *press* the <ALARMS> button on the Modular Service Tool, it will search only the unit ID that you have entered; therefore, you must search each unit individually to access all alarms for that controller.



To search for alarms, *press* <ALARMS> while on any screen but the *Setup Screen(s)*. The *Unit Selection Screen* will be displayed.

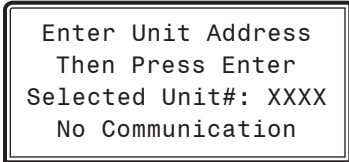

Enter the Unit ID of the controller the Service Tool is connected to and *press* <ENTER>. Once communication is established, “No Communication” will be replaced with “Press Down.” Then *press* <↓>.

NOTE: If “No Communication” remains, it indicates a communication failure to the controller.

One of the following screens will appear:

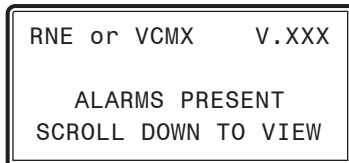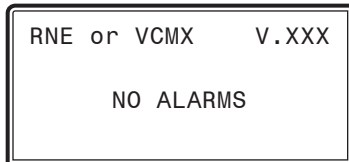

*Press* <↓> to scroll through all the alarms for the controller that the Modular Service Tool is connected to.


To clear any alarms that are found, you must fix the problem indicated in the alarm. Once the problem is fixed, the alarm will clear from the screen the next time the unit is polled.

Modular Service Tool Override Search

When a space sensor with override option is used with any VAV/Zone or Unit Controller, the Modular Service Tool can determine and report any controllers that are currently operating in an override condition on a specific Loop by entering a Loop ID number and then doing a search.

NOTE: When you *press* the <OVERRIDES> button on the Modular Service Tool, it will search only the Loop number that you enter; therefore, you must search each loop individually to access all overrides.



To access the *Overrides Screen*, *press* <OVERRIDES> from the Modular Service Tool’s keypad. A screen will appear asking you to enter the unit ID.

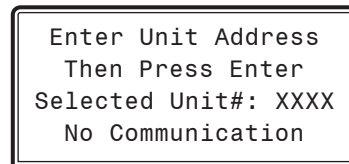

Enter the Unit ID for the MiniLink PD (MLPD) of the loop you wish to search. and *press* <ENTER>. The MLPD is always address 60 on each loop. So the unit ID of any particular MLPD would be the loop number followed by 60. In the example above, Loop 1, address 60 has been entered. Once communication is established, “No Communication” will be replaced with “Press Down.” Then *press* <↓>.

NOTE: If “No Communication” remains, it indicates a communication failure to the controller.

If communications are successful, one of the following screens will appear:

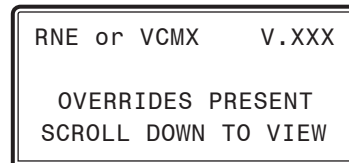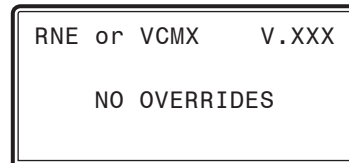

After the Service Tool completes its search, it will post a message to tell you if there are overrides present. If there are overrides, *press* <↓> and all units on the loop will be listed showing ‘Override: Yes or No.’ *Press* <OVERRIDES> again to access overrides on a different loop. Enter the Unit ID of the MLPD of that loop.

## Schedules and Holidays

### Scheduling

You can access the Unit Controller Scheduling Screens by *pressing* <SCHEDULES>. The *Unit Selection Screen* will be displayed.

```

Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
    
```

Enter the Unit ID of the controller the Service Tool is connected to and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

*Press* the <↓> button and then *press* <ENTER> to access the scheduling function you wish to view.

```

RNE Schedule Menu
Schedule Override
Week Schedules
Holidays
    
```

### Week Schedules

Event #1

```

VCM-X Schd
Sunday Event #1
Start Time..: XXXX
Stop Time...: XXXX
    
```

Event #2

```

VCM-X Schd
Sunday Event #2
Start Time..: XXXX
Stop Time...: XXXX
    
```

If you are using the internal scheduling capability of the Unit Controller, set the schedule hours and holiday periods from the menu shown above. You can also force the unit to operate continuously in occupied or unoccupied mode by selecting the Schedule Override menu item and entering the desired command.

If you are using an external contact closure to signal the occupied mode, you must access the *Week Schedule Screens* and set all start and stop times to zero to prevent the internal schedule from turning the equipment on when you don't want it to operate.

The screens will step through the *Start Time* and then the *Stop Time* for each day of the week. You can quit at any point in the process by *pressing* <ESC>. There are two Start/Stop events available per day, so the screen will show which event is being programmed. If you need only one event, keep Event #2's times set at ZERO.

All times are in 24-hour military format, so 5:00 PM would be entered as 1700.

If both the Start and Stop Times are ZERO, the schedule is in a continuous OFF mode. (**Also, use for Remote Forced Occupied applications using the Forced Occupied Binary Input.**)

If both the Start and Stop Times are 2359, the schedule is in a continuous ON mode.

---

NOTE: The second line displays which day of the week is currently being programmed. The day of the week automatically increments as you exit the Event #2 screen for the day and continue to the next day's Event #1 screen.

---



---

CAUTION: The controller ships with all schedules set to zero so that the controller will not attempt to heat or cool before you have configured the system.

---

### Holiday Start/Stop Day Selection

```

VCM-X Hldy
Holiday # 1
Start Mon/Day.: XXXX
[ July 4th = 704 ]
    
```

```

VCM-X Hldy
Holiday # 1
Stop Mon/Day.: XXXX
[ July 5th = 705 ]
    
```

The screens will step through the fourteen possible holidays, one period at a time. Line 2 shows which holiday is currently being programmed. Since a holiday period can encompass more than one day, you need to program the day the holiday starts and the day the holiday ends. If your holiday only lasts one day, simply set both the Start Day and the Stop Day to the same value. Remember to combine the *month and day* into a single four-digit value.

EXAMPLE: 704 = July 4<sup>th</sup> (NOTE: Leading zero not required)  
 1225 = December 25<sup>th</sup>

Holiday Scheduling and Schedule Override

Holiday Start/Stop Times

```
VCM-X Hldy
Holiday Schedule
Start Event #1: XXXX
Stop Event #1: XXXX
```

```
VCM-X Hldy
Holiday Schedule
Start Event #2: XXXX
Stop Event #2: XXXX
```

The fourteen holidays all use the same Start and Stop times which you program on this screen and the next. You must enter the time in 24-hour military format, the same as a regular week schedule.

Normally, the holidays will operate in an unoccupied mode or a reduced schedule mode. There are two start/stop events available on holidays to match the standard schedule number of events.

Schedule Override

```
VCM-X Ovrld
Schedule Override
Enter Override...: X
[0=Auto 1=ON 2=OFF]
```

If you want to force the unit to operate in a continuous Occupied or Unoccupied mode, select this menu item to activate the desired method. If a Schedule Override is active, all other methods of schedule control are ignored (Push-Button, Internal, and Remote).

As you can see on the last line of the display, *enter <1>* to run continuously in the *Occupied Mode* or *<2>* to run continuously in the *Unoccupied Mode*. To restore normal schedule operations, *enter <0>*.

This override remains in effect until canceled and does not time-out like the Output Overrides do after 10 minutes of no communications.

---

NOTE: Do not use the Force OFF mode in place of setting all the week schedules to ZERO if you are using a Remote Signal for your scheduling since the Override has priority over the Remote Signal.

---

## System Manager SD Keys and Buttons

### Operator Interfaces

In order to configure and program the Orion System controllers, you must have an Operator's Interface or a personal computer with the Prism 2 computer front-end software installed. Three different Operator Interfaces are available for programming of the Orion Controls System—the Modular Service Tool SD, the Modular System Manager SD, and/or the System Manager TS II. These devices allow you to access the status and setpoints of the controllers on your communications loop. This manual describes the Modular System Manager SD. If using the Modular Service Tool SD, please see the *Modular Service Tool SD Quick Start Guide*. If using the System Manager TS II, please see the *System Manager TS II Technical Guide*. If using Prism 2, please see the *Prism 2 Technical Guide*.

The Modular System Manager SD allows you to view any input or output status and change any setpoint to fine-tune the operations of the total system. All keypad operations are simple and straightforward, utilizing non-cryptic plain English messages.

### Display Screens & Data Entry Keys

See the chart below for a list of the keypad descriptions and functions.

Keypad Description	Key Function
	Modular System Manager SD
ESC	Use this key to exit from screens or from data entry or to return to the Main Screen from any screen in the system.
ENTER	Use this key to enter a new value.
Clear	If a data entry mistake is made, press this key to clear the data entry field and start over.
Minus	If a setpoint with a negative value is required, press this key for the minus sign.
DEC	Press this key when entering data that requires a decimal point.
← →	Use these keys to change values in the Configuration Screens as prompted.
↑ ↓	Use these keys to step backward or forward through the screens.

**Table 3: Keypad Descriptions**

### Mode Selection Buttons

The Modular System Manager is provided with “Mode Selection Buttons.” These buttons give you instant access to the specific mode desired without having to scroll through several menu screens to get there.

Button Description	Modular System Manager SD
STATUS	Pressing this button takes you directly to the controller “Status” screens.
SETPOINTS	Pressing this button takes you directly to the controller “Setpoints” screens and “Configuration” menu.
SCHEDULES	Pressing this button takes you directly to the controller “Schedules” screens.
OVERRIDES	Pressing this button takes you directly to the controller “Overrides” screen. See the “Override Button” section on <b>page 21</b> for a description of this function. See Notes 1 & 2 below.
ALARMS	Pressing this button takes you directly to the controller “Alarms” screen. See the “Alarms Button” section on <b>page 21</b> for a description of this function. See Notes 1 & 2 below.
<p>Notes:</p> <p>(1) This button only functions when the system is configured for “Network Mode” or “Multiple MGRS Mode.” It will not function in “Stand Alone Mode.”</p> <p>(2) The “Search for Units” function must be performed on the System Manager upon initial system setup before this function will be available. See the “Network Mode &amp; Multiple Managers Loop Search” on <b>page 20</b> of this manual for complete instructions on performing a loop search.</p>	

**Table 4: Button Descriptions**




## Initialization & Setting the Time & Date

### System Manager SD Initialization

#### System Manager SD Initialization Screen and Setup Screens

After connecting the System Manager to the controller with the supplied cable, *press* <ON>. The *Initialization Screen* will appear followed by the *Setup Screens* as shown below. If there is no SD card installed, the second screen will display, "No SD Card Connected! Powering Down!"

NOTE: After exiting these screens, you can access them again by *pressing* <ESC> and then <↵> or by cycling power.

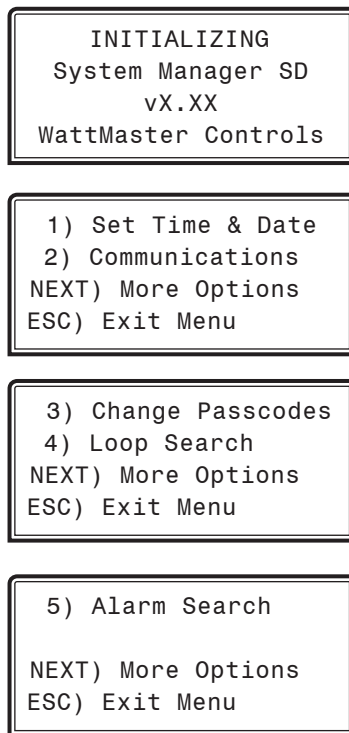

### Setting The Time & Date

The System Manager SD is equipped with a real time clock chip allowing it to maintain the correct time. Once you have programmed the correct time and date, the information is broadcast globally to all controllers on the entire system.

NOTE: A Level 1 or Level 2 User can set the time and date.

NOTE: If you are in a time zone that has daylight savings, you will need to manually adjust the time twice a year.

### Programming the Time

From the *Setup Screen* shown below, *press* <1> on your keypad to access the *Set Time & Date Screens*.

```

1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
    
```

Although the times are displayed on the *Main Screen* in a standard 12-hour format, you must program them using the 24-hour military format. If you configured the Unit Controller to use its own Internal Schedules, the Occupied/Unoccupied modes are calculated on the basis of the current real time clock reading.

The two screens that follow will appear. To scroll through the fields, *press* <↓> or <ENTER>. In order to save a new value, you must *press* <ENTER>.

```

Program Time/Date
Day (Sunday=0): X
Enter Hr. (0-23): XX
Enter Minutes : XX
    
```

**Day** - Enter the Day of the Week (0 to 6)  
Sunday = 0

**Hours (Hr)** - Enter the Hour (0-23) in  
24-Hour Military Format  
(13 = 1:00 PM)

**Minutes** - Enter the Minutes  
(0 to 59)

### Programming the Date

To scroll through the fields, *press* <↓> or <ENTER>. In order to save a new value, you must *press* <ENTER>.

```

Program Time/Date
Month (1-12): XX
Day (1-31): XX
Year (0-99): XX
    
```

**Month** - Enter the Month (1 to 12)

**Day** - Enter the Day of the Month (1 to 31)

**Year** - Enter the current Year (0 to 99)

When you have finished programming the time and date, *press* <ESC> to return to the *Setup Screen*.

## Setting the Operating Mode

### Setting the Operating Mode

The Operating Mode is displayed on the last line of the *Main Screen* as shown below. The factory default setting for the System Manager is **LS (Low Speed) Stand Alone Mode**.

```
System Manager SD
01/16/15 02:21 PM
LS Stand Alone
No Communication
```

The System Manager must be configured for the correct mode of operation for your system. There are 5 modes of operation available for the Orion System—**LS (Low Speed) Stand-Alone, HS (High Speed) Stand-Alone, LS (Low Speed) Network, HS (High Speed) Network, and LS (Low Speed) & HS (High Speed) Multiple MGRS**.

If you are using this System Manager on a communications loop that doesn't have a MiniLink PD or CommLink connected to it and you have a single System Manager on your system, then you need to operate in **LS (Low Speed) Stand-Alone Mode**. If you are using a VCB-X Controller or GPC-XP Controller that is set for high speed, and you don't have a MiniLink PD or CommLink connected to the loop, then you will need to change the setting to **HS (High Speed) Stand Alone Mode**.

If you are using the System Manager on a communications loop and have an installed MiniLink PD or CommLink, you will need to change the setting to **LS (Low Speed) Network Mode**. If you are using a VCB-X Controller or GPC-XP Controller that is set for high speed, and are using a MiniLink PD or CommLink, then you will need to change the setting to **HS (High Speed) Network Mode**.

If you are using this System Manager on a communications loop, have a MiniLink PD or CommLink installed, and have multiple System Managers, then you need to operate in **Multiple MGRS Mode**.

If your display indicates a different mode than the one you need, *press* <2> at the *Setup Screen* shown below. You will have to cycle power to get to this screen or by *pressing* <ESC> and <PREV>.

```
1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
```

The *Passcode Clearance Screen* will appear as shown below.

```
THIS ACTION REQUIRES
A SPECIAL HIGH LEVEL
PASSCODE CLEARANCE
Enter: XXXXXXX
```

Enter the seven digit passcode <2337377> to access the next screen.

You will then see the screen below displayed.

```
Stand Alone Mode
Lo Speed Connection
Use Left/Right Arrow
To Change Selections
```

Press <←> or <→> if you need to change the mode of operation to **LS (Low Speed) Stand-Alone, HS (High Speed) Stand-Alone, LS (Low Speed) Network, HS (High Speed) Network, LS (Low Speed) Multiple Manager or HS (High Speed) Multiple Manager** and then press <ENTER> to save your selection. If you are not using Multiple Manager Mode, *press* <ESC> at the screen below and continue scrolling right and left.

```
Multiple Manager
Unit Address: 0

Press ESC to Exit
```

For **Multiple MGRS Mode**, enter the address at which you want this particular System Manager to be set.

When multiple System Managers are used on a local loop, each must be set with a unique address different from any other device on that loop. You must perform this same operation again for each System Manager installed. If you want one of these System Managers to be able to indicate alarms and overrides for the entire system, you must *select* either **LS** or **HS Network Mode** on that particular System Manager.

Once you have the correct number per the display above displayed, *press* <ENTER>. The following screen will appear telling you that you have changed the system mode:

```
You Have Changed The
System Manager Mode
Press Any Key To
Continue
```

Press any key on the keyboard to exit this screen.

## System Manager Passcodes

Changing the mode of operation, updating software, changing schedules, and changing setpoints and configurations require passcode clearance. The screen below will appear if this action requires passcode clearance.

```
THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
```

The System Manager has three levels of user access. All users can view Status Screens. Level 1 users are limited to changing the Time and Date and Operating Schedules. Level 2 users have complete system access. Any status or setpoint field can be read or reset from the System Manager.

These two levels of passcodes are programmable by any Level 2 user. The default Level 1 passcode is "1111" and the default Level 2 passcode is "2222."

If you wish to change either Level 1 or Level 2 passcodes, please see the instructions that follow.

From the *Main Status Screen*, press <ESC> and then press <PREV>. The following screen will appear:

```
1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
```

Press <↵> for the Next Menu. The following screen will be displayed:

```
3) Change Passcodes
4) Loop Search
NEXT) More Options
ESC) Exit Menu
```

Press <3> for Change Passcodes. The following screen will be displayed:

```
THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
```

Passcodes can only be changed by a Level 2 user. *Enter* the passcode and *press* <ENTER>. The following screen will appear:

```
Enter New Passcode
Level 1.....: XXXX
Level 2.....: XXXX
[Must Be 4 Digits]
```

This screen allows you to enter new Level 1 and/or Level 2 passcodes. Passcodes must always be four digits in length, so the usable range of numbers is 1000 to 9999.

---

**CAUTION:** If you change the Level 2 passcode and cannot remember what it is, you will be locked out of your system!

---

## Loop Search and System Alarm Search

### Network Mode & Multiple Managers Loop Search

When the System Manager is configured for Network Mode, a loop search must initially be performed for the System Manager to recognize alarms or overrides. Also, when you have a system that has multiple System Managers and you have one of the System Managers set to (63) Network Mode for alarm and override indication, you must also perform a loop search for that System Manager. This allows the System Manager to be aware of all alarms and overrides for all local loops on the entire system.

To access the *Loop Search Screen*, from the *Setup Screen Screen*, press <ESC> and then press <PREV>.

```
1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
```

Press <↵> for Next Menu. The following screen will be displayed:

```
3) Change Passcodes
4) Loop Search
NEXT) More Options
ESC) Exit Menu
```

Press <4> for Loop Search. The following screen will be displayed:

```
Loop Search
Current Loop = XX
Loops Found = XX
Searching
```

The System Manager will now proceed to search all loops to find the MiniLink PDs that are connected to the system. The screen will display the current loop being searched and the number of loops currently found.

Once the search is completed, the following screen will be displayed:

```
Loop Search
Finished
Loops Found = XX
Press ESC to Exit
```

The screen will display the number of loops found on your system. The information will be saved into the System Manager's memory. No further loop searches will be required unless you add an additional MiniLink PD to the Network System.

### System Alarm Search

The System Manager can be used to search for all active alarms on the system. You must configure the MiniLink PD to allow for "Alarm Polling" for each controller you want polled for alarms. See the MiniLink PD programming section on **page 75** of this manual for setting information.

This option will alert you of the number of alarms present on individual units, but will not tell you what type of alarm are present. You will have to perform an individual unit alarm search for detailed alarm information.

To access the *Alarm Search Screen*, from the *Setup Screen Screen*, press <ESC> and then press <PREV>.

```
1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
```

Press <↵> for Next Menu. The following screen will be displayed:

```
3) Change Passcodes
4) Loop Search
NEXT) More Options
ESC) Exit Menu
```

Press <↵> for Next Menu. The following screen will be displayed:

```
5) Alarm Search
NEXT) More Options
ESC) Exit Menu
```


Press <5> for Alarm Search. The entire system is searched from this point. The following screen will be displayed:

```
Alarm Screen
SEARCHING!
```

Once the Alarm Search is complete, one of the following screens will display:

```
Alarm Screen
XX ALARMS ON UNIT XX
```

Unit Alarm Search and Override Search

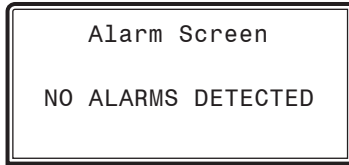


To check controllers individually for alarms, use the <ALARMS> button on the Main Display.

Unit Alarm Search

The System Manager can be used to search for all active alarms one controller at a time.



Press <ALARMS>. The *Unit Selection Screen* below will be displayed.

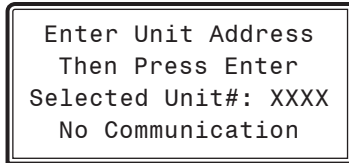

Enter the Unit ID of the controller you wish to search and *press* <ENTER>. Once communication is established, “No Communication” will be replaced with “Press Down.” Then *press* <↓>.

NOTE: If “No Communication” remains, it indicates a communication failure to the controller.

The following screen will appear. The System Manager will search for any active alarms on the unit and one of the following screens will appear:

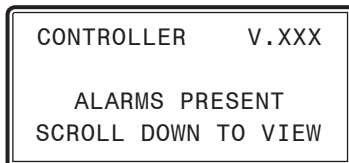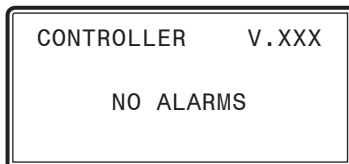

*Press* <↓> to scroll through all the alarms for the controller that the Modular Service Tool is connected to.


To clear any alarms that are found, you must fix the problem indicated in the alarm. Once the problem is fixed, the alarm will clear from the screen the next time the unit is polled.

System Manager Override Search


NOTE: In order for the Override Search to work, a Loop Search must be performed first. See **page 20** for details.

When a space sensor with override option is used with any VAV/Zone Controller or Unit Controller, the System Manager can determine and report any controllers that are currently operating in an override condition. This function requires that a MiniLink PD is installed on each loop where the controllers may be located. The MiniLink PD must be configured to allow for “Alarm Polling” for each controller that Override Polling Enabled is desired for this function to work. See the MiniLink PD programming section on **page 75** of this manual for setting information.

To access the *Space Sensor Overrides Screen*, *press* <OVERRIDES>. The following screen will appear.

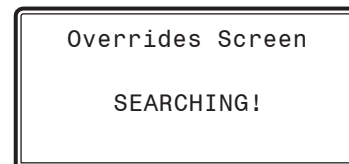

After the System Manager completes its search, it will list the first unit on the system that is currently in the override mode. *Press* the <↓> button to scroll through all units that are in the Override Mode.

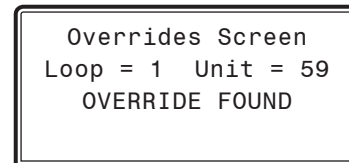

## Schedules and Holidays

### Scheduling

You can access the Controller Scheduling Screens by *pressing* <SCHEDULES>. The screen below will appear because Scheduling requires passcode clearance. A Level 1 or 2 passcode can change schedules.

```
THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
```

If the correct passcode was entered, the *Unit Selection Screen* will be displayed.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the Unit ID of the controller you wish to search and *press* <ENTER>. Once communication is established, “No Communication” will be replaced with “Press Down.” Then *press* <↓>.

---

NOTE: If “No Communication” remains, it indicates a communication failure to the controller.

---

The *Unit Schedule Menu* will be displayed.

```
Schedule Menu
Schedule Override
Week Schedules
Holiday Schedules
```

*Press* the <↓> button until the cursor is on the desired option and then *press* <ENTER>.

### Week Schedules

From the *Unit Schedule Menu*, select Week Schedules. The following two screens will appear in order:

Event #1

```
Schd
Sunday   Event #1
Start Time..: XXXX
Stop Time...: XXXX
```

Event #2

```
Schd
Sunday   Event #2
Start Time..: XXXX
Stop Time...: XXXX
```

If you are using the internal scheduling capability of the Controller, set the schedule hours and holiday periods from the menu shown above. You can also force the unit to operate continuously in occupied or unoccupied mode by selecting the Schedule Override menu item and entering the desired command.

If you are using an external contact closure to signal the occupied mode, you must access the *Week Schedule Screens* and set all start and stop times to zero to prevent the internal schedule from turning the equipment on when you don't want it to operate.

The screens will step through the *Start Time* and then the *Stop Time* for each day of the week. You can quit at any point in the process by *pressing* <ESC>. There are two Start/Stop events available per day, so the screen will show which event is being programmed. If you need only one event, keep Event #2's times set at ZERO.

All times are in 24-hour military format, so 5:00 PM would be entered as 1700.

If both the Start and Stop Times are ZERO, the schedule is in a continuous OFF mode. (**Use for Remote Signal Contact.**)

If both the Start and Stop Times are 2359, the schedule is in a continuous ON mode.

---

NOTE: The second line displays which day of the week is currently being programmed. The day of the week automatically increments as you exit the Event #2 screen for the day and continue to the next day's Event #1 screen.

---

---

CAUTION: The controller ships with all schedules set to zero so that the controller will not attempt to heat or cool before you have configured the system.

---

---

 Holiday Scheduling and Schedule Override
 

---



---

 Holiday Start/Stop Day Selection
 

---

From the *Unit Schedule Menu*, select Holiday Schedules. The following four screens will appear in order:

```

Hldy
Holiday # 1
Start Mon/Day.: XXXX
[ July 4th = 704 ]
  
```

```

Hldy
Holiday # 1
Stop Mon/Day.: XXXX
[ July 5th = 705 ]
  
```

The screens will step through the fourteen possible holidays, one period at a time. Line 2 shows which holiday is currently being programmed. Since a holiday period can encompass more than one day, you need to program the day the holiday starts and the day the holiday ends. If your holiday only lasts one day, simply set both the Start Day and the Stop Day to the same value. Remember to combine the *month and day* into a single four-digit value.

EXAMPLE: 704 = July 4<sup>th</sup>  
 (NOTE: Leading zero not required)  
 1225 = December 25<sup>th</sup>

---

 Holiday Start/Stop Times
 

---

```

Hldy
Holiday Schedule
Start Event #1: XXXX
Stop Event #1: XXXX
  
```

```

Hldy
Holiday Schedule
Start Event #2: XXXX
Stop Event #2: XXXX
  
```

The fourteen holidays all use the same Start and Stop times which you program on this screen and the next. You must enter the time in 24-hour military format, the same as a regular week schedule.

Normally, the holidays will operate in an unoccupied mode or a reduced schedule mode. There are two start/stop events available on holidays to match the standard schedule number of events.

---

 Schedule Override
 

---

From the *Unit Schedule Menu*, select Schedule Override. The following screen will appear:

```

OvrD
Schedule Override
Enter Override...: X
[0=Auto 1=ON 2=OFF]
  
```

If you want to force the unit to operate in a continuous Occupied or Unoccupied mode, select this menu item to activate the desired method. If a Schedule Override is active, all other methods of schedule control are ignored (Push-Button, Internal, and Remote).

As you can see on the last line of the display, *enter <1>* to run continuously in the *Occupied Mode* or *<2>* to run continuously in the *Unoccupied Mode*. To restore normal schedule operations, *enter <0>*.

This override remains in effect until canceled and does not time-out like the Output Overrides do after 10 minutes of no communications.

---

NOTE: Do not use the Force OFF mode in place of setting all the week schedules to ZERO if you are using a Remote Signal for your scheduling since the Override has priority over the Remote Signal.

---

## VCM-X Configuration Screen Index

### VCM-X Configuration Screen Index

NOTE: For RNE Configuration Screens, see **page 34**.

The available Configuration Screens for the VCM-X Controller are listed on the next few pages by sequential screen number. When each VCM-X Controller is configured for the first time, it is best to start with screen #1 and proceed to each screen in numerical order until you have viewed all available Configuration Screens. This ensures that you have seen all the available VCM-X Controller configuration possibilities and have the opportunity to change or accept the defaults for each screen.

Once the unit is configured and you decide to change one of the screen options, it is helpful to know what screen number contains the configuration you wish to change. With this in mind, the following is a list of all the VCM-X Configuration Screens in numerical order with a brief listing of the configuration feature available on each screen.

Screen #1	Duct Static Pressure Control	Screen #24	Type of Head Pressure Module: 1 or 2 Condenser (VCM-X E-BUS)
Screen #2	Supply Fan Cycle Mode	Screen #25	Full Digital Module Installed/WSHP with Multiple Digital Scroll Compressors OR Dual Digital Module/WSHP with Two Digital Scroll Compressors Installed (VCM-X E-BUS)
Screen #3	HVAC Mode Enable	Screen #26	Type of Airflow Station
Screen #4	HVAC Reset Source	Screen #27	Monitor Outdoor Air CFM
Screen #5	Reset Interval Rate	Screen #28	Control Outdoor Air CFM
Screen #6	Dehumidification Control	Screen #29	Outdoor Duct/Damper Size
Screen #7	Dehumidification Priority	Screen #30	Monitor Return Air CFM
Screen #8	Dehumidification Unoccupied	Screen #31	Return Duct/Damper Size
Screen #9	Outdoor Humidity Sensor	Screen #32	Monitor Supply Air CFM
Screen #10	Indoor Humidity Sensor	Screen #33	Supply Duct/Damper Size
Screen #11	Heat During Dehumidify	Screen #34	CO <sub>2</sub> Sensor Output Signal
Screen #12	Economizer Control	Screen #35	CO <sub>2</sub> Sensor Maximum Scale
Screen #13	Title 24 Economizer	Screen #36	Building Pressure Modulating Control
Screen #14	Proof of Flow Input	Screen #37	Building Pressure Reverse Acting
Screen #15	Modulating Cooling/Heating	Screen #38	Building Pressure Output Signal
Screen #16	Modulating Heat Output Signal	Screen #39	Heat Pump Control
Screen #17	Modulating Heat Reverse Acting	Screen #40	Reversing Valve Active For Heat/Cool
Screen #18	Modulating Heat Proportional Window	Screen #41	Emergency Shutdown Input
Screen #19	Modulating Cooling Output Signal	Screen #42	Return Air Bypass Control
Screen #20	Digital Compressor Signal	Screen #43	Broadcast Outdoor Temperature
Screen #21	Modulating Cooling Reverse Acting	Screen #44	Broadcast Outdoor Humidity
Screen #22	Modulating Cool Proportional Window	Screen #45	Broadcast Supply Temperature
Screen #23	Head Pressure Module Installed (VCM-X E-BUS)	Screen #46	Broadcast Status Fan & Heat
		Screen #47	Broadcast Internal Time Clock
		Screen #48	Broadcast Internal Schedule
		Screen #49	Broadcast VAV Boxes Force to Max
		Screen #50	Broadcast VAV Boxes Force to Fixed
		Screen #51	1 HVAC Unit w/Boxes on Multiple Loops
		Screen #52	Unit Uses R410A Refrigerant
		Screen #53	Main Fan Maximum Voltage
		Screen #54	1 Condenser Fan Output per Compressor
		Screen #55	Preheat-X Controller Installed
		Screens #56-59	Cooling & Heating Staging Delays
		Screens #60-79	Relay Configuration Screens



Configuration Screens

In order to correctly set up the VCM-X Controller, you must first configure several parameters in regard to the type of HVAC unit and system you have installed. Most of these values and operating parameters are only set once at the initial system setup and are never changed.

Modular Service Tool SD Instructions

No matter what screen or menu you're in, *press* <CONFIGURATION>. The *Unit Selection Screen* will appear, shown below, requesting that you enter the unit ID number.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the correct unit ID number of the VCM-X Controller you want to configure and then press <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>. You will then see *Unit Configuration Screen #1*. *Press* <ENTER> to save entered data and *press* <↓> to scroll through the screens.

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

System Manager SD Instructions

From any Main screen, *press* <SETPOINTS>. The screen below will appear because this option requires passcode clearance. Only a Level 2 passcode can change setpoints.

```
THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
```

If the correct passcode was entered, the *Unit Selection Screen* will be displayed.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the Unit ID of the controller you wish to change schedules for and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>.

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

The following screen will be displayed:

```
Change Setpoints
Configure Unit
Save/Copy/Restore
```

Scroll down to the 'Configure Unit' option and *press* <ENTER>. This will take you to the first Configuration Screen shown below.

Configuration Screen #1 - Duct Static Pressure

```
VCM-X Cnfg ID 59
Duct Static Pressure
Control: YES
Use < Or > To Change
```

If the HVAC unit has a Supply Fan that delivers a Constant Volume of air, select NO. If the HVAC unit has a Supply Fan that delivers a Variable Volume of Air using a VFD or a Bypass Damper, select YES. Default is YES.

Configuration Screen #2 - Supply Fan Cycle

```
VCM-X Cnfg ID 59
Supply Fan Cycle
Mode: NO
Use < Or > To Change
```

If you want the HVAC unit's Supply Fan to run during Heating, Cooling, or Dehumidification Modes, select YES. If you want the HVAC unit's Supply Fan to run continuously while in the Occupied Mode, regardless of the Heating, Cooling, or Dehumidification Modes, select NO. Default is NO.

## VCM-X Configuration Screens

### Configuration Screen #3 - HVAC Mode Enable

VCM-X Cnfg ID 59  
HVAC Mode Enable  
Supply Air  
Use < Or > To Change

Select the Temperature Sensor that will determine the Heating, Cooling, or Vent Mode of operation. The selections are:

- **Supply Air**  
This is typical for VAV applications. Occupied Cooling with Morning Warm-up.
- **Outdoor Air**  
This is for 100% Outdoor Air (MUA) units. Dehumidification utilizes a Dewpoint Calculation if equipped with an Outdoor Air Humidity Sensor.
- **Space Temperature**  
This is for any unit that conditions a space and is not 100% Outdoor air. Occupied/Unoccupied Heating, Cooling, and Vent Modes of operation.
- **Return Air**  
This selection can be used when an Average Building Temperature (the Return Air Temperature) needs to determine Heating, Cooling, and Vent Modes of operation.
- **Supply Air/Tempering**  
This selection is for VAV “cooling only” applications where because of cold outdoor temperatures, even at minimum damper position, you may need to enable heat to maintain the cooling near its Cooling Supply Air Setpoint. When heat is enabled during this sequence, it will control to a non-adjustable setpoint that is 2°F less than the Cooling Supply Air Setpoint. Includes a Morning Warm-up sequence.

### Configuration Screen #4 - HVAC Reset Source

VCM-X Cnfg ID 59  
HVAC Reset Source  
No Reset  
Use < Or > To Change

The Supply Air Heating and Cooling Temperature Setpoints can be reset using various input sources. Default is No Reset. Select the desired Reset Source for Supply Air Temperature Reset. The Single Zone VAV option should be selected in applications where the Supply Fan VFD speed is reset based on the Space Temperature. If you select No Reset, then neither the Supply Air Setpoint nor the Supply Fan VFD Reset will occur. The selections are:

- **No Reset**
- **Space Sensor**
- **Return Air Sensor**
- **Remote Reset Signal**
- **Fan VFD Percentage**
- **Outdoor Sensor**
- **Single Zone (SZ) VAV**
- **SZ VAV with CV Heating**

### Configuration Screen #5 - Reset Interval Rate

VCM-X Cnfg ID 59  
Reset Interval  
Rate...: 20 s  
[1-255 Seconds]

If you selected Space or Return Air Temperature Reset in Screen #4, enter a value in seconds between 1-255. This value determines how fast the Supply Air Temperature Setpoint is adjusted as the Reset Source changes. Default is 20 seconds.

### Configuration Screen #6 - Dehumidification Control

VCM-X Cnfg ID 59  
Dehumidification  
Control: NO  
Use < Or > To Change

Select YES if your system requires Dehumidification Control. Default is NO.

### Configuration Screen #7 - Dehumidification Priority

VCM-X Cnfg ID 59  
Dehumidification  
Priority: NO  
Use < Or > To Change

Select YES if Dehumidification is a Priority during the Occupied Mode. Priority means that the Cooling stages will activate based on Coil Temperature and Reheat will be used regardless of Heating, Cooling, or Vent Modes of Operation. Default is NO.

### Configuration Screen #8 - Dehumidification Unoccupied

VCM-X Cnfg ID 59  
Dehumidification  
Unoccupied: NO  
Use < Or > To Change

Select YES if Dehumidification is required during the Unoccupied mode. Unoccupied Dehumidification is activated based on Indoor Air Humidity only. Default is NO.

## VCM-X Configuration Screens

### Configuration Screen #9 - Outdoor Humidity Sensor

VCM-X Cnfg ID 59  
Outdoor Humidity  
Sensor: NO  
Use < Or > To Change

Select YES if the HVAC unit is equipped with an Outdoor Air Humidity Sensor. Default is NO.

### Configuration Screen #10 - Indoor Humidity Sensor

VCM-X Cnfg ID 59  
Indoor Humidity  
Sensor: NO  
Use < Or > To Change

Select YES if the HVAC unit is equipped with an Indoor Air Humidity Sensor. Default is NO.

### Configuration Screen #11 - Heat During Dehumidify

VCM-X Cnfg ID 59  
Heat During  
Dehumidify: NO  
Use < Or > To Change

Select YES if your application needs to use unit heat during Dehumidification to supplement Reheat. If Reheat is not available, this selection will allow unit heat to operate in place of Reheat. Default is NO.

### Configuration Screen #12 - Economizer Control

VCM-X Cnfg ID 59  
Economizer  
Control: NO  
Use < Or > To Change

Select YES if the VCM-X is controlling the Economizer. Default is NO.

### Configuration Screen #13 - Title 24 Economizer

VCM-X Cnfg ID 59  
Title 24  
Economizer: NO  
Use < Or > To Change

If this unit has Title 24 Economizer operation, this option should be configured as YES. **Default is NO.**

### Configuration Screen #14 - Proof of Flow Input

VCM-X Cnfg ID 59  
Proof Of Flow  
Input: NO  
Use < Or > To Change

Select YES if the unit is equipped with a Proof of Flow Switch and it is connected to the VCM-X. If selected as YES and the Proof of Flow Switch is open, only the Supply Fan Relay will be active. If any other relays such as Heating Stages or Cooling Stages are active, they will be deactivated when the Proof of Flow Switch input is lost. Default is NO.

### Configuration Screen #15 - Modulating Cooling/ Heating

VCM-X Cnfg ID 59  
Mod Cooling: NO  
Mod Heating: NO  
Use < Or > To Change

Select YES if the HVAC unit is controlling Modulating Heating or Modulating Cooling or both. If your HVAC unit is going to use a Modulating Chilled Water Valve or is equipped with a Digital Compressor, you must select YES for Modulating Cooling. If your HVAC is using a Modulating Hot Water Valve, Modulating Steam Valve, or a SCR Controlled Electric Heater, you must select YES for Modulating Heating. This configuration does not apply to MODGAS using the MODGAS Controller. Default is NO.

### Configuration Screen #16 - Modulating Heating Output Signal

VCM-X Cnfg ID 59  
Mod Heating  
Output Signal.: 0-10V  
Use < Or > To Change

Select 0-10 VDC or 2-10 VDC as the output signal for a Modulating Heat Source such as a Hot Water Valve or SCR Electric Heater. Default is 0-10 VDC.

# VCM-X CONFIGURATION

## VCM-X Configuration Screens

### Configuration Screen #17 - Modulating Heating Reverse Acting

```
VCM-X Cnfg ID 59
Mod Heating
Rev Acting: NO
Use < Or > To Change
```

Select YES if the Modulating Heat Source requires 0 VDC to open and 10 VDC to close. Default is NO.

### Configuration Screen #21 - Modulating Cooling Reverse Acting

```
VCM-X Cnfg ID 59
Mod Cooling
Rev Acting: NO
Use < Or > To Change
```

Select YES if the Modulating Cooling Source requires 0 VDC to open and 10 VDC to close. You cannot use a Reverse Acting Signal if a Digital Compressor is being used. Default is NO.

### Configuration Screen #18 - Modulating Heating Proportional Window

```
VCM-X Cnfg ID 59
Mod Heating
Prop. Window.: 10°F
Time Period...: 5 s
```

The Modulating Heating Proportional Window is the control range of the Modulating Signal above and below the Active Supply Air Setpoint. The larger the Modulating Heating Proportional Window, the smaller the signal adjustment per Time Period will be for each °F the supply air is from the Active Supply Air Temperature Setpoint. The Time Period is the delay before another signal increase or decrease can be made and is user-adjustable. Short Time Periods may cause hunting of the Modulating Signal. Defaults are 10°F and 5 seconds.

### Configuration Screen #22 - Modulating Cooling Proportional Window

```
VCM-X Cnfg ID 59
Mod Cooling
Prop. Window.: 10°F
Time Period...: 30 s
```

The Modulating Cooling Proportional Window is the control range of the Modulating Signal above and below the Active Supply Air Setpoint. The larger the Modulating Cooling Proportional Window, the smaller the signal adjustment per Time Period will be for each °F the supply air is from the Active Supply Air Temperature Setpoint. The Time Period is the delay before another signal increase or decrease can be made and is user-adjustable. Short Time Periods may cause hunting of the Modulating Signal. Defaults are 10°F and 30 seconds.

### Configuration Screen #19 - Modulating Cooling Output Signal

```
VCM-X Cnfg ID 59
Mod Cooling
Output Signal: 0-10V
Use < Or > To Change
```

Select 0-10 VDC as the output signal for a Modulating Cool source such as a Chilled Water Valve. Select 2-10 VDC as the output signal to a Chilled Water Valve. Default is 0-10 VDC.

### Configuration Screen #23 - Head Pressure Module Installed

```
VCMX-M/HP Cnfg ID 102
Head Pressure
Module: NO
Use < Or > To Change
```

Select YES if you have a Head Pressure Module installed. This screen only applies if using the VCM-X E-BUS Controller. Default is NO.

### Configuration Screen #20 - Digital Compressor Signal

```
VCM-X Cnfg ID 59
Digital Compressor
Signal 1-5V : NO
Use < Or > To Change
```

Select YES if the HVAC unit is equipped with a Digital Compressor. Default is NO.

### Configuration Screen #24 - Type of Head Pressure Module Installed

```
VCMX-M/HP Cnfg ID 102
Type of Head Pr.
Module: 1 Condenser
Use < Or > To Change
```

Select 1 Condenser or 2 Condenser if you have a Head Pressure Module installed. This screen only applies if using the VCM-X E-BUS Controller. Default is 1 Condenser.

## VCM-X Configuration Screens

Configuration Screen #25 - Full Digital Module/  
WSHP w/Multiple Digital Scroll  
Compressors OR Dual Digital Module/WSHP  
w/2 Digital Scroll Compressors Installed

VCMX-M/HP Cnfg ID 102  
Full Digital Module  
Installed: NO  
Use < Or > To Change

If a VCM-X E-BUS Controller is being used, this screen will appear. Select YES if you have either a Full Digital Module installed or if you have a Water Source Heat Pump Module installed and in both cases all the compressors in the unit are Digital Scroll Compressors (2 Digital Compressors only or all 4 Digital Compressors). If you have a combination of Digital Compressors and Fixed Compressors, select NO.

VCMX-M/HP Cnfg ID 102  
Dual Digital Module  
Installed: NO  
Use < Or > To Change

If a VCM-X E-BUS Controller is being used, this screen will appear. Select YES if you have a Dual Digital Module installed or if the VCM-X WSHP Controller has two Digital Scroll Compressors.

Configuration Screen #26 - Type of Airflow  
Station

VCM-X Cnfg ID 59  
Airflow Station:  
Paragon  
Use < Or > To Change

Select the type of Airflow Monitoring Station you are using, if any. Selections are Paragon or Ebtron. Choose Ebtron for Greentrol. Default is Paragon.

Configuration Screen #27 - Monitor Outdoor  
Air CFM

VCM-X Cnfg ID 59  
Monitor Outdoor  
Air CFM: NO  
Use < Or > To Change

Select YES if you have an Airflow Monitoring station measuring the CFM of the Outdoor airflow stream of this unit. Default is NO.

Configuration Screen #28 - Control Outdoor  
Air CFM

VCM-X Cnfg ID 59  
Control Outdoor  
Air CFM: NO  
Use < Or > To Change

Select YES if you want to control the Outdoor Air Damper to a CFM setpoint. Default is NO.

Configuration Screen #29 - Outdoor Duct/  
Damper Size

VCM-X Cnfg ID 59  
Outdoor Duct/Damper  
Size: 0.00  
[Area in sq. ft.]

For the controller to properly calculate the outside air CFM you need to enter the inside area (sq. ft.) of the outdoor air duct/damper. When measuring the outdoor air damper area, be sure to measure the inside dimensions of the damper. The more accurate the measurements, the more accurate the CFM reading will be. This value needs to be accurate to 2 decimal places. Default is 0.00.

Configuration Screen #30 - Monitor Return Air  
CFM

VCM-X Cnfg ID 59  
Monitor Return  
Air CFM: NO  
Use < Or > To Change

Select YES if you have an airflow monitoring station measuring the CFM of the return airflow stream of this unit. Default is NO.

Configuration Screen #31 - Return Duct/  
Damper Size

VCM-X Cnfg ID 59  
Return Duct/Damper  
Size: 0.00  
[Area in sq. ft.]

For the controller to properly calculate the return air CFM, you need to enter the area in square feet of the return air duct/damper. When measuring the return air damper area, be sure to measure the inside dimensions of the damper. The more accurate the measurements, the more accurate the CFM reading will be. This value needs to be accurate to 2 decimal places. Default is 0.00.

# VCM-X CONFIGURATION

## VCM-X Configuration Screens

### Configuration Screen #32 - Monitor Supply Air CFM

VCM-X Cnfg ID 59  
Monitor Supply  
Air CFM: NO  
Use < Or > To Change

Select YES if you have an airflow monitoring station measuring the CFM of the supply airflow stream of this unit. Default is NO.

### Configuration Screen #33 - Supply Duct/Damper Size

VCM-X Cnfg ID 59  
Supply Duct/Damper  
Size: 0.00  
[Area in sq. ft.]

For the controller to properly calculate the supply air CFM, you need to *enter* the area in square feet of the supply air duct/damper. When measuring the supply duct damper area, be sure to measure the inside dimensions of the damper. The more accurate the measurements, the more accurate the CFM reading will be. This value needs to be accurate to 2 decimal places. Default is 0.00.

### Configuration Screen #34 - CO<sub>2</sub> Sensor Output Signal

VCM-X Cnfg ID 59  
CO<sub>2</sub> Sensor  
Output Signal: None  
Use < Or > To Change

The VCM-X needs to know what type of CO<sub>2</sub> sensor signal output is being provided. Select either 0-10 VDC (standard sensor used) or 4-20 mA as the CO<sub>2</sub> sensor signal. Select None if no CO<sub>2</sub> sensor is used. Default is None.

### Configuration Screen #35 - CO<sub>2</sub> Sensor Maximum Scale

VCM-X Cnfg ID 59  
CO<sub>2</sub> Sensor Maximum  
Scale: 2000 PPM  
Enter 0 If No Sensor

The VCM-X needs to know the CO<sub>2</sub> Sensor scaling for proper reading of the CO<sub>2</sub> Sensor output. The Standard CO<sub>2</sub> Sensor should be scaled to 2000 PPM. Select None if no CO<sub>2</sub> sensor is used. Default is 2000 PPM.

### Configuration Screen #36 - Building Pressure Modulating Control

VCM-X Cnfg ID 59  
Building Pressure  
Mod Control: NO  
Use < Or > To Change

Select YES if Modulating Building Pressure Control is needed. Modulating Building Pressure Control is used for a VFD Exhaust Fan or a Modulating Exhaust Fan Damper Actuator for Direct Acting Building Pressure Control. Modulating Building Pressure Control is also used for a modulating outdoor air damper actuator for Reverse Acting Building Pressure Control. Select NO if Modulating Building Pressure Control is not needed when using a Constant Volume Exhaust Fan for On/Off Control. Default is NO.

### Configuration Screen #37 - Building Pressure Reverse Acting

VCM-X Cnfg ID 59  
Building Pressure  
Rev Acting: NO  
Use < Or > To Change

Select YES if Reverse Acting Building Pressure control is needed. Reverse Acting Building Pressure Control can either be On/Off or Modulating Control. Modulating Control is normally used for this configuration. On a drop in Building Pressure, below the Building Static Pressure Setpoint, the Outdoor Air Damper will modulate open to increase pressure. Default is NO.

### Configuration Screen #38 - Building Pressure Output Signal

VCM-X Cnfg ID 59  
Building Pressure  
Output Signal: 0-10V  
Use < Or > To Change

This Screen is used to configure the Building Pressure Output Signal voltage needed for your application. Select either a 0-10 VDC signal (default) or a 2-10 VDC signal as required by the device you are using to control the pressure. Default is 0-10 VDC.

### Configuration Screen #39 - Heat Pump Control

VCM-X Cnfg ID 59  
Heat Pump  
Control: NO  
Use < Or > To Change

Select YES if the HVAC unit is a Heat Pump. Default is NO.

## VCM-X Configuration Screens

### Configuration Screen #40 - Reversing Valve Active During Heat/Cool

VCM-X Cnfg ID 59  
Rev. Valve Active  
For: Heat  
Use < Or > To Change

Select Heat if your Heat Pump unit activates its Reversing Valve during Heating operation. Select Cool if your Heat Pump unit activates its Reversing Valve during Cooling operation. Default is Heat.

### Configuration Screen #41 - Emergency Shutdown Input

VCM-X Cnfg ID 59  
Emergency Shutdown  
Input: NO  
Use < Or > To Change

Select YES if a Smoke Detector/Firestat or other Emergency Shutdown input is connected to the binary input. If the Emergency Shutdown input is active, the Supply Fan, Heating and Cooling Relay Outputs will be disabled. Default is NO.

### Configuration Screen #42 - Return Air Bypass Control

VCM-X Cnfg ID 59  
Return Air Bypass  
Control: NO  
Use < Or > To Change

Select YES if your HVAC unit requires Return Air Bypass Control for Dehumidification Reheat. Default is NO.

### Configuration Screen #43 - Broadcast OA Temp

VCM-X Cnfg ID 59  
Broadcast Outdoor  
Temperature: NO  
Use < Or > To Change

The VCM-X can broadcast its Outdoor Air Temperature Reading to other HVAC units if they are not equipped with their own Outdoor Air Temperature sensors. A network communications device is needed in order for this feature to operate. Select YES to Broadcast Outdoor Temperature. Default is NO.

### Configuration Screen #44 - Broadcast OA Humidity

VCM-X Cnfg ID 59  
Broadcast Outdoor  
Humidity: NO  
Use < Or > To Change

The VCM-X can broadcast its Outdoor Air Humidity reading to other HVAC units if they are not equipped with their own Outdoor Air Humidity sensors. A network communications device is required in order for this feature to operate. Select YES to Broadcast Outdoor Humidity. Default is NO.

### Configuration Screen #45 - Broadcast Supply Temperature

VCM-X Cnfg ID 59  
Broadcast Supply  
Temperature: YES  
Use < Or > To Change

This broadcast sends the VCM-X's Supply Air Temperature to all controllers on its local loop. This broadcast needs to be configured on a VAV or Zoning System using the VCM-X with Orion VAV/Zone Controllers. A network communications device is required in order for this feature to operate. Select YES to Broadcast Supply Temperature. Default is YES.

### Configuration Screen #46 - Broadcast Status Fan & Heat

VCM-X Cnfg ID 59  
Broadcast Status  
Fan & Heat: NO  
Use < Or > To Change

This broadcast sends the VCM-X's Supply Fan and Heating Status to all controllers on its local loop. This broadcast needs to be configured on a VAV or Zoning System using the VCM-X with Orion VAV/Zone Controllers. A network communications device is required in order for this feature to operate. Select YES to Broadcast Status Fan & Heat. Default is NO.

## VCM-X Configuration Screens

### Configuration Screen #47 - Broadcast Internal Time Clock

VCM-X Cnfg ID 59  
Broadcast Internal  
Time Clock: NO  
Use < Or > To Change

This broadcast sends the time from the VCM-X's Internal Time Clock to all controllers on its local loop. This broadcast needs to be configured on a VAV or Zoning System using the VCM-X with Orion VAV/Zone controllers. A network communications device is required in order for this feature to operate, but can also be used to synchronize all controllers on the local loop. Select YES to Broadcast Internal Time Clock. Default is NO.

### Configuration Screen #48 - Broadcast Internal Schedule

VCM-X Cnfg ID 59  
Broadcast Internal  
Schedule: NO  
Use < Or > To Change

This is always required when you have VAV/Zone controllers connected to this VCM-X Controller. This will broadcast the Occupied and Unoccupied Condition of the VCM-X Controller to all VAV/Zone controllers on the local loop. Select YES to Broadcast Internal Schedule. Default is NO.

### Configuration Screen #49 - Broadcast VAV Boxes Force to Max

VCM-X Cnfg ID 59  
Broadcast VAV Boxes  
Force To Max: NO  
Use < Or > To Change

This broadcast is to ensure the VAV/Zone Controllers will drive their dampers to the Max Airflow Damper Position during Morning Warm-up. This is important to allow the proper amount of airflow for Heating in the HVAC unit. Select YES to Broadcast VAV Boxes Force to Max. Default is NO.

### Configuration Screen #50 - Broadcast VAV Boxes Force to Fixed

VCM-X Cnfg ID 59  
Broadcast VAV Boxes  
Force To Fixed: NO  
Use < Or > To Change

Select YES to have all VAV/Zone controllers connected to this VCM-X Controller forced to their "Fixed Airflow" Position during the Morning Warm-up Mode of operation. See the VAV/Zone Controller Setpoint Screens for setting of the "Fixed Airflow" position. Default is NO.

### Configuration Screen #51 - 1 HVAC Unit with Boxes on Multiple Loops

VCM-X Cnfg ID 59  
1 HVAC Unit w/ Boxes  
On Multi. Loops: NO  
Use < Or > To Change

Select YES to have all broadcasts that have been configured on Configuration Screens 43 through 48 sent to all local loops on the entire system, not just the local loop the VCM-X Controller is on. This is normally only required if you have a large HVAC unit that requires more than the 58 VAV/Zone Controllers normally allowed on the local loop. This allows other VAV/Zone Controllers connected on additional local loops to receive the required broadcasts. This only is allowed when you have a single VCM-X Controller with VAV/Zone Controllers on multiple loops. Other VCM-X or add-on devices may be connected but no other VCM-X with VAV/Zone Controllers can be connected on the system. Default is NO.

### Configuration Screen #52 - Uses R410A Refrigerant

VCM-X Cnfg ID 59  
Unit Uses R410A  
Refrigerant: NO  
Use < Or > To Change

Select YES if your HVAC unit uses R410A Refrigerant. Default is NO.

### Configuration Screen #53 - Main Fan Maximum Voltage

VCM-X Cnfg ID 59  
Max Main Fan Aout  
Voltage: 10.0 VDC  
[ 0 VDC - 10 VDC ]

Enter a value between 0.0 and 10.0 VDC for the main fan's maximum output voltage. The *Static Pressure and Output % Status Screen* will display 0% to 100%, but the output will range from 0 VDC to the value set in this screen. Default is 10.0 VDC.

This screen will appear if using a VCM-X E-BUS Controller.



VCM-X Configuration Screens

Configuration Screen #54 - One Condenser Fan Output Per Compressor

VCM-X Cnfg ID 59  
1 C-Fan Output Per Compressor: NO

Select YES if your HVAC unit is using 1 Condenser Fan output per Compressor. Default is NO.

Configuration Screen #55 - PREHEAT-X Controller Installed

VCBX Cnfg ID 101  
Preheat-X Module Installed: NO  
Use < Or > To Change

If you have a PREHEAT-X Controller installed, this configuration option should be configured as YES. Default is NO.

Configuration Screens #56-59 - Cooling & Heating Stage Delays

VCM-X Cnfg ID 59  
Cooling Stage Delays  
Staging Up...: 3 Min  
Staging Down : 1 Min

VCM-X Cnfg ID 59  
Cooling Stage Delays  
Min Run Time: 5 Min  
Min Off Time: 3 Min

VCM-X Cnfg ID 59  
Heating Stage Delays  
Staging Up...: 3 Min  
Staging Down : 1 Min

VCM-X Cnfg ID 59  
Heating Stage Delays  
Min Run Time: 2 Min  
Min Off Time: 1 Min

Both the Heating Stages and the DX Cooling Stages utilize **Staging Up** and **Down** Delay Periods between stages and **Minimum Run** Times and **Off** Times.

Both modes have their own set of Staging and Run Delay Times. The Heating Timer Screens look exactly the same as the Cooling Timer Screens except they reference the Heating settings instead of the Cooling settings.

See the *Sequence of Operation Manual* for information on how these Delays and Run Times are used.

Description	Minimum	Default	Maximum
Cooling Stage Up	3 Min	3 Min	15 Min
Cooling Stage Down	1 Min	1 Min	15 Min
Cooling Min Run Time	5 Min	5 Min	15 Min
Cooling Min Off Time	3 Min	3 Min	15 Min
Heating Stage Up	3 Min	3 Min	15 Min
Heating Stage Down	1 Min	1 Min	15 Min
Heating Min Run Time	2 Min	2 Min	15 Min
Heating Min Off Time	1 Min	1 Min	15 Min

Configuration Screens #60-79 - Relay Configuration Screens

VCM-X Cnfg ID 59  
Relay Configurations  
Rly xx: Not Used  
Use < Or > To Change

Relay #1 is not configurable as it is reserved for the Supply Air Fan. Relays #2-#21 are configurable for the following options:

- Not Used
- Heat Stage
- Cool Stage
- Warmup Mode
- Rev Valve
- HGR
- Exhaust Fan
- Pre-Heater
- Alarm
- Override
- Occupied
- OA Damper
- Heat Wheel
- Emerg. Heat

Relays #2 through #21 can be individually configured. By using the 4 relay outputs available on the VCM-X Controller, the 4 relays on the VCM-X Expansion Module, and the 12 relays on the 12 Relay Expansion Module, you have the ability to configure up to a combined total of 20 Heating Stages, Cooling Stages, and the rest of the options listed above. Only the Heating and Cooling relays can be configured with multiple outputs. If any other option is selected more than once, it will simply activate redundant relays, but no multiple staging will occur. Default is "Not Used."

## RNE Configuration Screen Index

### RNE Configuration Screen Index

NOTE: For VCM-X Configuration Screens, see **page 24**.

The available Configuration Screens for the RNE Controller are listed on the next few pages by sequential screen number. When each RNE Controller is configured for the first time, it is best to start with screen #1 and proceed to each screen in numerical order until you have viewed all available Configuration Screens. This ensures that you have seen all the available RNE Controller configuration possibilities and have the opportunity to change or accept the defaults for each screen.

Once the unit is configured and you decide to change one of the screen options, it is helpful to know what screen number contains the configuration you wish to change. With this in mind, the following is a list of all the RNE Controller Configuration Screens in numerical order with a brief listing of the configuration feature available on each screen.

Screen #1	Duct Static Pressure Control	Screen #23	Modulating Cool Proportional Window
Screen #2	Supply Fan Cycle Mode	Screen #24	Head Pressure Module Installed
Screen #3	HVAC Mode Enable	Screen #25	Type of Head Pressure Module: 1 or 2 Condenser
Screen #4	HVAC Reset Source	Screen #26	Airflow Monitoring Station
Screen #5	Reset Interval Rate	Screen #27	Monitor Outdoor Air CFM
Screen #6	Dehumidification Control	Screen #28	Control Outdoor Air CFM
Screen #7	Dehumidification Priority	Screen #29	Outdoor Duct/Damper Size
Screen #8	Dehumidification Unoccupied	Screen #30	Monitor Return Air CFM
Screen #9	Outdoor Humidity Sensor	Screen #31	Return Duct/Damper Size
Screen #10	Indoor Humidity Sensor	Screen #32	Monitor Supply Air CFM
Screen #11	Heat During Dehumidify	Screen #33	Supply Duct/Damper Size
Screen #12	Economizer Control	Screen #34	CO <sub>2</sub> Sensor Output Signal
Screen #13	Title 24 Economizer	Screen #35	CO <sub>2</sub> Sensor Maximum Scale
Screen #14	Proof of Flow Input	Screen #36	Building Pressure Modulating Control
Screen #15	Modulating Heating	Screen #37	Building Pressure Reverse Acting
Screen #16	Modulating Heat Output Signal	Screen #38	Building Pressure Output Signal
Screen #17	Modulating Heat Reverse Acting	Screen #39	Air to Air Heat Pump Control
Screen #18	Modulating Heat Proportional Window	Screen #40	Reversing Valve Active For Heat/Cool
Screen #19	Modulating Cooling Type	Screen #41	Emergency Shutdown Input
Screen #20	RNE Tonnage	Screen #42	Return Air Bypass Control
Screen #21	Water Source Heat Pump Installed	Screen #43	Broadcast Outdoor Temperature
Screen #22	Modulating Cooling Reverse Acting	Screen #44	Broadcast Outdoor Humidity
		Screen #45	Broadcast Supply Temperature
		Screen #46	Broadcast Status Fan & Heat
		Screen #47	Broadcast Internal Time Clock
		Screen #48	Broadcast Internal Schedule
		Screen #49	Broadcast VAV Boxes Force to Max
		Screen #50	Broadcast VAV Boxes Force to Fixed
		Screen #51	1 HVAC Unit w/Boxes on Multiple Loops
		Screen #52	Unit Uses R410A Refrigerant
		Screen #53	Main Fan Maximum Voltage
		Screens #54-57	Cooling & Heating Staging Delays
		Screens #58-77	Relay Configuration Screens

### Configuration Screens

In order to correctly set up the RNE Controller, you must first configure several parameters in regard to the type of HVAC unit and system you have installed. Most of these values and operating parameters are only set once at the initial system setup and are never changed.

#### Modular Service Tool SD Instructions

No matter what screen or menu you're in, *press* <CONFIGURATION>. The *Unit Selection Screen* will appear, shown below, requesting that you enter the unit ID number.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

*Enter* the correct unit ID number of the RNE Controller you want to configure and then *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>. You will then see *Unit Configuration Screen #1*. *Press* <ENTER> to save entered data and *press* <↓> to scroll through the screens.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

#### System Manager SD Instructions

From any Main screen, *press* <SETPOINTS>. The screen below will appear because this option requires passcode clearance. Only a Level 2 passcode can change setpoints.

```
THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
```

If the correct passcode was entered, the *Unit Selection Screen* will be displayed.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the Unit ID of the controller you wish to change schedules for and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

The following screen will be displayed:

```
Change Setpoints
Configure Unit
Save/Copy/Restore
```

Scroll down to the 'Configure Unit' option and *press* <ENTER>. This will take you to the first Configuration Screen shown below.

---

#### Configuration Screen #1 - Duct Static Pressure

---

```
RNE Cnfg ID 101
Duct Static Pressure
Control: YES
Use < Or > To Change
```

If the HVAC unit has a Supply Fan that delivers a Constant Volume of air, select NO. If the HVAC unit has a Supply Fan that delivers a Variable Volume of Air using a VFD or a Bypass Damper, select YES. Default is YES.

---

#### Configuration Screen #2 - Supply Fan Cycle

---

```
RNE Cnfg ID 101
Supply Fan Cycle
Mode: NO
Use < Or > To Change
```

If you want the HVAC unit's Supply Fan to run during Heating, Cooling, or Dehumidification Modes, select YES. If you want the HVAC unit's Supply Fan to run continuously while in the Occupied Mode, regardless of the Heating, Cooling, or Dehumidification Modes, select NO. Default is NO.

# RNE CONFIGURATION

## RNE Configuration Screens

### Configuration Screen #3 - HVAC Mode Enable

RNE Cnfg ID 101  
HVAC Mode Enable  
Supply Air  
Use < Or > To Change

Select the Temperature Sensor that will determine the Heating, Cooling, or Vent Mode of operation. The selections are:

- **Supply Air**  
This is typical for VAV applications. Occupied Cooling with Morning Warm-up.
- **Outdoor Air**  
This is for 100% Outdoor Air (MUA) units. Dehumidification utilizes a Dewpoint Calculation if equipped with an Outdoor Air Humidity Sensor.
- **Space Temperature**  
This is for any unit that conditions a space and is not 100% Outdoor air. Occupied/Unoccupied Heating, Cooling, and Vent Modes of operation.
- **Return Air**  
This selection can be used when an Average Building Temperature (the Return Air Temperature) needs to determine Heating, Cooling, and Vent Modes of operation.
- **Supply Air/Tempering**  
This selection is for VAV “cooling only” applications where because of cold outdoor temperatures, even at minimum damper position, you may need to enable heat to maintain the cooling near its Cooling Supply Air Setpoint. When heat is enabled during this sequence, it will control to a non-adjustable setpoint that is 2°F less than the Cooling Supply Air Setpoint. Includes a Morning Warm-up sequence.

### Configuration Screen #4 - HVAC Reset Source

RNE Cnfg ID 101  
HVAC Reset Source  
No Reset  
Use < Or > To Change

The Supply Air Heating and Cooling Temperature Setpoints can be reset using various input sources. Default is No Reset. Select the desired Reset Source for Supply Air Temperature Reset. The Single Zone VAV option should be selected in applications where the Supply Fan VFD speed is reset based on the Space Temperature. If you select No Reset, then neither the Supply Air Setpoint nor the Supply Fan VFD Reset will occur. The selections are:

- **No Reset**
- **Space Sensor**
- **Return Air Sensor**
- **Remote Reset Signal**
- **Fan VFD Percentage**
- **Outdoor Sensor**
- **Single Zone (SZ) VAV**
- **SZ VAV with CV Heating**

### Configuration Screen #5 - Reset Interval Rate

RNE Cnfg ID 101  
Reset Interval  
Rate...: 20 s  
[1-255 Seconds]

If you selected Space or Return Air Temperature Reset in Screen #4, enter a value in seconds between 1-255. This value determines how fast the Supply Air Temperature Setpoint is adjusted as the Reset Source changes. Default is 20 seconds.

### Configuration Screen #6 - Dehumidification Control

RNE Cnfg ID 101  
Dehumidification  
Control: NO  
Use < Or > To Change

Select YES if your system requires Dehumidification Control. Default is NO.

### Configuration Screen #7 - Dehumidification Priority

RNE Cnfg ID 101  
Dehumidification  
Priority: NO  
Use < Or > To Change

Select YES if Dehumidification is a Priority during the Occupied Mode. Priority means that the Cooling stages will activate based on Coil Temperature and Reheat will be used regardless of Heating, Cooling, or Vent Modes of Operation. Default is NO.

### Configuration Screen #8 - Dehumidification Unoccupied

RNE Cnfg ID 101  
Dehumidification  
Unoccupied: NO  
Use < Or > To Change

Select YES if Dehumidification is required during the Unoccupied mode. Unoccupied Dehumidification is activated based on Indoor Air Humidity only. Default is NO.

## RNE Configuration Screens

### Configuration Screen #9 - Outdoor Humidity Sensor

RNE Cnfg ID 101  
Outdoor Humidity  
Sensor: NO  
Use < Or > To Change

Select YES if the HVAC unit is equipped with an Outdoor Air Humidity Sensor. Default is NO.

### Configuration Screen #10 - Indoor Humidity Sensor

RNE Cnfg ID 101  
Indoor Humidity  
Sensor: NO  
Use < Or > To Change

Select YES if the HVAC unit is equipped with an Indoor Air Humidity Sensor. Default is NO.

### Configuration Screen #11 - Heat During Dehumidify

RNE Cnfg ID 101  
Heat During  
Dehumidify: NO  
Use < Or > To Change

Select YES if your application needs to use unit heat during Dehumidification to supplement Reheat. If Reheat is not available, this selection will allow unit heat to operate in place of Reheat. Default is NO.

### Configuration Screen #12 - Economizer Control

RNE Cnfg ID 101  
Economizer  
Control: NO  
Use < Or > To Change

Select YES if the RNE is controlling the Economizer. Default is NO.

### Configuration Screen #13 - Title 24 Economizer

RNE Cnfg ID 101  
Title 24  
Economizer: NO  
Use < Or > To Change

If this unit has Title 24 Economizer operation, this option should be configured as YES. **Default is NO.**

### Configuration Screen #14 - Proof of Flow Input

RNE Cnfg ID 101  
Proof Of Flow  
Input: NO  
Use < Or > To Change

Select YES if the unit is equipped with a Proof of Flow Switch and it is connected to the RNE. If selected as YES and the Proof of Flow Switch is open, only the Supply Fan Relay will be active. If any other relays such as Heating Stages or Cooling Stages are active, they will be deactivated when the Proof of Flow Switch input is lost. Default is NO.

### Configuration Screen #15 - Modulating Heating

RNE Cnfg ID 101  
Mod Heating: NO  
Use < Or > To Change

Select YES if the HVAC unit is controlling Modulating Heating. If your HVAC is using a Modulating Hot Water Valve, Modulating Steam Valve, or a SCR Controlled Electric Heater, you must select YES for Modulating Heating. **This configuration does not apply to MODGAS using the MODGAS II Controller.** Default is NO.

### Configuration Screen #16 - Modulating Heating Output Signal

RNE Cnfg ID 101  
Mod Heating  
Output Signal.: 0-10V  
Use < Or > To Change

Select 0-10 VDC or 2-10 VDC as the signal for a Modulating Heat Source such as a Hot Water Valve or SCR Electric Heater. Default is 0-10 VDC.

### Configuration Screen #17 - Modulating Heating Reverse Acting

RNE Cnfg ID 101  
Mod Heating  
Rev Acting: NO  
Use < Or > To Change

Select YES if the Modulating Heat Source requires 0 VDC to open and 10 VDC to close. Default is NO.

# RNE CONFIGURATION

## RNE Configuration Screens

### Configuration Screen #18 - Modulating Heating Proportional Window

RNE Cnfg ID 101  
Mod Heating  
Prop. Window.: 10°F  
Time Period...: 5 s

The Modulating Heating Proportional Window is the control range of the Modulating Signal above and below the Active Supply Air Setpoint. The larger the Modulating Heating Proportional Window, the smaller the signal adjustment per Time Period will be for each °F the supply air is from the Active Supply Air Temperature Setpoint. The Time Period is the delay before another signal increase or decrease can be made and is user-adjustable. Short Time Periods may cause hunting of the Modulating Signal. Defaults are 10°F and 5 seconds.

### Configuration Screen #19 - Modulating Cooling Type

RNE Cnfg ID 101  
Mod Cooling Type  
None  
Use < Or > To Change

Select the desired Modulating Cooling Type. Default is None. The selections are:

- None
- VFD Half
- VFD Full
- 0-10 VDC CW
- 2-10 VDC CW

### Configuration Screen #20 - RNE Tonnage

RNE Cnfg ID 101  
RNE Tonnage  
55-75 Tons  
Use < Or > To Change

Select the desired Tonnage. Default is 55-75 Tons. The selections are:

- 55-75 Tons
- 95-105 Tons
- 120-140 Tons

### Configuration Screen #21 - Water Source Heat Pump Installed

RNE Cnfg ID 101  
Water Source  
Heat Pump: NO  
Use < Or > To Change

Select YES if this is a Water Source Heat Pump. Default is NO.

### Configuration Screen #22 - Modulating Cooling Reverse Acting

RNE Cnfg ID 101  
Mod Cooling  
Rev Acting: NO  
Use < Or > To Change

Select YES if the Modulating Cooling Source requires 0 VDC to open and 10 VDC to close. You cannot use a Reverse Acting Signal if a VFD Compressor is being used. Default is NO.

### Configuration Screen #23 - Modulating Cooling Proportional Window

RNE Cnfg ID 101  
Mod Cooling  
Prop. Window.: 10°F  
Time Period...: 30 s

The Modulating Cooling Proportional Window is the control range of the Modulating Signal above and below the Active Supply Air Setpoint. The larger the Modulating Cooling Proportional Window, the smaller the signal adjustment per Time Period will be for each °F the supply air is from the Active Supply Air Temperature Setpoint. The Time Period is the delay before another signal increase or decrease can be made and is user-adjustable. Short Time Periods may cause hunting of the Modulating Signal. Defaults are 10°F and 30 seconds.

### Configuration Screen #24 - Head Pressure Module Installed

RNE Cnfg ID 101  
Head Pressure  
Module: NO  
Use < Or > To Change

Select YES if you have a Head Pressure Module installed. Default is NO.

### Configuration Screen #25 - Type of Head Pressure Module Installed

RNE Cnfg ID 101  
Type of Head Pr.  
Module: 1 Condenser  
Use < Or > To Change

Select 1 Condenser or 2 Condenser if you have a Head Pressure Module installed. Default is 1 Condenser.

## RNE Configuration Screens

### Configuration Screen #26 - Type of Airflow Station

RNE Cnfg ID 101  
Airflow Station:  
Paragon  
Use < Or > To Change

Select the type of Airflow Monitoring Station you are using, if any. Selections are Paragon or Ebtron. Default is Paragon.

### Configuration Screen #27 - Monitor Outdoor Air CFM

RNE Cnfg ID 101  
Monitor Outdoor  
Air CFM: NO  
Use < Or > To Change

Select YES if you have an Airflow Monitoring station measuring the CFM of the Outdoor airflow stream of this unit. Default is NO.

### Configuration Screen #28 - Control Outdoor Air CFM

RNE Cnfg ID 101  
Control Outdoor  
Air CFM: NO  
Use < Or > To Change

Select YES if you want to control the Outdoor Air Damper to a CFM setpoint. Default is NO.

### Configuration Screen #29 - Outdoor Duct/Damper Size

RNE Cnfg ID 101  
Outdoor Duct/Damper  
Size: 0.00  
[Area in sq. ft.]

For the Controller to properly calculate the outside air CFM you need to *enter* the inside area (sq. ft.) of the outdoor air duct/damper. When measuring the outdoor air damper area, be sure to measure the inside

dimensions of the damper. The more accurate the measurements, the more accurate the CFM reading will be. This value needs to be accurate to 2 decimal places. Default is 0.00.

### Configuration Screen #30 - Monitor Return Air CFM

RNE Cnfg ID 101  
Monitor Return  
Air CFM: NO  
Use < Or > To Change

Select YES if you have an airflow monitoring station measuring the CFM of the return airflow stream of this unit. Default is NO.

### Configuration Screen #31 - Return Duct/Damper Size

RNE Cnfg ID 101  
Return Duct/Damper  
Size: 0.00  
[Area in sq. ft.]

For the Controller to properly calculate the return air CFM, you need to *enter* the area in square feet of the return air duct/damper. When measuring the return air damper area, be sure to measure the inside dimensions of the damper. The more accurate the measurements, the more accurate the CFM reading will be. This value needs to be accurate to 2 decimal places. Default is 0.00.

### Configuration Screen #32 - Monitor Supply Air CFM

RNE Cnfg ID 101  
Monitor Supply  
Air CFM: NO  
Use < Or > To Change

Select YES if you have an airflow monitoring station measuring the CFM of the supply airflow stream of this unit. Default is NO.

### Configuration Screen #33 - Supply Duct/Damper Size

RNE Cnfg ID 101  
Supply Duct/Damper  
Size: 0.00  
[Area in sq. ft.]

For the Controller to properly calculate the supply air CFM, you need to *enter* the area in square feet of the supply air duct/damper. When measuring the supply duct damper area, be sure to measure the inside dimensions of the damper. The more accurate the measurements, the more accurate the CFM reading will be. This value needs to be accurate to 2 decimal places. Default is 0.00.

# RNE CONFIGURATION

## RNE Configuration Screens

### Configuration Screen #34 - CO<sub>2</sub> Sensor Output Signal

RNE Cnfg ID 101  
CO2 Sensor  
Output Signal: None  
Use < Or > To Change

The RNE needs to know what type of CO<sub>2</sub> sensor signal output is being provided. Select a 0-10 VDC CO<sub>2</sub> sensor signal (standard sensor used) or a 4-20 mA CO<sub>2</sub> sensor signal. Select None if no CO<sub>2</sub> sensor is used. Default is None.

### Configuration Screen #35 - CO<sub>2</sub> Sensor Maximum Scale

RNE Cnfg ID 101  
CO2 Sensor Maximum  
Scale: 2000 PPM  
Use < Or > To Change

Default is 2000 PPM. The RNE needs to know the CO<sub>2</sub> Sensor scaling for proper reading of the CO<sub>2</sub> Sensor output. The Standard CO<sub>2</sub> Sensor should be scaled to 2000 PPM. Select None if no CO<sub>2</sub> sensor is used. Default is 2000 PPM.

### Configuration Screen #36 - Building Pressure Modulating Control

RNE Cnfg ID 101  
Building Pressure  
Mod Control: NO  
Use < Or > To Change

Select YES if Modulating Building Pressure Control is needed. Modulating Building Pressure Control is used for a VFD Exhaust Fan or a Modulating Exhaust Fan Damper Actuator for Direct Acting Building Pressure Control. Modulating Building Pressure Control is also used for a modulating outdoor air damper actuator for Reverse Acting Building Pressure Control. Select NO if Modulating Building Pressure Control is not needed when using a Constant Volume Exhaust Fan for On/Off Control. Default is NO.

### Configuration Screen #37 - Building Pressure Reverse Acting

RNE Cnfg ID 101  
Building Pressure  
Rev Acting: NO  
Use < Or > To Change

Select YES if Reverse Acting Building Pressure control is needed. Reverse Acting Building Pressure Control can either be On/Off or Modulating Control. Modulating Control is normally used for this configuration. On a drop in Building Pressure, below the Building Static Pressure Setpoint, the Outdoor Air Damper will modulate open to increase pressure. Default is NO.

### Configuration Screen #38 - Building Pressure Output Signal

RNE Cnfg ID 101  
Building Pressure  
Output Signal: 0-10V  
Use < Or > To Change

This Screen is used to configure the Building Pressure Output Signal voltage needed for your application. Select a 0-10 VDC signal (default) or 2-10 VDC signal as required by the device you are using to control the pressure. Default is 0-10V.

### Configuration Screen #39 - Heat Pump Control

RNE Cnfg ID 101  
Air to Air Heat Pump  
Control: NO  
Use < Or > To Change

Select YES if the HVAC unit is a Heat Pump. Default is NO.

### Configuration Screen #40 - Reversing Valve Active During Heat/Cool

RNE Cnfg ID 101  
Rev. Valve Active  
For: Heat  
Use < Or > To Change

Select Heat if your Heat Pump unit activates its Reversing Valve during Heating operation. Select Cool if your Heat Pump unit activates its Reversing Valve during Cooling operation. Default is Heat.



## RNE Configuration Screens

### Configuration Screen #41 - Emergency Shutdown Input

RNE Cnfg ID 101  
Emergency Shutdown  
Input: NO  
Use < Or > To Change

Select YES if a Smoke Detector/Firestat or other Emergency Shutdown input is connected to the binary input. If the Emergency Shutdown input is active, the Supply Fan, Heating and Cooling Relay Outputs will be disabled. Default is NO.

### Configuration Screen #42 - Return Air Bypass Control

RNE Cnfg ID 101  
Return Air Bypass  
Control: NO  
Use < Or > To Change

Select YES if your HVAC unit requires Return Air Bypass Control for Dehumidification Reheat. Default is NO.

### Configuration Screen #43 - Broadcast OA Temp

RNE Cnfg ID 101  
Broadcast Outdoor  
Temperature: NO  
Use < Or > To Change

The RNE can broadcast its Outdoor Air Temperature Reading to other HVAC units if they are not equipped with their own Outdoor Air Temperature sensors. A network communications device is needed in order for this feature to operate. Select YES to Broadcast the Outdoor Temperature. Default is NO.

### Configuration Screen #44 - Broadcast OA Humidity

RNE Cnfg ID 101  
Broadcast Outdoor  
Humidity: NO  
Use < Or > To Change

The RNE can broadcast its Outdoor Air Humidity reading to other HVAC units if they are not equipped with their own Outdoor Air Humidity sensors. A network communications device is required in order for this feature to operate. Select YES to Broadcast the Outdoor Humidity. Default is NO.

### Configuration Screen #45 - Broadcast Supply Temperature

RNE Cnfg ID 101  
Broadcast Supply  
Temperature: YES  
Use < Or > To Change

This broadcast sends the RNE's Supply Air Temperature to all Controllers on its local loop. This broadcast needs to be configured on a VAV or Zoning System using the RNE with Orion VAV/Zone Controllers. A network communications device is required in order for this feature to operate. Select YES to Broadcast the Supply Air Temperature. Default is YES.

### Configuration Screen #46 - Broadcast Status Fan & Heat

RNE Cnfg ID 101  
Broadcast Status  
Fan & Heat: NO  
Use < Or > To Change

This broadcast sends the RNE's Supply Fan and Heating Status to all Controllers on its local loop. This broadcast needs to be configured on a VAV or Zoning System using the RNE with Orion VAV/Zone Controllers. A network communications device is required in order for this feature to operate. Select YES to Broadcast the Fan & Heat Status. Default is NO.

### Configuration Screen #47 - Broadcast Internal Time Clock

RNE Cnfg ID 101  
Broadcast Internal  
Time Clock: NO  
Use < Or > To Change

This broadcast sends the time from the RNE's Internal Time Clock to all Controllers on its local loop. This broadcast needs to be configured on a VAV or Zoning System using the RNE with Orion VAV/Zone Controllers. A network communications device is required in order for this feature to operate, but can also be used to synchronize all Controllers on the local loop. Select YES to Broadcast the Internal Time Clock. Default is NO.

# RNE CONFIGURATION

## RNE Configuration Screens

### Configuration Screen #48 - Broadcast Internal Schedule

RNE Cnfg ID 101  
Broadcast Internal  
Schedule: NO  
Use < Or > To Change

This is always required when you have VAV/Zone Controllers connected to this RNE Controller. This will broadcast the Occupied and Unoccupied Condition of the RNE Controller to all VAV/Zone Controllers on the local loop. Select YES to Broadcast the Internal Schedule. Default is NO.

### Configuration Screen #49 - Broadcast VAV Boxes Force to Max

RNE Cnfg ID 101  
Broadcast VAV Boxes  
Force To Max: NO  
Use < Or > To Change

This broadcast is to ensure the VAV/Zone Controllers will drive their dampers to the Max Airflow Damper Position during Morning Warm-up. This is important to allow the proper amount of airflow for Heating in the HVAC unit. Select YES to Broadcast VAV Boxes Force to Max. Default is NO.

### Configuration Screen #50 - Broadcast VAV Boxes Force to Fixed

RNE Cnfg ID 101  
Broadcast VAV Boxes  
Force To Fixed: NO  
Use < Or > To Change

Select YES to have all VAV/Zone Controllers connected to this RNE Controller forced to their "Fixed Airflow" Position during the Morning Warm-up Mode of operation. See the VAV/Zone Controller Setpoint Screens for setting of the "Fixed Airflow" position. Default is NO.

### Configuration Screen #51 - 1 HVAC Unit with Boxes on Multiple Loops

RNE Cnfg ID 101  
1 HVAC Unit w/ Boxes  
On Multi. Loops: NO  
Use < Or > To Change

Select YES to have all broadcasts that have been configured on Configuration Screens 42 through 47 sent to all local loops on the entire system, not just the local loop the RNE Controller is on. This is normally only required if you have a large HVAC unit that requires more than the 58 VAV/Zone Controllers normally allowed on the local loop. This allows other VAV/Zone Controllers connected on additional local loops to receive the required broadcasts. This only is allowed when you have a single RNE Controller with VAV/Zone Controllers on multiple loops. Other RNE or add-on devices may be connected but no other RNE with VAV/Zone Controllers can be connected on the system. Default is NO.

### Configuration Screen #52 - Uses R410A Refrigerant

RNE Cnfg ID 101  
Unit Uses R410A  
Refrigerant: NO  
Use < Or > To Change

Select YES if your HVAC unit uses R410A Refrigerant. Default is NO.

### Configuration Screen #53 - Main Fan Maximum Voltage

RNE Cnfg ID 101  
Max Main Fan Aout  
Voltage: 10.0 VDC  
[ 0 VDC - 10 VDC ]

Enter a value between 0.0 and 10.0 VDC for the main fan's maximum output voltage. The *Static Pressure and Output % Status Screen* will display 0% to 100%, but the output will range from 0 VDC to the value set in this screen. Default is 10.0 VDC.

Configuration Screens #54-57 - Cooling & Heating Stage Delays

RNE Cnfg ID 101  
Cooling Stage Delays  
Staging Up...: 3 Min  
Staging Down : 1 Min

RNE Cnfg ID 101  
Cooling Stage Delays  
Min Run Time: 5 Min  
Min Off Time: 3 Min

RNE Cnfg ID 101  
Heating Stage Delays  
Staging Up...: 3 Min  
Staging Down : 1 Min

RNE Cnfg ID 101  
Heating Stage Delays  
Min Run Time: 2 Min  
Min Off Time: 1 Min

Both the Heating Stages and the DX Cooling Stages utilize **Staging Up** and **Down** Delay Periods between stages and **Minimum Run** Times and **Off** Times.

Both modes have their own set of Staging and Run Delay Times. The Heating Timer Screens look exactly the same as the Cooling Timer Screens except they reference the Heating settings instead of the Cooling settings.

See the *Sequence of Operation Manual* for information on how these Delays and Run Times are used.

Description	Minimum	Default	Maximum
Cooling Stage Up	3 Min	3 Min	15 Min
Cooling Stage Down	1 Min	1 Min	15 Min
Cooling Min Run Time	5 Min	5 Min	15 Min
Cooling Min Off Time	3 Min	3 Min	15 Min
Heating Stage Up	3 Min	3 Min	15 Min
Heating Stage Down	1 Min	1 Min	15 Min
Heating Min Run Time	2 Min	2 Min	15 Min
Heating Min Off Time	1 Min	1 Min	15 Min

Configuration Screens #58-77 - Relay Configuration Screens

RNE Cnfg ID 101  
Relay Configurations  
Rly xx: Not Used  
Use < Or > To Change

Relay #1 is not configurable as it is reserved for the Supply Air Fan. Relays #2-#21 are configurable for the following options:

- **Not Used**
- **Heat Stage**
- **Cool Stage**
- **Warmup Mode**
- **Rev Valve**
- **HGR**
- **Exhaust Fan**
- **Pre-Heater**
- **Alarm**
- **Override**
- **Occupied**
- **OA Damper**
- **Heat Wheel**
- **Emerg. Heat**

Relays #2 through #21 can be individually configured. By using the 4 relay outputs available on the RNE Controller, the 4 relays on the VCM-X Expansion Module, and the 12 relays on the 12-Relay Expansion Module, you have the ability to configure up to a combined total of 20 Heating Stages, Cooling Stages, and the rest of the options listed above. Only the Heating and Cooling relays can be configured with multiple outputs. If any other option is selected more than once, it will simply activate redundant relays, but no multiple staging will occur. Default is "Not Used."

## VCM-X / RNE Setpoint Screen Index

### Setpoint Screen Index

The available Setpoint Screens for the VCM-X or RNE Controller are listed on the next few pages by sequential screen number. When each VCM-X or RNE Controller is configured for the first time, it is best to start with screen #1 and proceed to each Setpoint Screen in numerical order until you have viewed all available Setpoint Screens. This ensures that you have seen all of the available VCM-X or RNE Controller Setpoint possibilities and have the opportunity to change or accept the defaults for each screen. Once the unit Setpoints are configured and you decide to change one of the screen options, it is helpful to know what screen number contains the configuration you wish to change. With this in mind, the following is a list of all the VCM-X or RNE Setpoint Screens in numerical order with a brief listing of the Setpoint feature available on each screen:

Setpoint Screen #1	HVAC Mode Setpoints	Setpoint Screen #19	Outdoor Air CFM Min & Max Control
Setpoint Screen #2	HVAC Mode Select Deadband	Setpoint Screen #20	Outdoor Air CFM Deadband
Setpoint Screen #3	Unoccupied Setbacks	Setpoint Screen #21	Maximum Economizer Position if High CO <sub>2</sub> Level Occurs
Setpoint Screen #4	SAT Cooling Setpoints	Setpoint Screen #22	CO <sub>2</sub> Protection Limit Max Level & Reset Range
Setpoint Screen #5	Cool Reset Source Setpoints	Setpoint Screen #23	Static Setpoint, Deadband & Control Rate
Setpoint Screen #6	SAT Heating Setpoints	Setpoint Screen #24	Building Pressure Setpoint & Deadband
Setpoint Screen #7	Heat Reset Source Setpoints	Setpoint Screen #25	Return Air Bypass Damper Factor Setpoint
Setpoint Screen #8	Stage Control Window	Setpoint Screen #26	Fan Starting Delay Timer
Setpoint Screen #9	Outdoor Air Lockouts	Setpoint Screen #27	Mechanical Heat Cool Failures Occur After No Change For
Setpoint Screen #10	Cutoff Temperatures Lo SAT & Hi SAT	Setpoint Screen #28	Preheat/Low Ambient Temperature
Setpoint Screen #11	Minimum Supply Fan VFD Speed For Heating	Setpoint Screen #29	Max OA Damper Tempering Limit
Setpoint Screen #12	Morning Warm-up Target Temp & Max Length	Setpoint Screen #30	HVAC Schedule
Setpoint Screen #13	Dehumidification Indoor RH & OA Dewpoint	Setpoint Screen #31	Push-Button Override Duration
Setpoint Screen #14	Dehumidification Coil Temperature	Setpoint Screen #32	HVAC Mode Sensor Slide Offset
Setpoint Screen #15	Cooling Head Pressure Setpoint (VCM-X E-BUS/RNE)	Setpoint Screen #33	Heat Pump Auxiliary Heating Delay
Setpoint Screen #16	Reheat Head Pressure Setpoint (VCM-X E-BUS/RNE)	Setpoint Screen #34	Heat Pump Defrost Temp and Defrost Timer (VCM-X E-BUS/RNE)
Setpoint Screen #17	Economizer Setpoints OAT/WB Enable	Setpoint Screen #35	Adaptive Defrost Adjustment (VCM-X E-BUS/RNE)
Setpoint Screen #18	Economizer Setpoints Min Position & Control Rate	Setpoint Screen #36	Heat Wheel Defrost
		Setpoint Screen #37	Internal Schedule Optimal Start Soak Multiplier
		Setpoint Screen #38	Trend Log Interval
		Setpoint Screen #39	Preheat-X Setpoints - Cooling & Heating Mode (VCM-X Modular E-BUS)
		Setpoint Screen #40	Preheat-X Setpoint - Venting Mode (VCM-X Modular E-BUS)
		Setpoint Screen #41	Sensor Calibration For SPC & SAT
		Setpoint Screen #42	Sensor Calibration For RAT & OAT
		Setpoint Screen #43	Sensor Calibration For Coil

## Setpoints

### Modular Service Tool Instructions

From any menu screen, *press* <SETPOINTS>. The *Unit Selection Screen*, shown below, will appear requesting that you enter the unit ID number.

```

Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
    
```

Enter the correct unit ID number of the VCM-X or RNE Controller you want to change Setpoints for and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>. You will then see Setpoint Screen #1. *Press* <ENTER> to save entered data and *press* <↓> to scroll through the screens.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

### System Manager SD Instructions

From any Main screen, *press* <SETPOINTS>. The screen below will appear because this option requires passcode clearance. Only a Level 2 passcode can change setpoints.

```

THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
    
```

If the correct passcode was entered, the *Unit Selection Screen* will be displayed.

```

Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
    
```

Enter the Unit ID of the controller you wish to change schedules for and *press* <ENTER>. Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

The following screen will be displayed:

```

Change Setpoints
Configure Unit
Save/Copy/Restore
    
```

Scroll to the 'Change Setpoints' option and *press* <ENTER>. This will take you to the first Setpoints Screen shown below.

### Setpoint Screen #1 - HVAC Mode Setpoints

```

VCM-X / RNE Spts
HVAC Mode Setpoints
Cooling.....: 75°F
Heating.....: 70°F
    
```

These Setpoints are used to determine the Heating, Cooling, or Vent Modes of operation in reference to the HVAC Mode Enable Sensor. If the Supply Air Sensor is configured to be the HVAC Mode Enable, these Setpoints are used in conjunction with the Unoccupied Setbacks if equipped with a Space Temperature Sensor.

Description	Minimum	Default	Maximum
HVAC Mode Setpoints Cooling	0°F	75°F	99°F
HVAC Mode Setpoints Heating	0°F	70°F	99°F

### Setpoint Screen #2 - HVAC Mode Select Deadband

```

VCM-X / RNE Spts
HVAC Mode Select
Deadband.....: 1.0°F
    
```

This Setpoint is added to and subtracted from the HVAC Mode Setpoints. It provides you with flexibility on when the Heating and Cooling Modes should be active above or below the HVAC Mode Setpoints.

Description	Minimum	Default	Maximum
HVAC Mode Select Deadband	0°F	1°F	10°F

## VCM-X / RNE Setpoint Screens

### Setpoint Screen #3 - Unoccupied Setbacks

VCM-X / RNE Spts	
Unoccupied Setbacks	
Cooling.....:	30°F
Heating.....:	30°F

During the Unoccupied Mode of Operation, these Setpoints spread the HVAC Mode Setpoints out by a user-adjustable amount. Use only positive numbers for these Setpoints. If you do not want Cooling or Heating to operate during the Unoccupied Mode, use the default setting of 30°F for these setpoints.

Description	Minimum	Default	Maximum
Unoccupied Setbacks Cooling	0°F	30°F	30°F
Unoccupied Setbacks Heating	0°F	30°F	30°F

### Setpoint Screen #4 - SAT Cooling Setpoints

VCM-X / RNE Spts	
SAT Cooling Spts	
Cooling..:	55°F
Rst Limit:	55°F

If no Reset Source has been configured in Configuration Screen #4, then this setpoint will be the Supply Air Temperature Cooling Setpoint. Line 4 will be blank. If a Reset Source has been configured in Configuration Screen #4, then Line 4 will read Rst Limit. Reset is always upward from the SAT setpoint to the Reset Limit setpoint. So, the SAT will be the lowest temperature the Supply Air Setpoint can be reset to and Reset Limit will be the highest temperature the Supply Air Setpoint can be reset to. The Cooling Supply Air Temperature Setpoint will automatically be reset warmer or colder within this range as the Reset Source (next screen) moves within its range.

Description	Minimum	Default	Maximum
SAT Cooling Setpoint	40°F	55°F	80°F
Cooling Reset Limit	40°F	55°F	150°F

### Setpoint Screen #5 - Cool Reset Source

VCM-X / RNE Spts	
Cool Rst Source Spts	
SpcHi: 75	SAT: 55°
SpcLo: 75	RST: 55°

If no Reset Source has been configured in Configuration Screen #4, then this screen will read Cool Rst Not Config and will not be used. If a Reset Source has been configured in Configuration Screen #4, then the names of the values on the left side of this screen will correspond to the Reset Source that was configured. This screen will then allow you to input the upper and lower limits for the range of values of the Reset Source on the left side of the screen and will show the corresponding Cooling Supply Air SAT and Rst Limit values that were entered on the previous screen. Single Zone VAV Reset of the Supply Fan VFD is addressed in the last paragraph.

Please note that the SAT and Rst Limit values on the right side of this screen cannot be changed on this screen; they are simply displayed from what was entered on the Setpoint Screen #4. For each line, the value on the left corresponds to the value on the right. So, if the Space Temperature Sensor has been configured as the Reset Source, then when the Space Temperature is at or above the SpcHi Temperature Setpoint, the Supply Air Cooling Setpoint will be reset to its lowest value, the SAT Setpoint. If the Space Temperature is at or below the SpcLo Setpoint, the Supply Air Cooling Setpoint will be reset to its highest value, the Cooling Rst Limit. Then, as the Space Temperature moves from its low value to its high value, the Supply Air Cooling Setpoint will be proportionally reset from its high value to its low value.

Depending on whether reset has been configured or not, the options for the names of the values on the left side of the screen are SpcHi, SpcLo, OatHi, OatLo, RatHi, RatLo, VLT, VFD, NoRST.

**In the examples that follow, the desired Space Temperature in Cooling Mode is 75°F:**

#### Space Temperature Cool Reset:

Space Temperature (SPC Hi) = 75°F      SAT Setpoint (SAT) = 55°F  
 Space Temperature (SPC Lo) = 74°F      SAT Setpoint (Rst) = 65°F

#### VFD Percentage Cool Reset:

VFD Percentage (VFD) = 70%      SAT Setpoint (SAT) = 55°F  
 VFD Percentage (VFD) = 30%      SAT Setpoint (Rst) = 65°F

#### Input Voltage Cool Reset:

Input Voltage (VLT) = 0 Volts      SAT Setpoint (SAT) = 55°F  
 Input Voltage (VLT) = 10 Volts      SAT Setpoint (Rst) = 65°F

In the Cooling Mode in a Single Zone VAV application, the Supply Fan VFD speed will proportionally modulate as the Space Temperature rises within the range set on this screen. Upon entering the Cooling Mode, the fan will start at 30% and modulate up to 100% as the Space Temperature rises from the SpcLo Setpoint to the SpcHi Setpoint. The SpcLo Setpoint should be the same as the Space Cooling Setpoint (Mode Enable Setpoint) from Setpoint Screen #1. The SAT and RST Setpoints on the right side of the screen are not used.

Setpoint Screen #6 - SAT Heating Setpoints

If no Reset Source has been configured in Configuration Screen #4, then this setpoint will be the Supply Air Temperature Heating Setpoint. Line 4 will be blank. If a Reset Source has been configured in Configuration Screen #4, then Line 4 will read Rst Limit. Reset is always upward from the SAT setpoint to the Reset Limit setpoint. So, the SAT will be the lowest temperature the Supply Air Setpoint can be reset to and Reset Limit will be the highest temperature the Supply Air Setpoint can be reset to. The Heating Supply Air Temperature Setpoint will automatically be reset warmer or colder within this range as the Reset Source (next screen) moves within its range.

```
VCM-X / RNE Spts
SAT Heating Spts
Heating..: 120°F
Rst Limit: 120°F
```

Description	Minimum	Default	Maximum
SAT Heating Spt	40°F	120°F	200°F
Reset Limit Spt	40°F	120°F	200°F

Setpoint Screen #7 - Heat Reset Source

```
VCM-X / RNE Spts
Heat Rst Source Spts
SpcHi: 70 SAT: 120°
SpcLo: 70 RST: 120°
```

If no Reset Source has been configured in Configuration Screen #4, then this screen will read Heat Rst Not Config and will not be used. If a Reset Source has been configured in Configuration Screen #6, then the names of the values on the left side of this screen will correspond to the Reset Source that was configured. This screen will then allow you to input the upper and lower limits for the range of values of the Reset Source on the left side of the screen and will show the corresponding Heating Supply Air SAT and Rst Limit values that you entered on the previous screen. Single Zone VAV Reset of the Supply Fan VFD is addressed in the last paragraph.

Please note that the SAT and Rst Limit values on the right side of this screen cannot be changed on this screen; they are simply displayed from what was entered on the Setpoint Screen #6. For each line, the value on the left corresponds to the value on the right. So if the Space Temperature Sensor has been configured as the Reset Source, then when the Space Temperature is at or above the SpcHi Temperature Setpoint, the Supply Air Heating Setpoint will be reset to its lowest value, the SAT Setpoint. If the Space Temperature is at or below the SpcLo Setpoint, the Supply Air Heating Setpoint will be reset to its highest value, the Heating Rst Limit. Then, as the Space Temperature moves from its low value to its high value, the Supply Air Heating Setpoint will be proportionally reset from its high value to its low value.

Depending on whether reset has been configured or not, the options for the names of the values on the left side of the screen are SpcHi, SpcLo, OatHi, OatLo, RatHi, RatLo, VLT, VFD, NoRST.

**In the examples that follow, the desired Space Temperature in Heating Mode is 71°F:**

**Space Temperature Heat Reset:**

Space Temperature (SPC Hi) = 71°F      SAT Setpoint (SAT) = 90°F  
 Space Temperature (SPC Lo) = 70°F      SAT Setpoint (Rst) = 120°F

**VFD Percentage Heat Reset:**

VFD Percentage (VFD) = 30%      SAT Setpoint (SAT) = 90°F  
 VFD Percentage (VFD) = 70%      SAT Setpoint (Rst) = 120°F

**Input Voltage Heat Reset:**

Input Voltage (VLT) = 0 Volts      SAT Setpoint (SAT) = 90°F  
 Input Voltage (VLT) = 10 Volts      SAT Setpoint (Rst) = 120°F

In the Heating Mode in a Single Zone VAV application, the Supply Fan VFD speed will proportionally modulate as the Space Temperature falls within the range set on this screen. Upon entering the Heating Mode, the fan will start at 50% and modulate up to 100% as the Space Temperature falls from the SpcHi Setpoint to the SpcLo Setpoint. The SpcHi Setpoint should be the same as the Space Heating Setpoint (Mode Enable Setpoint) from Setpoint Screen #1. The SAT and RST Setpoints on the right side of the screen are not used.

Setpoint Screen #8 - Stage Control Window

```
VCM-X / RNE Spts
Stage Control Window
Cooling.....: 5°F
Heating.....: 5°F
```

When the Unit Controller is in Cooling Mode, if the Supply Air Temperature drops below the Active Supply Air Temperature Setpoint minus the Cooling Stage Control Window value, a Cooling Stage will be deactivated after its Minimum Run Time. In the Heating Mode, if the Supply Air Temperature rises above the Active Supply Air Temperature Setpoint plus the Heating Stage Control Window value, a Heating stage will be deactivated after its Minimum Run Time. This staging window is also used for the coil temperature during Dehumidification Mode.

Description	Minimum	Default	Maximum
Stage Control Window Cooling	5°F	5°F	30°F
Stage Control Window Heating	5°F	5°F	30°F

# VCM-X / RNE SETPOINTS

## VCM-X / RNE Setpoint Screens

### Setpoint Screen #9 - Outdoor Air Lockouts

VCM-X / RNE Spts Outdoor Air Lockouts	
Cooling.....:	50°F
Heating.....:	70°F

The Unit Controller will Lockout Mechanical Heating or Cooling when the Outdoor Air (OA) Temperature is above or below these Setpoints.

On Air to Air Heat Pump units, Compressor Cooling and Heating can only operate if the OA Temperature is above the Outdoor Air Cooling Lockouts. If using the VCM-X WSHP (Water Source Heat Pump) Controller, the OA Cooling Lockout is ignored. Since Emergency Heat can only be used below the Compressor Lockouts, Emergency Heat is therefore not available on WSHP units using the VCM-X WSHP Controller.

Description	Minimum	Default	Maximum
OA Lockouts Cooling	0°F	50°F	100°F
OA Lockouts Heating	50°F	70°F	150°F

### Setpoint Screen #10 - Cutoff Temperature

VCM-X / RNE Spts Cutoff Temperatures	
Lo SAT.....:	40°F
Hi SAT.....:	170°F

The Unit Controller will temporarily disable Heating or Cooling if while in Heating or Cooling Mode the Supply Air Temperature rises above the High SAT Cutoff Temperature Setpoint or falls below the Low SAT Cutoff Temperature Setpoint. See the *VCM-X Controller Technical Guide*, *VCM-X Modular E-BUS Controller Technical Guide*, or *RNE Controller Technical Guide* for detailed information on the Low and High Supply Air Temperature Cutoff sequence of operation.

Description	Minimum	Default	Maximum
Lo SAT Cutoff	0°F	40°F	250°F
Hi SAT Cutoff	0°F	170°F	250°F

### Setpoint Screen #11 - Minimum Supply Fan VFD Speed For Heating

VCM-X / RNE Spts Minimum Supply Fan VFD Speed For Heating..:	
	30%

If the Supply Fan VFD Signal falls below the Minimum Supply Fan VFD Speed For Heating Setpoint, Heating will be disabled.

Description	Minimum	Default	Maximum
Min Supply Fan VFD Speed For Heating	0%	30%	100%

### Setpoint Screen #12 - Morning Warm Up Temp

VCM-X / RNE Spts Morning WarmUp Target Temp: 72° F Max Length.: 60 Min	
---	--

When the Unit Controller is configured for VAV operation and the controller enters the Occupied Mode, the controller looks at the Return Air Temperature to determine if the unit should initiate Morning Warm-up Mode. If the Return Air Temperature is below the Morning Warm-up Target Temperature and the Max Length is greater than "0," the controller will initiate Heating. This is considered Morning Warm-up and will run until the Return Air Temperature rises above the Morning Warm-up Target Temperature or until the Max Length Setpoint time expires.

Description	Minimum	Default	Maximum
Morning Warm Up Target Temp	50°F	72°F	90°F
Morning Warm Up Max Length	0 Min	60 Min	240 Min

### Setpoint Screen #13 - Dehumidification Indoor RH & OA Dewpoint

VCM-X / RNE Spts Dehumidification Spt Indoor RH....:	
	50%
OA Dewpoint...:	55°F

On VAV or CAV configured units that are not using 100% Outdoor Air, when the Indoor Relative Humidity percentage rises above the Indoor RH Setpoint, the unit will start operating in Dehumidification Mode.

If an Indoor Humidity Sensor is installed, the unit will reset the Coil Suction Temperature Setpoint as needed to maintain this Indoor RH Setpoint. This includes VAV, CAV and MUA applications.

On MUA configured units that are using 100% Outdoor Air, when the Outdoor Air Dewpoint Temperature rises above the OA Dewpoint Setpoint, the unit will start operating in Dehumidification Mode.

Description	Minimum	Default	Maximum
Dehumidification Setpoint Indoor RH	1%	50%	100%
Dehumidification Setpoint OA Dewpoint	35°F	55°F	80°F



### Setpoint Screen #14 - Dehumidification Coil Temperature

VCM-X / RNE Spts  
Dehumidification  
Coil Temperature  
Setpoint.....: 45°F

During the Dehumidification Mode, the Unit Controller uses the calculated Coil Temperature to activate DX Cooling based on this Dehumidification Coil Temperature Setpoint. The controller uses a Suction Pressure Transducer to read Suction Pressure (the Saturation Vapor Pressure of the Refrigerant) and converts this Suction Pressure reading to a Coil Temperature value. This calculation is based on using R22 or R410A refrigerant only and will not work with any other refrigerant. This setpoint determines the number of compressor stages that need to be activated to maintain the Dehumidification Coil Temperature Setpoint.

Description	Minimum	Default	Maximum
Dehumidification Coil Temperature Setpoint	35°F	45°F	70°F

### Setpoint Screen #15 - Cooling Head Pressure Setpoint

VCM-X / RNE Spts  
Cooling  
Head Pressure  
Setpoint: 315PSI

If you are using the Head Pressure Module, this is the Cooling Setpoint for control of the condenser fan speed. This is based on the highest head pressure reading of up to 4 Head Pressure Sensors. This screen only applies if using the VCM-X E-BUS Controller, or RNE Controller.

See the *One Condenser Head Pressure Module Technical Guide*, the *Two Condenser Head Pressure Module Technical Guide*, or the *RNE Controller Technical Guide* for detailed information.

Description	Minimum	Default	Maximum
Cooling Head Pressure Setpoint	200 PSI	315 PSI	400 PSI

### Setpoint Screen #16 - Reheat Head Pressure Setpoint

VCM-X / RNE Spts  
Reheat  
Head Pressure  
Setpoint: 400PSI

If you are using the Head Pressure Module, this is the Reheat Setpoint for control of the condenser fan speed during dehumidification. This is

based on the highest head pressure reading of up to 4 Head Pressure Sensors. This screen only applies if using the VCM-X E-BUS Controller, or RNE Controller.

See the *One Condenser Head Pressure Module Technical Guide*, the *Two Condenser Head Pressure Module Technical Guide*, or the *RNE Controller Technical Guide* for detailed information.

Description	Minimum	Default	Maximum
Reheat Head Pressure Setpoint	200 PSI	400 PSI	400 PSI

### Setpoint Screen #17 - Economizer OAT/WB Enable

VCM-X / RNE Spts  
Economizer Setpoints  
OAT/WB Enable: 55°F

If an Outdoor Air Humidity Sensor is not connected to the Unit Controller and the Outdoor Air Temperature falls below this Setpoint, the Economizer can be used for Free Cooling. If an Outdoor Air Humidity Sensor is connected to the controller, then a Wetbulb Temperature will be calculated and used instead of the Outdoor Air Drybulb Temperature to determine when Free Cooling can be used.

Description	Minimum	Default	Maximum
Economizer Setpoints OAT/WB Enable	0°F	55°F	80°F

### Setpoint Screen #18 - Economizer Minimum Position & Control Rate

VCM-X / RNE Spts  
Economizer Setpoints  
Min Position.: 10 %  
Control Rate.: 90

The Economizer (OA Damper) Min Position Setpoint is maintained during the Occupied Mode even if the Economizer is disabled due to the OA Temperature or Wetbulb Temperature being above the Economizer Enable Setpoint. The Control Rate Setpoint allows you to adjust the Economizer to modulate the OA Damper Actuator faster or slower as desired. The Control Rate Setpoint range is 10-99. Larger numbers make the Economizer Outdoor Air Damper Actuator modulate faster, smaller numbers make the Outdoor Air Damper Actuator modulate slower.

Description	Minimum	Default	Maximum
Economizer Min Position	0%	10%	100%
Economizer Control Rate	10	90	99

# VCM-X / RNE SETPOINTS

## VCM-X / RNE Setpoint Screens

### Setpoint Screen #19 - Outdoor Air CFM Control

VCM-X / RNE Spts  
 OA CFM CONTROL  
 Min CFM.: 0.10 Kcfm  
 Max CFM.: 0.10 Kcfm

If controlling the Outdoor Air Damper to a CFM setpoint, this screen allows you to set the design Minimum and Maximum required Outdoor Airflow CFM values for the Air Handler. The OA Max CFM limits the damper operation during CO<sub>2</sub> override conditions. K = 1000

Description	Minimum	Default	Maximum
OA Minimum CFM	0.10 Kcfm	.10 Kcfm	200 Kcfm
OA Maximum CFM	0.10 Kcfm	.10 Kcfm	200 Kcfm

### Setpoint Screen #20 - Outdoor Air CFM Deadband

VCM-X / RNE Spts  
 OA CFM CONTROL  
 OA CFM DB...: 10CFM

This is the deadband above and below the OA CFM Control Setpoint which helps prevent hunting.

Description	Minimum	Default	Maximum
OA CFM Deadband	0 CFM	10 CFM	20,000 CFM

### Setpoint Screen #21 - Economizer Maximum Position if High CO<sub>2</sub> Level

VCM-X / RNE Spts  
 Maximum Economizer  
 Position if High CO<sub>2</sub>  
 Level Occurs.: 100%

This Setpoint allows you to set the Maximum Position the Economizer will open if high CO<sub>2</sub> conditions occur in the space. The Maximum Economizer Position Setpoint is used to limit the amount of Outdoor Air that will be introduced to the HVAC unit in order to ensure the unit is operating within its Heating and Cooling design limitations. As shown in the table below, the Minimum setting for this Setpoint is the value previously set for the Economizer Min Position Setpoint.

Description	Minimum	Default	Maximum
Maximum Economizer Position If High CO <sub>2</sub> Level Occurs	Economizer Minimum Position	100%	100%

### Setpoint Screen #22 - CO<sub>2</sub> Protection Limit

VCM-X / RNE Spts  
 CO<sub>2</sub> Protection Limit  
 Max Level.: 900 PPM  
 Reset Rnge: 100 PPM

When the CO<sub>2</sub> level rises above the CO<sub>2</sub> Protection Limit Max Level, the Economizer's Minimum Position will begin to reset open proportionally between the CO<sub>2</sub> Protection Limit Max Level Setpoint and the Reset Range Setpoint. The Reset Range value is added to the Max Level value. If the CO<sub>2</sub> levels are equal to or above the Max Level plus the Reset Range, the Economizer will be opened to its Maximum Economizer Position if high CO<sub>2</sub> levels occur.

Description	Minimum	Default	Maximum
CO <sub>2</sub> Protection Limit Max Level	0 PPM	900 PPM	3000 PPM
CO <sub>2</sub> Protection Limit Reset Range	0 PPM	100 PPM	1500 PPM

### Setpoint Screen #23 - Static Setpoint, Deadband & Control Rate

VCM-X / RNE Spts  
 Static Spt...: 0.50"  
 Deadband...: 0.10"  
 Control Rate.: 10 s

For VAV units, a Supply Fan VFD or Bypass Damper Actuator is used to maintain the Duct Static Pressure Setpoint. The Static Pressure Output Signal varies to control the Static Pressure Setpoint. If the Duct Static Pressure is above the Static Setpoint plus the Deadband, the Static Pressure Output Signal will be reduced at every Control Rate interval. If the Static Pressure is below the Static Setpoint minus the Deadband, the Output signal will be increased at every Control Rate interval.

The Duct Static Pressure Control Output Signal is a non-configurable Direct Acting Signal (0-10 VDC). This can be used to directly connect to a Supply Fan VFD without any modifications.

When you are using a Bypass Damper Actuator to control the Duct Static Pressure, you must set up the Bypass Damper Actuator or the Bypass Damper so that it is Reverse Acting in operation. The Output Signal increases (closes Bypass Damper) if the Duct Static Pressure is below the Duct Static Pressure Setpoint by the Deadband amount and the Output Signal decreases (opens Bypass Damper) if the Static Pressure is above the Setpoint by the Deadband amount.

Description	Minimum	Default	Maximum
Static Spt	0.10" WG	0.50" WG	3.0" WG
Deadband	0.10" WG	0.10" WG	1.0" WG
Control Rate	1 Sec	10 Sec	30 Sec

Setpoint Screen #24 - Building Pressure

VCM-X / RNE Spts	
Building Pressure	
Setpoint....:	0.10"
Deadband....:	0.02"

**Direct Acting Control**

If an Exhaust Fan Relay is configured, when the Building Static Pressure rises above the Building Pressure Setpoint plus the Deadband, the Exhaust Fan Relay will activate. It will remain on until the Building Pressure falls below the Building Pressure Setpoint minus the Deadband. If Modulating Building Pressure is configured, when the Building Static Pressure rises above the Building Pressure Setpoint plus the Deadband, the Building Pressure Output Signal will increase until the Building Static Pressure falls within the Deadband. If the Building Static Pressure falls below the Building Pressure Setpoint minus the Deadband, the Building Pressure Output Signal will decrease until the Building Static Pressure rises within the Deadband. The Building Pressure Output Signal is configurable for 0-10 or 2-10 VDC. For more detailed operation information, see the *VCM-X Controller Technical Guide*, *VCM-X Modular E-BUS Controller Technical Guide*, or *RNE Controller Technical Guide* for the complete Building Pressure Control Sequence of Operation.

**Reverse Acting Control**

The Building Pressure Output Signal remains a Direct Acting 0-10 or 2-10 VDC signal, but the logic is reversed. On a drop in Building Static Pressure below the Building Pressure Setpoint minus the Deadband, the Building Pressure Output Signal will increase.

Description	Min.	Default	Max.
Building Pressure Spt	-0.20" WG	0.10" WG	0.20" WG
Building Pressure Deadband	0.01" WG	0.02" WG	0.10" WG

Setpoint Screen #25 - RAB Damper Factor

VCM-X / RNE Spts	
Return Air Bypass Damper Factor	
Setpoint..:	40%

This setpoint is used when your HVAC unit is configured for Return Air Bypass Damper control. The Return Air Bypass Damper Factor Setpoint is a percentage value that is used to calculate the Return Air Damper position in relation to the Return Air Bypass Damper position. This provides a method for adjusting the airflow through the Return Air Bypass Damper.

Increasing this percentage increases the airflow through the Return Air Bypass Damper by causing the Return Air Damper to move further towards its closed position in relation to the Return Air Bypass Damper moving towards its open position.

Decreasing this percentage decreases the airflow through the Return Air Bypass Damper by causing the Return Air Damper to move further towards its open position in relation to the Return Air Bypass Damper moving towards its closed position.

Description	Minimum	Default	Maximum
Return Air Bypass Damper Factor	0%	40%	100%

Setpoint Screen #26 - Supply Fan Starting Delay Timer

VCM-X / RNE Spts	
Fan Starting Delay Timer....:	
	255 s

This is the Supply Fan Starting Delay Timer initiated whenever the Unit Controller initiates Supply Fan operation. This is useful when you are using multiple HVAC units and want to be sure that all the units do not start at exactly the same time when the Occupied schedule occurs. Each Unit Controller should be set with staggered Fan Starting Delay Timer Setpoint values. When the 255 Second default setpoint is used, it multiplies each Unit Controller's address by 5 and uses this value in seconds as the Fan Starting Delay Time. This provides a staggered start for each Unit Controller on the system without having to individually set each Unit Controller for its own time delay. For an MUA unit, this should be set to a minimum of 60 seconds to let the OA Damper open.

Description	Minimum	Default	Maximum
Fan Start Delay Timer	0 Sec	255 Sec	255 Sec

Setpoint Screen #27 - Mechanical Heat/Cool Failure Time Period

VCM-X / RNE Spts	
Mechanical Heat/Cool Failures Occur After No Change In	
	15 Min

When Heating or Cooling Mode is initiated and staging is activated, if the Supply Air Temperature does not rise or fall 5°F within the Mechanical Heat/Cool Failures Occur After No Change For Setpoint time period, a Mechanical Heating or Cooling failure alarm will be generated. The Alarm is for Status Reporting only. The HVAC unit will continue to run.

Description	Minimum	Default	Maximum
Mechanical Heat/Cool Failures Occur After No Change For	0 Min	15 Min	255 Min

# VCM-X / RNE SETPOINTS

## VCM-X / RNE Setpoint Screens

### Setpoint Screen #28 - Preheat/Low Ambient Temperature

VCM-X / RNE Spts  
Preheat/Low  
Ambient Temperature  
Setpoint: 0°F

For cold climates where freezing temperatures may be experienced, a Pre-Heater relay output can be activated based on the Outdoor Air Temperature to prevent freezing of Water Coils. One of the VCM-X / RNE Relay Outputs must be configured for the Pre-Heater control. When configured, if the Outdoor Air Temperature falls below the Low OAT Ambient Protection Temperature Setpoint and the HVAC unit is in Occupied Mode, the Pre-Heater relay will activate. This setpoint will also be used to enable the Preheater if the PREHEAT-X Controller is being used in conjunction with the VCM-X Controller.

Description	Minimum	Default	Maximum
Preheat/Low Ambient Temperature	0°F	0°F	70°F

### Setpoint Screen #29 - Max OA Damper Tempering Limit

VCM-X / RNE Spts  
Max OA Damper  
Tempering Limit  
Setpoint: 50%

The Maximum OA Damper Tempering Limit Setpoint allows you to set the maximum damper position the economizer can open to while the heat is running during the VAV Supply Air tempering mode in this sequence (to prevent potential wasting of energy).

Description	Minimum	Default	Maximum
Maximum Outdoor Air Damper Tempering Limit	0%	50%	60%

### Setpoint Screen #30 - HVAC Schedule

VCM-X / RNE Spts  
HVAC Schedule...: 0  
[ 0 = Internal ]  
[ 1-5 = External ]

The VCM-X / RNE has an Internal Scheduler. If you want the VCM-X or RNE to use its own Internal Schedule to schedule the HVAC unit, *enter* <0> for Internal. To use the External Schedule option, you must have a GPC Plus controller installed and operating on your system. To use one of the (5) External Schedules available on the GPC Plus controller, enter the number of the GPC Plus Schedule (1 through 5) you wish to use.

Description	Minimum	Default	Maximum
HVAC Schedule	0	0	5

### Setpoint Screen #31 - Push-Button Override Duration

VCM-X / RNE Spts  
Push-Button Override  
Duration....: 2.0 Hr

If the Unit Controller has a Space Temperature Sensor installed and it has the Override Button option, the HVAC unit will initiate Occupied Mode any time the Override Button is pressed and held for less than 3 seconds. The Push-Button Override Duration Setpoint allows you to adjust the amount of time the Override will remain in effect when the Override Button is pressed. To cancel the Override before the Override Duration time period expires, press the Override Button for 5 to 10 seconds.

Description	Minimum	Default	Maximum
Push-Button Override Duration	0.0 Hr	2.0 Hr	8.0 Hr

### Setpoint Screen #32 - HVAC Mode Sensor Slide Offset

VCM-X / RNE Spts  
HVAC Mode Sensor  
Slide Offset: 0°F

If the Unit Controller has a Space Temperature Sensor with the Slide Adjust option installed, the HVAC Mode Enable Heating and Cooling Setpoints can be offset by the HVAC Mode Sensor Slide Offset Setpoint value. When the Slide Adjust bar is in the middle, no offset will occur. If the Slide Adjust bar is moved all the way to the top of the Sensor, the Heating and Cooling Setpoints will be raised by the Setpoint value you have entered. If the Slide Adjust bar is moved all the way down to the bottom of the Sensor, the Heating and Cooling Setpoints will be lowered by the Setpoint value you have entered.

Description	Minimum	Default	Maximum
HVAC Mode Sensor Slide Offset	0°F	0°F	10°F

### Setpoint Screen #33 - Heat Pump Auxiliary Heating Delay

VCM-X / RNE Spts  
Heat Pump  
Auxiliary Heating  
Delay: 3 Min

If the Unit Controller is configured to operate as a Heat Pump, the Heat Pump Auxiliary Heating Delay Setpoint can be configured to provide a time delay period before Auxiliary Heating Stages can be activated once activation of the Compressor Heating Stages have been initiated.

VCM-X / RNE Setpoint Screens

Description	Minimum	Default	Maximum
Heat Pump Auxiliary Heating Delay	0 Min	3 Min	30 Min

Setpoint Screen #34 - Heat Pump Defrost Setpoints

VCM-X / RNE Spts Heat Pump Defrost Defrost Temp: 30°F Defrost Tmr: 30 Min
--

The Defrost Temp Setpoint is the Coil Suction Temperature at which the unit will go into Defrost Mode during Heat Pump Heating operation. This unit will operate in the Defrost Mode for 10 minutes or until the Head Pressure reaches 450 PSI. The Defrost Timer determines the length of time between Defrost Modes. The length of the Defrost Timer can be automatically be adjusted by the Adaptive Defrost Adjustment described in Setpoint Screen # 35. This Defrost Mode is only available if using the VCM-X E-BUS Controller or RNE Controller and a Head Pressure Module. A Suction Pressure Transducer is also required. This screen only applies if using the VCM-X E-BUS Controller or RNE Controller with a Suction Pressure Sensor, a Head Pressure Module, and Head Pressure Transducer(s). This screen does not apply if using the VCM-X WSHP Controller and a WSHP Module.

Description	Minimum	Default	Maximum
Heat Pump Defrost Temp	0°F	30°F	50°F
Heat Pump Defrost Timer	10 Min	30 Min	90 Min

Setpoint Screen #35 - Adaptive Defrost Adj. Setpoint

VCM-X / RNE Spts Adaptive Defrost Adj. Setpoint: 0 MIN
--

Once initiated, the Defrost Mode is active until the Head Pressure reaches 450 PSIG or until a 10 minute timer has expired. Enter a value greater than zero to enable the Adaptive Defrost Adjustment of the Heat Pump Defrost Timer (Screen #34). This adjustment value will be subtracted from the Heat Pump Defrost Timer if the Defrost Mode lasts the entire 10 minutes. A proportion of this adjustment value will be added to the Heat Pump Defrost Timer if the Defrost Mode only lasts between 8 minutes and 0 minutes. This screen only applies if using the VCM-X Modular Controller or RNE Controller with a Suction Pressure Sensor, a Head Pressure Module, and Head Pressure Transducer(s). This screen does not apply if using the VCM-X WSHP Controller and a WSHP Protection Module.

Description	Minimum	Default	Maximum
Adaptive Defrost Adj.	0 Min	0 Min	30 Min

Setpoint Screen #36 - Heat Wheel Defrost

VCM-X / RNE Spts Heat Wheel Defrost Setpoint: 32°F
--

The unit will go into Heat Wheel Defrost Mode when the Outdoor Air is below this setpoint.

Description	Minimum	Default	Maximum
Heat Wheel Defrost	0°F	32°F	50°F

Setpoint Screen #37 - Internal Schedule Optimal Start Soak Multiplier

VCM-X / RNE Spts Internal Schedule Optimal Start Soak Multiplier: 0.0
--

The Internal Schedule Optimal Start Soak Multiplier Setpoint is a multiplier that if set to a number greater than 0 will be used as a multiplier for calculating the Optimal Start Time for the HVAC unit. This multiplier is only applied if the unit has been off for more than 24 hours. See the *VCM-X Controller Technical Guide*, *VCM-X Modular E-BUS Controller Technical Guide*, or *RNE Controller Technical Guide* for more detailed information regarding the Optimal Start. This multiplier is only applied if you are using the Unit Controller Internal Schedule.

Description	Minimum	Default	Maximum
Internal Schedule Optimal Start Soak Multiplier	0.0	0.0	5.0

Setpoint Screen #38 - Trend Log Interval

VCM-X / RNE Spts Trend Log Interval: 15 MIN
---

An internal Trend Log is constantly updated at a rate equal to this value.

Description	Minimum	Default	Maximum
Trend Log Interval	1 Min	15 Min	60 Min

# VCM-X / RNE SETPOINTS

## VCM-X / RNE Setpoint Screens

### Setpoint Screen #39 - PREHEAT-X Cooling Mode and Heating Mode Setpoints

```
VCM-X / RNE Spts
Preheat-X Spts
Cooling Mode: 40.0°F
Heating Mode: 60.0°F
```

If using the Preheat-X Controller with the VCB-X, this screen allows you to set the Preheat setpoint you want to control to during the Cooling and the Heating Modes.

Description	Minimum	Default	Maximum
Preheat-X Cooling Mode Setpoint	35.0°F (1.66°C)	40.0°F (4.5°C)	90.0°F (32.2°C)
Preheat-X Heating Mode Setpoint	35.0°F (1.66°C)	60.0°F (15.5°C)	90.0°F (32.2°C)

### Setpoint Screen #40 - PREHEAT-X Venting Mode Setpoint

```
VCM-X / RNE Spts
Preheat-X Spts
Venting Mode:
50.0°F
```

If using the Preheat-X Controller with the VCB-X, this screen allows you to set the Preheat setpoint you want to control to during the Vent Mode.

Description	Minimum	Default	Maximum
Preheat-X Venting Mode Setpoint	35.0°F (1.66°C)	50.0°F (10.0°C)	90.0°F (32.2°C)

### Setpoint Screen #41 - Sensor Calibration for SPC & SAT

```
VCM-X / RNE Spts
Sensor Calibration
SPC: XX.X° 0.00°
SAT: XX.X° 0.00°
```

If the Space or Supply Air Temperature Sensors are reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. Enter a positive Sensor Calibration value to raise the Space Temperature and/or Supply Air Temperature Sensor reading and a negative value to lower the Sensor reading.

Description	Minimum	Default	Maximum
Sensor Calibration SPC	-100.0°F	0.0°F	+100.0°F
Sensor Calibration SAT	-100.0°F	0.0°F	+100.0°F

### Setpoint Screen #42 - Sensor Calibration for RAT & OAT

```
VCM-X / RNE Spts
Sensor Calibration
RAT: XX.X° 0.00°
OAT: XX.X° 0.00°
```

If the Return Air or Outdoor Air Temperature Sensors are reading incorrectly, you can use this option to enter an offset temperature to adjust the Sensor's Temperature. Enter a positive Sensor Calibration value to raise the Return Air Temperature and/or Outdoor Air Temperature Sensor reading and a negative value to lower the Sensor reading.

Description	Minimum	Default	Maximum
Sensor Calibration RAT	-100.0°F	0.0°F	+100.0°F
Sensor Calibration OAT	-100.0°F	0.0°F	+100.0°F

### Setpoint Screen #43 - Sensor Calibration for COIL

```
VCM-X / RNE Spts
Sensor Calibration
COIL: XX.X° 0.00°
```

If the Coil Temperature reading is too high, enter a negative calibration offset to decrease the reading. If it is too low, enter a positive value to increase the reading.

Description	Minimum	Default	Maximum
Sensor Calibration COIL	-30.0°F	0.0°F	+30.0°F

VCM-X / RNE Status Screen Index

VCM-X / RNE Status Screen Index

Status Screen #1	HVAC Mode
Status Screen #2	Cooling/Heating/Economizer Status
Status Screen #3	Mode Enable Temperature and Cooling and Heating Setpoints
Status Screen #4	Current SAT Temperature and Setpoint
Status Screen #5	Space Temperature, Return Air Temperature, and Slide Adjust
Status Screen #6	VCM-X Leaving Water Temperature A OR RNE Leaving Water Temperature 1
Status Screen #7	VCM-X Leaving Water Temperature B OR RNE Leaving Water Temperature 2
Status Screen #8	Coil Temperature or Lowest Coil and Coil Temperature Setpoint
Status Screen #9	Current Outdoor Air Temperature and Current Outdoor Air Relative Humidity
Status Screen #10	Current Calculated Outdoor Air Dewpoint and Current Dewpoint Temperature
Status Screen #11	Current Indoor RH Percentage and Current Indoor RH Setpoint Percentage
Status Screen #12	Current Static Pressure and Output Percentage
Status Screen #13	Economizer Percentage, Outdoor Air Wetbulb/Drybulb, and Current CO <sub>2</sub> Level
Status Screen #14	Title 24 Economizer Feedback Status
Status Screen #15	Outdoor Air CFM & Outdoor Air Setpoint
Status Screen #16	Supply Air CFM & Return Air CFM
Status Screen #17	Current Building Pressure & Output Percentage
Status Screen #18	MODGAS Output Percentage & MHGRV Output Percentage

Status Screen #19	Current Modulating Heating & Cooling Output Signal Percentage
Status Screen #20	VCM-X Coil Temperatures for Full Digital, Water Source Heat Pump or Dual Digital OR RNE Coil Temperatures for Full Digital or Water Source Heat Pump
Status Screen #21	VCM-X Coil Temperatures for Full Digital, Water Source Heat Pump or Dual Digital OR RNE Coil Temperatures for Full Digital or Water Source Heat Pump
Status Screen #22	VCM-X Full Digital Module Signal, Water Source Heat Pump Module Signal or Dual Digital Module Signal OR RNE Full Digital Module Signal or Water Source Heat Pump Module Signal
Status Screen #23	Current Head Pressure Cooling or Reheat Setpoint
Status Screen #24	Head Pressure and Condenser Fan #1 Speed
Status Screen #25	Head Pressure and Condenser Fan #2 Speed
Status Screen #26	Head Pressure and Condenser Fan #3 Speed
Status Screen #27	Head Pressure and Condenser Fan #4 Speed
Status Screen #28	Current Preheat-X Leaving Air Temperature and Entering Air Temperature
Status Screen #29	Current Preheat-X Modulating Position and Active Stages
Status Screen #30	Return Air Bypass Damper Signal & Bypass Damper Signal
Status Screens #31-51	Supply Fan and Other Relays
Alarm Status Screens	Alarm Conditions

## VCM-X / RNE Status Screens

### Status

From any menu screen, *press* <STATUS>. The *Unit Selection Screen*, shown below, will appear requesting that you enter the unit ID number.

Enter Unit Address  
Then Press Enter  
Selected Unit#: XXXX  
No Communication

Enter the correct unit ID number of the VCM-X or RNE Controller you want to view and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>. You will then see Setpoint Screen #1. *Press* <ENTER> to save entered data and *press* <↓> to scroll through the screens.

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

### Status Screen 1 - Mode

VCM-X / RNE v1.00  
Occupied Mode  
Vent Mode  
02/15/10 05:00 PM

- Line 2 Displays one of the following:**
- |                      |                      |
|----------------------|----------------------|
| Unoccupied Mode      | Remote FRC Occupied  |
| Occupied Mode        | Override Mode        |
| Holiday Mode         | Zone Demand!         |
| Forced Schedule Mode | OUTPUT FORCE MODE!   |
| SUPPLY AIR CUTOFF!   | High CO2 Level Mode! |
- Line 3 Displays one of the following:**
- |           |                    |              |
|-----------|--------------------|--------------|
| Off Mode  | Dehumid. Mode      | Defrost Mode |
| Vent Mode | Cool Dehumid. Mode |              |
| Cool Mode | Heat Dehumid. Mode |              |
| Heat Mode | Warm Up Mode       |              |
- Line 4 Displays one of the following:**
- MM/DD/YY HH:MM XX (XX = AM or PM)  
Fan Starting Delay and then time will display  
xx Left in WarmUp (Number of Minutes Left)

### Status Screen 2 - Cooling, Heating, Economizer

VCM-X / RNE v1.00  
Cooling Enabled  
Heating Enabled  
Economizer Disabled

- Line 2 Displays one of the following:**
- Cooling Enabled  
Cooling Disabled
- Line 3 Displays one of the following:**
- Heating Enabled  
Heating Disabled
- Line 4 Displays one of the following:**
- Economizer Enabled  
Economizer Disabled

NOTE: On a non-Heat Pump unit configured for Make-Up Air Control, the Heating and Cooling Lockouts are ignored, so Heating and Cooling will always show enabled.

### Status Screen 3 - Mode Enable Temperature & Mode Cooling and Heating Setpoints

VCM-X / RNE v1.00  
Enable Tmp.: XX.X°F  
Cool Spt: XX.X°F  
Heat Spt: XX.X°F

- Line 2 Mode Enable Temperature**
- Can be the Supply Air Temperature, Return Air Temperature, Outdoor Air Temperature, or Space Temperature, depending on which one has been configured as the Mode Enable Sensor.
- Line 3 Cooling Mode Setpoint**
- Based on the current Occupied/Unoccupied Mode of operation.
- Line 4 Heating Mode Setpoint**
- Based on the current Occupied/Unoccupied Mode of operation.



VCM-X / RNE Status Screens

Status Screen 4 - Supply Air Temperature & Setpoint

```
VCM-X / RNE v1.00
Supply Air.: XX.X°F
Supply Spt.: XX.X°F
```

**Line 2 Current Supply Air Temperature**

The Supply Air Temperature is always required. If a Supply Air Temperature Sensor is not installed, the VCM-X / RNE Controller will not operate correctly and will display 0°F.

**Line 3 Current Active Supply Air Setpoint**

This is the Supply Air Setpoint for the mode that the unit is currently operating in. If the Supply Air Reset is configured, this is the calculated setpoint based on the current Reset Source conditions.

Status Screen 5 - Space Temp, Return Air & Slide Adjust

```
VCM-X / RNE v1.00
Space Tmp.: XX.X°F
Return Air.: XX.X°F
Slide Adj.: XX.X°F
```

**Line 2 Space Temperature**

If you are using a Space Temperature Sensor, this line will display the current Space Temperature during the Occupied or Unoccupied Mode.

**Line 3 Return Air Temperature**

This sensor is optional. If a Return Air Temperature Sensor is not used, it will display 0°F.

**Line 4 Slide Adjust**

This is the current value of the Space Temperature offset based on the position of the slide adjust switch on the Space Sensor.

Status Screen 6 / VCM-X - Leaving Water Temperature A

```
VCM-X v1.00
Leaving Water
Temp A: 0.0°F
```

**Line 2-3 Leaving Water Temperature A**

If using the VCM-X Controller and you have a Water Source Heat Pump Unit installed, this screen will appear and display the Leaving Water Temperature of the unit. If this unit has two leaving water temperature sensors, this is the Leaving Water Temperature of System A.

Status Screen 6 / RNE - Leaving Water Temperature 1

```
RNE v1.00
Leaving Water 1
Temp A: 0.0°F
Temp B: 0.0°F
```

**Line 2 Leaving Water Temperature 1**

If using the RNE Controller and you have a Water Source Heat Pump Module installed or if there are two Water Source Heat Pump Modules installed and this is the first Module, then this screen will display Water Temperatures of this Module. If not, this screen will display 0°F.

**Line 3 Leaving Water Temperature A**

This line will display the Leaving Water Temperature of the first Leaving Water Temperature Sensor on a Water Source Heat Pump Module. If using (2) Water Source Heat Pump Modules, this will be the first sensor on the Module with address 1.

**Line 4 Leaving Water Temperature B**

This line will display the Leaving Water Temperature of the second Leaving Water Temperature Sensor on a Water Source Heat Pump Module. If using (2) Water Source Heat Pump Modules, this will be the second sensor on the Module with address 1.

Status Screen 7 / VCM-X - Leaving Water Temperature B

```
VCM-X v1.00
Leaving Water
Temp B: 0.0°F
```

**Line 2-3 Leaving Water Temperature B**

If using the VCM-X Controller and you have a Water Source Heat Pump Unit installed with two leaving water temperature sensors, this screen will display the Leaving Water Temperature of System B.

## VCM-X / RNE Status Screens

### Status Screen 7 / RNE - Leaving Water Temperature 2

```
RNE v1.00
Leaving Water 2
Temp A: 0.0°F
Temp B: 0.0°F
```

**Line 2 Leaving Water Temperature 2**

If using the RNE Controller and a second Water Source Heat Pump Module has been installed and configured, this screen will display Water Temperatures. If not, this screen will display 0°F.

**Line 3 Leaving Water Temperature A**

This line will display the Leaving Water Temperature of the first Leaving Water Temperature Sensor on a Water Source Heat Pump Module. If using (2) Water Source Heat Pump Modules, this will be the first sensor on the Module with address 2.

**Line 4 Leaving Water Temperature B**

This line will display the Leaving Water Temperature of the second Leaving Water Temperature Sensor on a Water Source Heat Pump Module. If using (2) Water Source Heat Pump Modules, this will be the second sensor on the Module with address 2.

### Status Screen 8 - Coil Temp & Setpoint

```
VCM-X / RNE v1.00
Coil Temp...: XX.X°F
Coil Temp Spt: XX.X°F
```

**Line 2 Coil Temperature or Lowest Coil**

If a Suction Pressure Transducer has been installed and configured on the unit, the calculated Evaporator Coil Temperature will appear on this line. If not, this line will display 0°F.

If this unit has multiple digital scroll compressors and has a Full Digital Module or Dual Digital Module installed, this line will display Lowest Coil and will display the lowest of the multiple suction temperatures. The coil temperatures of all the coils will be displayed on Status Screens 19 & 20.

**Line 3 Coil Temperature Setpoint**

During dehumidification, the Coil Suction Temperature Setpoint is automatically reset based on the current space humidity conditions. This is the current calculated Coil Temperature Setpoint based on that reset.

### Status Screen 9 - Outdoor Air Temperature & Outdoor Air Relative Humidity

```
VCM-X / RNE v1.00
Outdoor Tmp: XX.X°F
Outdoor RH.: XX.X%
```

**Line 2 Current Outdoor Air Temperature**

If an Outdoor Air Temperature Sensor has been installed and configured on the unit or if an Outdoor Air Broadcast has been configured on another Unit Controller on the system, the Outdoor Air Temperature will appear on this line. If not, this line will display a temperature that is half way between the Cooling and Heating Lockout Setpoints.

**Line 3 Current Outdoor Air Relative Humidity**

If an Outdoor Humidity Sensor has been installed and configured on the Unit Controller, the Outdoor Air Relative Humidity Percentage will appear on this line. If not, this line will display 0%.

### Status Screen 10 - OA Dewpoint & Dewpoint Temp

```
VCM-X / RNE v1.00
OA Dewpoint.: XX.X°F
Dewpoint Spt: XX.X°F
```

**Line 2 Current Calculated Outdoor Air Dewpoint Temperature**

If both an Outdoor Humidity Sensor and an Outdoor Air Temperature Sensor have been installed and configured on the unit, the calculated Outdoor Air Dewpoint Temperature will appear on this line. If not, this screen displays 0°F.

**Line 3 Current Outdoor Air Dewpoint Setpoint**

The user adjustable Outdoor Air Dewpoint Temperature Setpoint will appear on this line.

VCM-X / RNE Status Screens

Status Screen 11 - Indoor RH & Indoor RH Setpoint

```
VCM-X / RNE v1.00
Indoor RH...: XXX%
Indoor RH Spt: XXX%
```

- Line 2 Current Indoor Relative Humidity Percentage**  
If an Indoor Humidity Sensor has been installed and configured on the unit, the current Indoor Air Relative Humidity Percentage will appear on this line. The installed Indoor Humidity Sensor can be either a Wall Mounted type or a Return Air Mounted type. If an Indoor Humidity Sensor is not installed, this line will display 0%.
- Line 3 Current Indoor Relative Humidity Setpoint Percentage**  
This is the adjustable Indoor Air Relative Humidity Setpoint Percentage that has been set by the user.

Status Screen 12 - Static Pressure & Output %

```
VCM-X / RNE v1.00
Static Pr...: X.XX"
Press Output: XXX%
[Optional Output]
```

- Line 2 Current Static Pressure**  
Requires the installation and wiring of a Duct Static Pressure Sensor. If you do not have a Duct Static Pressure Sensor correctly installed and wired to the controller, this line will display "0.0".
- Line 3 Current Static Pressure Output Signal Percentage**  
Indicates the output signal percentage being supplied to the VFD Controller or Bypass Damper Actuator when you have configured one of these options for your HVAC unit.  
  
If you have not configured Duct Static Pressure Control, this line will display [No Press Out Conf].
- Line 4 Indicates That This is An Optional Output**  
This output may or may not have live data to display.

Status Screen 13 - Economizer %, OA Wetbulb, and CO<sub>2</sub> Level

```
VCM-X / RNE v1.00
Economizer.: XXX %
OA Wetbulb.: XX.X°F
CO2 Level.: XXXXPPM
```

- Line 2 Current Economizer Open Percentage**  
The Economizer is optional. This shows the Outdoor Air Damper open percentage. If Economizer Control is not configured, it will display 0%.
- Line 3 Current Wetbulb/Drybulb Temperature**  
The Outdoor Air Wetbulb Temperature is optional. To display the Outdoor Air Wetbulb Temperature, you must install an Outdoor Air Temperature Sensor (or an Outdoor Air Temperature Broadcast) and an Outdoor Air Relative Humidity Sensor. If these conditions exist, this line will display the calculated Outdoor Air Wetbulb Temperature. If these conditions do not exist, it will display 0°F.
- Line 4 Current CO<sub>2</sub> Level**  
The CO<sub>2</sub> Level is optional. You must install and configure a CO<sub>2</sub> Sensor to display the CO<sub>2</sub> Level. If a CO<sub>2</sub> Sensor is not installed and configured, this line will display 0 PPM.

Status Screen 14 - Title 24 Economizer Feedback Status

```
VCM-X / RNE v1.00
Economizer
Feedback X%
[Only For Title 24]
```

- Line 3 Economizer Feedback Open Percentage**  
This shows the Outdoor Air Damper open percentage, whether the unit is configured for Title 24 Economizer Control or simply has a Minimum Outdoor Air Damper position configured. If Title 24 Economizer Control is not configured, it will display 0%.
- Line 4 Indicates That This is Only For Title 24 Economizer**

Status Screen 15 - Outdoor Air CFM & Setpoint

```
VCM-X / RNE v1.00
OA CFM: 0.00 K
OA Sp.: 0.00 K
[Optional Input]
```

- Line 2 Outdoor Air CFM**  
If an outdoor air airflow monitoring station is being used, this is the current CFM reading of that device. K = 1000
- Line 3 Outdoor Air Setpoint**  
If control of the OA Damper based on CFM is configured, this is the controlling setpoint. K = 1000
- Line 4 Indicates That This is An Optional Input**  
This input may or may not have live data to display.

## VCM-X / RNE Status Screens

### Status Screen 16 - Supply Air & Return Air CFM

```
VCM-X / RNE v1.00
SA CFM:      0.00 K
RA CFM:      0.00 K
[Optional Inputs]
```

- Line 2 Supply Air CFM**  
If a supply air airflow monitoring station is being used, this is the current CFM reading of that device. K = 1000
- Line 3 Return Air CFM**  
If a return air airflow monitoring station is being used, this is the current CFM reading of that device. K = 1000
- Line 4 Indicates That These are Optional Inputs**  
These inputs may or may not have live data to display.

### Status Screen 17 - Building Pressure & Output %

```
VCM-X / RNE v1.00
Building Pr.: X.XX"
Press Output: XXX%
[ Optional Outputs ]
```

- Line 2 Current Building Pressure**  
Indicates the current Building Pressure. This display requires the installation of a Building Pressure Sensor.  
  
If you don't have a Building Pressure Sensor correctly installed and wired to the controller, this line will display "0.0".
- Line 3 Current Building Pressure Output Signal Percentage**  
Indicates the output signal percentage being supplied to the Exhaust Fan VFD controller or Exhaust Damper Actuator when you have configured one of these options for your HVAC unit.  
  
If you have not configured Building Pressure Control, this line will display [No Press Out Cnfg].
- Line 4 Indicates That These Are Optional Outputs**  
This output may or may not have live data to display.

### Status Screen 18 - MODGAS Output % & MHGRV Output %

```
VCM-X / RNE v1.00
MODGAS Pos.: XXX%
MHGRV Pos...: XXX%
[Optional Equipment]
```

- Line 2 Current MODGAS Heating Output Signal**  
Indicates the percentage of the output signal being supplied to the MODGAS Controller when you have one connected to your HVAC unit. If you do not have a MODGAS controller connected to your Unit Controller, this screen will indicate [MODGAS NOT CONNECTED].
- Line 3 Current MHGRV Reheat Valve Output Signal Percentage**  
Indicates the percentage of the output signal being supplied to the MHGRV controller when you have one connected to your Unit Controller. If you do not have an MHGRV controller connected to your Unit Controller, this screen will indicate [MHGRV NOT CONNECTED].
- Line 4 Optional Equipment**  
Indicates that these outputs are optional and therefore may or may not have live data to display.

### Status Screen 19 - Mod Heating & Cooling %

```
VCM-X / RNE v1.00
Mod Cooling:  XXX%
Mod Heating:  XXX%
[ Optional Outputs ]
```

- Line 2 Current Modulating Cooling Output Signal Percentage**  
Indicates the percentage of the output signal being supplied to a Modulating Cooling device when you have configured this option for your HVAC unit. If reverse acting is configured, this percentage will be reversed. See the following examples for clarification:  
  
**Standard Operation:**  

<b>0-10 VDC</b>	0% = 0 VDC	100% = 10 VDC
<b>2-10 VDC</b>	0% = 2 VDC	100% = 10 VDC
<b>1.5-5.0 VDC</b>	0% = 1.5 VDC	100% = 5.0 VDC

  
**Reverse Acting Operation:**  

<b>0-10 VDC</b>	0% = 10 VDC	100% = 0 VDC
<b>2-10 VDC</b>	0% = 10 VDC	100% = 2 VDC

  
If you do not have a Modulating Cooling device connected to your HVAC unit and configured, this screen will indicate [No Mod Cool Cnfg].

If this unit has a Dual Digital Module, Full Digital Module, or Water Source Heat Pump with multiple Digital Scroll Compressors, this line will be blank.

- Line 3 Current Modulating Heating Output Signal Percentage**  
Indicates the percentage of the output signal being supplied to a Modulating Heating device when you have configured this option for your HVAC unit. If Reverse Acting operation is configured, this percentage will be Reversed. See the following examples for clarification:

VCM-X / RNE Status Screens

**Standard Operation:**

**0-10 VDC**    0% = 0 VDC            100% = 10 VDC

**2-10 VDC**    0% = 2 VDC                    100% = 10 VDC

**Reverse Acting Operation:**


**0-10 VDC**    0% = 10 VDC            100% = 0 VDC

**2-10 VDC**    0% = 10 VDC            100% = 2 VDC

If you do not have a Modulating Heating device configured, this screen will indicate [No Mod Heat Config].

**Line 4    Indicates That These Are Optional Outputs**

These outputs may or may not have live data to display.

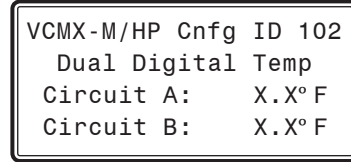

**Line 2    Dual Digital Temperature**

If using a VCM-X E-BUS Modular Controller with a Dual Digital Module (OE370-23-DD) or if you are using the VCM-X E-BUS WSHP Controller with two Digital Scroll Compressors, this screen will appear.


**Line 3    Circuit A Temperature**

This is the current Coil Suction Temperature of Circuit A.

**Line 4    Circuit B Temperature**

This is the current Coil Suction Temperature of Circuit B.

Status Screen 20 / VCM-X - Full Digital Module OR Dual Digital Module

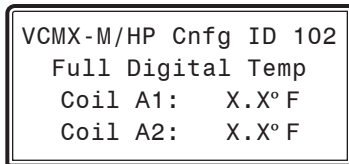

**Line 2    Full Digital Temperature**

If using a VCM-X E-BUS Modular Controller with a Full Digital Module (OE370-23-FD-A) or if you are using the VCM-X E-BUS WSHP Controller with multiple Digital Scroll Compressors, this screen will appear.


**Line 3    Coil A1 Temperature**

This is the current Coil Suction Temperature of Compressor A1.

**Line 4    Coil A2 Temperature**

This is the current Coil Suction Temperature of Compressor A2.

Status Screen 20 / RNE - Full Digital Module

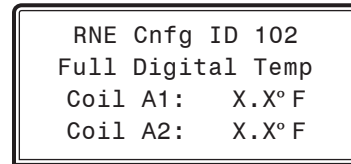

**Line 2    Full Digital Temperature**

If using a Full Digital Module (OE370-23-FD-A) or Water Source Heat Pump Module (OE334-23-WPM-A), this screen will appear.

**Line 3    Coil A1 Temperature**

This is the current Coil Suction Temperature of Compressor A1.

**Line 4    Coil A2 Temperature**

This is the current Coil Suction Temperature of Compressor A2.

## VCM-X / RNE Status Screens

### Status Screen 21 / VCM-X - Full Digital Module

```
VCMX-M/HP Cnfg ID 102
Full Digital Temp
Coil B1:      X.X° F
Coil B2:      X.X° F
```

**Line 2 Full Digital Temperature**

If using a VCM-X E-BUS Modular Controller with a Full Digital Module (OE370-23-FD-A) or if you are using the VCM-X E-BUS WSHP Controller with at least two Digital Scroll Compressors, this screen will appear. Values will show zero if not using 4 Digital Scroll Compressors.

**Line 3 Coil B1 Temperature**

This is the current Coil Suction Temperature of Compressor B1.

**Line 4 Coil B2 Temperature**

This is the current Coil Suction Temperature of Compressor B2.

### Status Screen 21 / RNE - Full Digital Module

```
RNE Cnfg ID 102
Full Digital Temp
Coil B1:      X.X° F
Coil B2:      X.X° F
```

**Line 2 Full Digital Temperature**

If using a Full Digital Module (OE370-23-FD-A) or Water Source Heat Pump Module (OE334-23-WPM-A), this screen will appear. If not using (2) Full Digital Modules, this screen will show no values.

**Line 3 Coil B1 Temperature**

This is the current Coil Suction Temperature of Compressor B1.

**Line 4 Coil B2 Temperature**

This is the current Coil Suction Temperature of Compressor B2.

### Status Screen 22 / VCM-X - Full Digital Signal OR Dual Digital Signal

```
VCMX-M/HP Cnfg ID 102
Full Digital
Stage 1 Sig:   0%
Stage 2 Sig:   0%
```

**Line 2 Full Digital Signal**

If using a VCM-X E-BUS Modular Controller with a Full Digital Module (OE370-23-FD-A) or if you are using the VCM-X E-BUS WSHP Controller with at least two Digital Scroll Compressors, this screen will appear.

**Line 3 Stage 1 Signal Percentage**

This is the modulating signal percentage for Compressor 1 (A1) if there are two Digital Scroll Compressors, or for Compressors 1 (A1) and 3 (B1) if there are four Digital Scroll Compressors.

**Line 4 Stage 2 Signal Percentage**

This is the modulating signal percentage for Compressor 2 (A2) if there are two Digital Scroll Compressors, or for Compressors 2 (A2) and 4 (B2) if there are four Digital Scroll Compressors.

```
VCMX-M/HP Cnfg ID 102
Dual Digital
Comp A Sig:    0%
Comp B Sig:    0%
```

**Line 2 Dual Digital Signal**

If using a VCM-X E-BUS Modular Controller with a Dual Digital Module (OE370-23-DD) or if you are using the VCM-X E-BUS WSHP Controller with two Digital Scroll Compressors, this screen will appear.

**Line 3 Compressor A Signal**

This is the modulating signal percentage for Circuit A Compressor 1 (A1).

**Line 4 Compressor B Signal**

This is the modulating signal percentage for Circuit B Compressor 1 (B1).

VCM-X / RNE Status Screens

Status Screen 22 / RNE - Full Digital Signal

```
RNE Cnfg ID 102
Full Digital
Stage 1 Sig: 0%
Stage 2 Sig: 0%
```

- Line 2 Full Digital Signal**  
If using a Full Digital Module (OE370-23-FD-A) or Water Source Heat Pump Module (OE334-23-WPM-A) this screen will appear.
- Line 3 Stage 1 Signal Percentage**  
This is the modulating signal percentage for Compressor 1 if there are two Compressors, or for the first two Compressors if there are four Compressors.
- Line 4 Stage 2 Signal Percentage**  
This is the modulating signal percentage for Compressor 2 if there are two Compressors, or for the last two Compressors if there are four Compressors.

Status Screen 23 - Head Pressure Setpoint

```
VCMX-M/RNE Cnfg ID 102
Current
Head Pr Sp: 0 PSI
```

- Line 2-3 Current Head Pressure Cooling or Reheat Setpoint**  
If you are using the VCM-X E-BUS Modular, VCM-X E-BUS WSHP, or RNE Controller and have a One Condenser or Two Condenser Head Pressure Module attached to the unit, the Head Pressure Cooling or Reheat Setpoint will display, depending on what mode the Module is in. This status value will show 0 if not in the Cooling or Dehumidification Mode.

Status Screens 24 & 25 - Head Pressure Condenser Fan #1 & #2

```
VCMX-M/RNE Cnfg ID 102
Cond. Fan Sect. #1
Head Pr.....: 0PSI
Cond Fan Spd: 0%
```

```
VCMX-M/RNE Cnfg ID 102
Cond. Fan Sect. #2
Head Pr.....: 0PSI
Cond Fan Spd: 0%
```

- Line 2 Condenser Fan #1 or #2**  
If you are using the VCM-X E-BUS, VCM-X WSHP or RNE Controller and have a One Condenser or Two Condenser Head Pressure Module attached to the unit, this line displays Condenser Fan #1 or #2.
- Line 3 Head Pressure**  
This line indicates the highest of up to 4 current Head Pressure readings on a One Condenser Head Pressure Module. If using a Two Condenser Head Pressure Module, this line indicates the highest of the first 2 current Head Pressure readings on that module.
- Line 4 Condenser Fan Speed**  
This line displays the speed of the associated Condenser Fan (0-100%) that is currently necessary to maintain the Head Pressure Setpoint.

Status Screen 26 & 27 - Head Pressure Condenser Fan #3 & #4

```
VCMX-M/RNE Cnfg ID 102
Cond. Fan Sect. #3
Head Pr.....: 0PSI
Cond Fan Spd: 0%
```

```
VCMX-M/RNE Cnfg ID 102
Cond. Fan Sect. #4
Head Pr.....: 0PSI
Cond Fan Spd: 0%
```

- Line 2 Condenser Fan #3 or #4**  
If you are using the VCM-X E-BUS, VCM-X WSHP or RNE Controller and have a second Two Condenser Head Pressure Module attached to the unit, this line displays Condenser Fan #3 or #4.
- Line 3 Head Pressure**  
This line indicates the highest of the second two Head Pressure readings of the Two Condenser Head Pressure Module.
- Line 4 Condenser Fan Speed**  
This line displays the speed of the associated Condenser Fan (0-100%) that is currently necessary to maintain the Head Pressure Setpoint.

## VCM-X / RNE Status Screens

### Status Screen 28 - PREHEAT-X Controller Current Leaving Air and Entering Air Temperature

```
VCM-X / RNE v1.00
Preheat-X Temps
Leaving Air: XX.XX
Entering Air: XX.XX
```

- Line 3 Current PREHEAT-X Leaving Air Temperature**  
If a Leaving Air Temperature Sensor(s) has been installed and configured on the PREHEAT-X, this screen will display the current Pre-Heat Leaving Air Temperature. If these conditions do not exist, it will display 0°F.
- Line 4 Current PREHEAT-X Entering Air Temperature**  
If an Entering Air Temperature Sensor has been installed and configured on the PREHEAT-X, this screen will display the current Pre-Heat Entering Air Temperature. If these conditions do not exist, it will display 0°F.

### Status Screen 29 - PREHEAT-X Controller Modulating Position and Active Stages

```
VCM-X / RNE v1.00
Preheat-X Status
Mod Pos.....: XXX%
Active Stages: X
```

- Line 3 Current PREHEAT-X Modulating Position**  
If you do have a PREHEAT-X Controller connected to the VCB-X Controller and are using Modulating Heat, this is the current modulating position of the gas valve.
- Line 4 Current PREHEAT-X Active Stages**  
If you have a PREHEAT-X Controller connected to the VCB-X Controller, this is the number of Active Stages that have been configured in the PREHEAT-X Controller's # of Heat Stages Configuration Screen.

### Status Screen 30 - Return Air Damper Signal & Bypass Damper Signal

```
VCM-X / RNE v1.00
Return Dmp..: XXX%
Bypass Dmp..: XXX%
[Optional Outputs]
```

- Line 2 Current Return Air Damper Signal**  
Indicates the current Output Signal percentage being sent to the Return Air Damper Actuator. If you haven't configured a Return Air Bypass Damper, [No Return Dmp Config] will be displayed instead.
- Line 3 Current Return Air Bypass Damper Signal**  
Indicates the current Output Signal percentage being sent to the Return Air Bypass Damper Actuator. If you haven't configured a Return Air Bypass Damper, [No Bypass Dmp Config] will be displayed instead.
- Line 4 Indicates That These Are Optional Outputs**  
This output may or may not have live data to display.

### Status Screens 31-51 - Supply Fan Relay

```
VCM-X / RNE v1.00
Fan Relay: OFF
Cool Stage: OFF
Heat Stage: OFF
```

- Line 2 Current Supply Fan Relay Status**  
The letters FRC will appear before the colon if this Relay is in a Force Mode. On screens 31 to 51, this line will indicate the relays use and the ON/OFF condition for that relay. Possible options are as follows:  

Not Used	Pre-Heater
Heat Stage	Alarm Relay
Cool Stage	Override
Warmup Mode	Occupied
Rev Valve	Economizer (OA Damper)
Gas Re-Heat (HGR Relay)	Heat Wheel
Exhaust Fan	Emergency Heat
- Line 3 Current relay status and description of what it is configured for**  
The letters FRC will indicate the relay is forced to its current condition.
- Line 4 Current relay status and description of what it is configured for**  
The letters FRC will indicate the relay is forced to its current condition.



---

**Alarm Status**


---

Press <ALARMS>. The *Unit Selection Screen* will be displayed. Enter the Unit ID of the controller you wish to search and press <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then press <↓>. The System Manager or Service Tool will search for any active alarms on the unit and the following screen will appear:

VCM-X / RNE v1.00  
 NO ALARMS OR  
 ALARMS PRESENT  
 SCROLL DOWN TO VIEW

**Line 2-3 NO ALARMS! OR ALARMS PRESENT**

**If alarms are present, select VCMX /RNE Alarms or Module Alarms.** Press <↓> to scroll through all active alarms.

**The screens that follow will display one or more of the following:**

**VCM-X ALARMS**

NO SUPPLY AIR TEMP  
 NO OUTDOOR AIR TEMP  
 SPACE SENSOR FAILURE  
 RETURN SENSOR FAILURE  
 MODULE ALARM  
 MECH COOLING FAILURE  
 MECH HEATING FAILURE  
 FAN PROVING ALARM  
 DIRTY FILTER ALARM  
 EMERGENCY SHUTDOWN  
 LO SUPPLY AIR ALARM  
 HI SUPPLY AIR ALARM  
 LOW CONTROL TEMP  
 HIGH CONTROL TEMP  
 CO2 SENSOR FAILURE  
 BAD OUTDOOR AIR CFM  
 TITLE 24 ECONOMIZER AIR TEMP SENSOR FAIL  
 TITLE 24 ECONOMIZER DAMPER FAIL  
 TITLE 24 ECONO ECONOMIZING BUT SHOULDN'T  
 TITLE 24 ECONOMIZER EXCESS OUTDOOR AIR  
 TITLE 24 ECONO NOT ECONOMIZING WHEN IT SHOULD

**MODULE ALARMS**

Head Pressure 1  
 Head Pressure 2  
 Full Digital 1  
 Full Digital 2  
 WSHP Module 1  
 WSHP Module 2

Press <ENTER> to select the module. Press <↓> to scroll through all active alarms.

For Alarm Definitions, see the *VCM-X Modular E-BUS* or the *RNE Controller Technical Guide*.

## VAV/Zone Configuration Screens

### VAV Zone Configuration

In order to correctly set up the VAV/Zone Controller, you must first configure several parameters in regard to the type of system and operating parameters for the VAV/Zone Controller you have installed. Most of these values and operating parameters are only set once at the initial system setup and are never changed.

#### Modular Service Tool Instructions

From any *Menu Screen*, press the <CONFIGURATION> button. The *Unit Selection Screen*, shown below, will appear requesting that you enter the unit ID number.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the correct unit ID number of the VAV/Zone controller you want to configure, and press <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then press <↓>. You will then see *Unit Configuration Screen #1*. Press <ENTER> to save entered data and press <↓> to scroll through the screens.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

#### System Manager SD Instructions

From any *Main screen*, press <SETPOINTS>. The screen below will appear because this option requires passcode clearance. Only a Level 2 passcode can change setpoints.

```
THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
```

If the correct passcode was entered, the *Unit Selection Screen* will be displayed.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the Unit ID of the controller you wish to change schedules for and press <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then press <↓>.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

The following screen will be displayed:

```
Change Setpoints
Configure Unit
Save/Copy/Restore
```

Scroll down to the 'Configure Unit' option and press <ENTER>. This will take you to the first Configuration Screen shown below.

---

### Configuration Screen #1 - Box Configuration

---

```
XX Box Cnfg IDXXXX
Box Configuration
COOLING ONLY BOX
Use < Or > To Change
```

This Box Control Code will operate in one of four possible modes. The box designation will display on the top line of all screens. Select one of the following options:

- 0 = COOLING ONLY BOX (will display as CO Box)
- 1 = H/C CHANGEOVER BOX (will display as HC Box)
- 2 = SERIES FAN BOX (will display as SF Box)
- 3 = PARALLEL FAN BOX (will display as PF Box)

---

### Configuration Screen #2 - Damper Operation

---

```
XX Box Cnfg IDXXXX
Damper Operating
Mode: DIRECT ACTING
Use < Or > To Change
```

Select Direct Acting or Reverse Acting. If the damper opens in a *clockwise* direction, it is DIRECT ACTING. If the damper opens in a *counter-clockwise* direction, it is REVERSE ACTING.

---

CAUTION: If you change this setting, you MUST cycle power to the controller to allow it to re-calibrate the damper feedback positions for its new direction of control!

---

### Configuration Screen #3 - Voting Zone

```
XX Box Cnfg  IDXXXX
Is This Box a
Voting Zone.: YES
Use < 0r > To Change
```

Select YES if this is a Zoned System so that the box can be included as a voting zone.

### Configuration Screen #4 - Pressure Independent Airflow Constant

```
XX Box Cnfg  IDXXXX
Pr Independent Boxes
Airflow @ 1" WG
Constant.: 1200 CFM
```

If this is a Pressure Independent Box, you must enter this airflow constant so that the CFM readings can be correctly calculated. This airflow constant is provided by the box manufacturer and depends on the diameter of the duct.

### Configuration Screen #5 - Expansion Relays Heating Stages

```
XX Box Cnfg  IDXXXX
Expansion Relays
[Optional]
Steps of Reheat.: 2
```

If you require the VAV/Zone Controller to control reheat for the zone it is installed in, you must include a relay expansion board and then configure the number of heating stages (1, 2, or 3) that it will be controlling whenever there is a heating demand in the space. *Enter <0>* if you don't require this option.

### Configuration Screen #6 - Proportional Heating Signal

```
XX Box Cnfg  IDXXXX
Proportional Heating
Signal.: 0 - 10 VDC
Use < 0r > To Change
```

Select 0-10 VDC or 2-10 VDC as the range of the proportional heat output.

### Configuration Screen #7 - Box Heat Allow

```
XX Box Cnfg  IDXXXX
Allow Box Heat With
HVAC Heat....: NO
Use < 0r > To Change
```

Select YES to allow the Heating Relay's Controlling Box Heat to remain on even when the HVAC unit is in Supply Air Heating Mode. This is used as a method to provide supplemental heat if for some reason the HVAC heat cannot satisfy the heating demand.

### Configuration Screen #8 - Main Fan Status

```
XX Box Cnfg  IDXXXX
This Unit Needs Main
Fan Status...: NO
Use < 0r > To Change
```

This setting only applies to the unoccupied mode of operation. Select YES to activate the heating stages only when the main fan is operating on non-fan terminal units. For series fan terminal units, if this setting is set to YES, the series box fan will only run when the main HVAC unit fan is running or when a space heating demand is made. For series fan terminal units, if this setting is set to NO, the series box fan will only run when a space heating demand is made. This setting has no effect on the parallel flow fan terminal unit.

### Configuration Screen #9 - Push-Button Override

```
XX Box Cnfg  IDXXXX
Push-Button Override
Group ID #: 1
```

During Unoccupied Mode, all zones with a corresponding Group ID # will resume Occupied operation whenever any of the zones in that group has its push-button depressed to initiate an override condition. This allows you to group zones in various areas of the building. For example, individual tenants with several offices could restore occupied mode for just their zones and not affect other zones in the building.

The default group ID number for all VAV/Zone Controllers is set at the factory to 1. If you don't want a specific zone(s) to be part of that group, you must give each one a distinct Group ID number between 2 and 16. Setting a zone's Group ID number to 0 will disable the Space Sensor Override Button function.

If you don't want a specific zone to be a part of any group, *enter <0>* for its Group ID #.

## VAV/Zone Configuration Screens

### Configuration Screen #10 - Dump Zone

```
XX Box Cnfg  IDXXXX
Is This A Dump Zone
(No Actuator): NO
Use < Or > To Change
```

A “Dump Zone” is used when you want to control a duct heater or baseboard heater independently. A VAV/Zone Controller board with a relay expansion board is used for this purpose. No damper or actuator is used. If you need to control an auxiliary heater, select YES; otherwise, select NO.

### Configuration Screen #11 - HVAC Unit is on Separate Loop

```
XX Box Cnfg  IDXXXX
HVAC Unit is on
Separate Loop: NO
Use < Or > To Change
```

If this system has 1 HVAC unit controlling boxes on multiple loops and the HVAC unit is on a different loop than this box, select YES; otherwise, select NO.

### VAV/Zone Controller Setpoints

#### Modular Service Tool Instructions

From any menu screen, *press* <SETPOINTS>. The *Unit Selection Screen*, shown below, will appear requesting that you enter the unit ID number.

Enter Unit Address  
Then Press Enter  
Selected Unit#: XXXX  
No Communication

Enter the correct unit ID number of the VCM-X or RNE Controller you want to change Setpoints for and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>. You will then see Setpoint Screen #1. *Press* <ENTER> to save entered data and *press* <↓> to scroll through the screens.

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

#### System Manager SD Instructions

From any Main screen, *press* <SETPOINTS>. The screen below will appear because this option requires passcode clearance. Only a Level 2 passcode can change setpoints.

THIS ACTION REQUIRES  
PASSCODE CLEARANCE  
Enter Passcode: XXXX

If the correct passcode was entered, the *Unit Selection Screen* will be displayed.

Enter Unit Address  
Then Press Enter  
Selected Unit#: XXXX  
No Communication

Enter the Unit ID of the controller you wish to change schedules for and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>.

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

The following screen will be displayed:

Change Setpoints  
Configure Unit  
Save/Copy/Restore

Scroll to the 'Change Setpoints' option and *press* <ENTER>. This will take you to the first Setpoints Screen shown below.

### Setpoint Screen #1 - Occupied Setpoints

XX Box Spts IDXXXX  
Occupied Setpoints  
Cooling.....: XX°F  
Heating.....: XX°F

Enter the **Occupied Cooling Setpoint** as the maximum temperature you would like the zone to reach before modulating the damper open to bring in more cold air to cool the space. Enter the **Occupied Heating Setpoint** as the minimum temperature you would like the zone to reach before activating the Reheat Stages on the optional Expansion Relay board. If this is a Cooling Only box that doesn't contain reheat, this setpoint will be ignored.

Description	Minimum	Default	Maximum
Cooling Setpoint	50°F	74°F	90°F
Heating Setpoint	50°F	70°F	90°F

### Setpoint Screen #2 - Unoccupied Setbacks

XX Box Spts IDXXXX  
Unoccupied Setbacks  
Cooling SetUp: XX°F  
Heating SetBk: XX°F

During unoccupied hours, the Occupied Cooling Setpoint is adjusted up by the amount entered for the Cooling SetUp. The Occupied Heating Setpoint is adjusted down by the amount entered for the Heating SetBk.

Description	Minimum	Default	Maximum
Cooling SetUp	0°F	+10°F	+30°F
Heating SetBk	0°F	-10°F	-30°F

# VAV/ZONE CONTROLLER PROGRAMMING

## VAV/Zone Setpoint Screens

### Setpoint Screen #3 - AHU Heat Call Space Temp

```
XX Box Spts IDXXXX
AHU Heat Call
Space Temp...: XX°F
```

This setpoint allows you to set a Space Temperature that will cause the VAV/Zone Controller to send a call for heat to the HVAC unit. This only occurs in the Unoccupied Mode.

Description	Minimum	Default	Maximum
AHU Heat Call Space Temp	50°F	70°F	90°F

### Setpoint Screen #4 - Auxiliary Heat Setpoint

```
XX Box Spts IDXXXX
Auxiliary Heat
Setpoint...: XX°F
```

This setpoint allows you to set a Space Temperature that will enable the Auxiliary Heat Relay (Relay 4) on the VAV/Zone Controller Re-heat Expansion Board for heating options other than box heat, such as baseboard heat or an external duct heater. This could control a stage of electric heat or an on/off hot water valve. The Auxiliary Heat Relay will energize at .5°F below this setpoint and will de-energize at .5°F above this setpoint. The Auxiliary Heat will continue to function regardless of the HVAC Mode the unit is in and at any airflow condition.

Description	Minimum	Default	Maximum
Auxiliary Heat Setpoint	50°F	70°F	90°F

### Setpoint Screen #5 - Damper Airflow Integral

```
XX Box Spts IDXXXX
Damper/Airflow Spt
Integral [Ki]...: XXX
```

The VAV/Zone Controller normally opens its damper based on a Proportional Error from Setpoint. That means if the zone temperature is 4°F from setpoint, the damper would be 100% open, or it would be modulating to provide the Maximum CFM on Pressure Independent boxes. If the error is less than 4°F, the damper may stagnate at that position and never satisfy the zone. If you add **Integral** into the damper calculation process, this will cause the damper or airflow calculations to continue to increase as long as the zone temperature is still above the setpoint. That means it can provide 100% or Maximum CFM before the 4°F error is achieved, bringing the zone under control faster than it normally would. Start with a small (5 or 10) value, if you use this, and monitor the effect it has. If you enter too large a value, you can create “hunting” situations that can cause the damper actuator to prematurely wear out.

Description	Minimum	Default	Maximum
Integral	0	0	100

### Setpoint Screen #6 - Damper Airflow Max & Vent Min

```
XX Box Spts IDXXXX
Damper/Airflow Spt
Maximum...: XXX %
Vent Min...: XXX %
```

The VAV/Zone Controller will not allow the damper or airflow calculation to exceed the Maximum setpoint while it is allowing the damper to modulate. During Vent mode when there is no heating or cooling demand, the damper or airflow will maintain at least the Vent Min amount of airflow into the zone for ventilation.

Description	Minimum	Default	Maximum
Maximum	0% or 0 CFM	100% or 1000 CFM	100% or 30000 CFM
Vent Min	0% or 0 CFM	25% or 250 CFM	100% or 30000 CFM

### Setpoint Screen #7 - Damper Airflow Cool/Heat Minimum

```
XX Box Spts IDXXXX
Damper/Airflow Spt
Cool Min...: XXX %
Heat Min...: XXX %
```

During Supply Air Cooling Mode, if the space being served by this damper is satisfied and has no cooling demand, the damper will close to this Cool Min setting. This provides a minimum amount of airflow into the space for ventilation, even if the space does not require additional cooling. During Supply Air Heating Mode, if the space being served by this damper is satisfied and has no heating demand, the damper will close to this Heat Min setting. This provides a minimum amount of airflow into the space for ventilation, even if the space does not require additional heating.

Description	Minimum	Default	Maximum
Cool Min	0% or 0 CFM	10% or 1000 CFM	100% or 30000 CFM
Heat Min	0% or 0 CFM	10% or 100 CFM	100% or 30000 CFM

### Setpoint Screen #8 - Damper Airflow Night Min and Fan On Min

```

XX Box Spts IDXXXX
Damper/Airflow Spt
Night Min.:    XXX %
Fan On Min.:   XXX %
    
```

The Night Min position is the position the damper will move to when the system is in Pushbutton Override Mode and this particular damper is not part of that Override Group. When not in Pushbutton Override, pressure independent boxes will only go to the Night Min CFM setpoint position if it is set to 0. Pressure dependent boxes will always stay at the Night Min position. This Night Min position only affects non fan powered boxes. The Fan On Min is the minimum damper or airflow setting used to activate the parallel fan if installed. Pressure Independent = CFM. Pressure Dependent = %.

Description	Minimum	Default	Maximum
Night Min	0% or 0 CFM	0% or 0 CFM	100% or 9999 CFM
Fan On Min	0% or 0 CFM	25% or 250 CFM	100% or 9999 CFM

### Setpoint Screen #9 - Damper Airflow Reheat Min

```

XX Box Spts IDXXXX
Damper/Airflow Spt
Reheat Min.:    XXX %
    
```

The Reheat Min is the damper or airflow setting used during the Space Reheat Mode of operation.

Description	Minimum	Default	Maximum
Reheat Min	0% or 0 CFM	0% or 0 CFM	100% or 30000 CFM

### Setpoint Screen #10 - Damper Airflow Fixed Position

```

XX Box Spts IDXXXX
Damper/Airflow Spt
Fixed Pos:      XXX %
    
```

Many times while troubleshooting a system, it is useful to have the zone damper set to a specific damper position or airflow setting. This setpoint can be used to determine where the damper/airflow will remain when the VAV/Zone Controller receives a *Force to Fixed Position* command.

Description	Minimum	Default	Maximum
Fixed Pos	0% or 0 CFM	0% or 0 CFM	100% or 9999 CFM

### Setpoint Screen #11 - SAT HVAC Mode Deadband

```

XX Box Spts IDXXXX
SAT HVAC Mode
Deadband.:    XX°F
    
```

If the supply air temperature is above the space temperature by this amount, the VAV/Zone Controller enters the Supply Air Heating Mode. It will remain in the Supply Air Heating Mode until the supply air drops to 2°F above the space temperature. At that point the unit enters the Supply Air Vent Mode and remains there until the supply air drops this deadband below the space temperature. At that point the VAV/Zone Controller enters the Supply Air Cooling Mode and will remain there until the supply air temperature rises to 2°F below the space temperature.

Description	Minimum	Default	Maximum
SAT HVAC Mode Deadband	0°F	10°F	20°F

### Setpoint Screen #12 - Zone Alarm Offsets

```

XX Box Spts IDXXXX
Zone Alarm Offsets
Hi Zone.....:  XX°F
Lo Zone.....:  XX°F
    
```

The VAV/Zone Controller can be setup to generate an alarm anytime the box goes into the Occupied Mode and the Zone Temperature exceeds the user-defined alarm limits for a user-defined period of time. A High Temperature Alarm Setpoint is created by adding the Hi Zone Alarm offset to the current Cooling Setpoint. The Low Temperature Alarm Setpoint is created by adding the Lo Zone Alarm offset to the current Heating Setpoint. If the zone temperature exceeds either of these limits for a period defined by the Alarm Delay setpoint, the controller can generate an alarm callout if all the optional hardware components required for this to occur are installed.

Description	Minimum	Default	Maximum
Hi Zone Alarm	+1°F	+30°F	+50°F
Lo Zone Alarm	-1°F	-30°F	-50°F

# VAV/ZONE CONTROLLER PROGRAMMING

## VAV/Zone Setpoint Screens

### Setpoint Screen #13 - Zone Alarm Delay

```
XX Box Spts IDXXXX
Zone Alarm Delay
Must Be Out Of
Limits For.: XXX Min
```

As mentioned above, if you configure the controller to generate zone temperature alarms, this is the amount of time after the box goes into the Occupied Mode that the temperature must be outside the alarm limits before an alarm is generated.

Description	Minimum	Default	Maximum
Out of Limits	1 Min	30 Min	300 Min

### Setpoint Screen #14 - Day/Night Schedule

```
XX Box Spts IDXXXX
Day/Night Schedule
Control #: X
0=AHU 1-5=Scheduler
```

This screen allows you to set the VAV/Zone Controller to operate on a remote schedule instead of the schedule that is contained in the VCM-X or RNE Controller. Enter <0> to operate on the AHU schedule. Enter <1-5> to use an external schedule. A GPC Plus is required for schedules 1-5.

Description	Minimum	Default	Maximum
Schedule Control Number	0	0	1 to 5

### Setpoint Screen #15 - Maximum Slide Offset

```
XX Box Spts IDXXXX
Maximum Slide Offset
Effect on Spt.: X°F
```

If the Flush Mount Wall Sensor has the optional Setpoint Slide Adjust, this is the maximum amount you can adjust the heating and cooling setpoints up or down as the slide is moved from the center position to its full up or down position.

Description	Minimum	Default	Maximum
Effect on SP	0°F	0°F	6°F

### Setpoint Screen #16 - Push-Button Override Duration

```
XX Box Spts IDXXXX
Push-Button Override
Duration : X.X Hr
```

If the Flush Mount Wall Sensor has the optional Push-Button Override, this is the amount of the VAV/Zone Controller will resume using its Occupied Setpoints during unoccupied mode. This will generate a call for the Air Handler to start its fan and provide heating or cooling, depending on how you configure the Air Handler.

Description	Minimum	Default	Maximum
Duration	0.0 Hr	0.0 Hr	8.0 Hr

### Setpoint Screen #17 - Maximum EMS Offset

```
XX Box Spts IDXXXX
Maximum EMS Setpoint
Offset...: XX°F
```

If the Energy Management System (EMS) is activated, the heat and cool setpoints can be spread apart by this amount.

Description	Minimum	Default	Maximum
Maximum EMS Setpoint Offset	0°F	0°F	30°F

### Setpoint Screen #18 - Sensor Calibration for Space Temp and Supply Air Temp

```
Sensor Calibration
SPC: XXX.X° XXX.X°
SAT: XXX.X° XXX.X°
[SAT Only if Sensor]
```

The Thermistor Type III sensor readings can be calibrated. Enter a Positive value to increase a reading and a Negative value to decrease a reading.

NOTE: The Supply Air Temperature calibration offset only operates on the reading when the VAV/Zone Controller has its own Supply Air Temperature sensor installed on the AUX2 input. If the supply temperature is received from a global broadcast, you will need to go to the air handler to calibrate the temperature reading.

Description	Minimum	Default	Maximum
SPC (Space Temp)	-100°F	0°F	+100°F
SAT (Supply Air)	-100°F	0°F	+100°F



### VAV/Zone Status

#### Status Screen #1 - Mode of Operation

```
XX Box v4.01 IDXXXX
Occupied Mode
Vent Mode
Belongs to Group # 1
```

- Line 2** Unoccupied Mode  
Occupied Mode  
Override Mode  
Override Pending\*  
Damper Calibration  
Group Override

- Line 3** OFF Mode  
Vent Mode  
Cooling Mode  
Heating Mode  
Sensor Fail Mode\*\*

- Line 4** Belongs to Group # xx  
No Group Affiliation

\* Not displayed when using a Digital Room Sensor.

\*\* Displays for either a temperature sensor failure or an airflow sensor failure.

#### Status Screen #2 - Zone Temperature and Cooling/Heating Setpoints

```
XX Box v4.01 IDXXXX
Zone Temp.: XX.X°F
Cooling Spt: XX.X°F
Heating Spt: XX.X°F
```

- Line 2** Current Zone Temperature
- Line 3** Currently active Cooling Setpoint based on the current Occupied / Unoccupied mode of operation.
- Line 4** Currently active Heating Setpoint based on the current Occupied / Unoccupied mode of operation.

#### Status Screen #3 - Slide Offset & H/C Demand

```
XX Box v4.01 IDXXXX
Slide Offset: XX°F
H/C Demand.: XX.X°F
```

- Line 2** If the optional Setpoint Slide Adjust is installed on the Flush Mount Wall Sensor, this line will display the current amount the **Slide Offset** is affecting the Heating and Cooling Setpoints.

- Line 3** Current **Heating or Cooling Demand** in the Zone based on the current Heating and Cooling Setpoints when compared to the current Zone Temperature.

- Line 4** **Blank**

#### Status Screen #4 - Supply Air Temperature & Box Air Temperature

```
XX Box v4.01 IDXXXX
Supply Air: XX.X°F
Box Air.: XX.X°F
```

- Line 2** **Current Supply Air Temperature** received via broadcast from the DX Air Handler or from the Box Controller's own installed Box Air Temperature Sensor connected to the AUX input of the VAV/Zone Controller board.

- Line 3** **Current Box Air Temperature**  
If you have configured the VCM-X or RNE Controller to broadcast the Supply Air Temperature to the VAV/Zone Controller and don't have a Box Air Temperature Sensor attached to the AUX input on the VAV/Zone Controller board, this line will display the Supply Air Temperature the same as line 2.

If you have a Box Air Temperature Sensor attached to the AUX input on the VAV/Zone Controller board, this line will display the Box Air Temperature at the location where the Box Air Temperature Sensor is installed.

- Line 4** **Blank**

## VAV/Zone Status Screens

### Status Screen #5 - Zone Damper Position, Airflow, and Desired CFM

```

XX Box v4.01 IDXXXX
Damper FRC:   XXX %
Airflow   :  XXXX CFM
Desired    :  XXXX CFM
    
```

- Line 2** Current Zone Damper Position  
If you entered a FORCE command, the letters FRC will appear. If this is normal damper operation, the FRC will not be displayed.
- Line 3** If this is a Pressure Independent box, the current Airflow will be displayed. If not, this line will display the desired damper position.
- Line 4** If this is a Pressure Independent box, this line will display the Desired CFM the box would like to provide to the zone. If not, this line will display [Controls to +/- 3%] to indicate how accurately the damper will maintain the desired position.

### Status Screen #6 - Fan Status & Reheat Stages

```

XX Box v1.04 IDXXXX
Fan Status      : OFF
Heating Relay#1 : OFF
Heating Relay#2 : OFF
    
```

- Line 2** If this is a Fan Powered box, this line will display the Fan On/Off Status. On non-fan powered boxes, this line will display [Exp Relay 1 Not Used].
- Line 3** If your VAV/Zone Controller has been configured to control reheat stages, this line reflects the On/Off Status of the first stage of Reheat. If you have 3 stages of reheat, this line will display the total number of active heating stages.

Examples:

“1 Reheat Stages On” or

“2 Reheat Stages On” or

“3 Reheat Stages On”

If proportional heating is used (you have no relays configured for heat), this line will display “Heating Signal: xxx %”.

- Line 4** If your VAV/Zone Controller has been configured to control reheat stages, this line reflects the On/Off Status of the second stage of Reheat. If you have 3 stages of reheat as explained on line 2, this line will be blank.

### Status Screen #7 - Alarm Status

```

XX Box v1.04 IDXXXX

NO ALARMS!
    
```

```

XX Box v.104 IDXXXX

ALARMS PRESENT
SCROLL DOWN TO VIEW
    
```

- Line 2** Blank
- Line 3** NO ALARMS! OR ALARMS PRESENT  
If there are one or more alarms active, the possible messages are shown below:  
  
SPACE SENSOR FAILURE  
CFM SENSOR FAILURE  
DAMPER OPENING ALARM  
DAMPER CLOSING ALARM  
HI SPACE TEMP ALARM  
LO SPACE TEMP ALARM  
DPR FEEDBACK FAILURE

Press <↓> to scroll through all active alarms.

For Alarm Definitions, see the *VCM-X Controller Technical Guide*, the *VCM-X Modular E-BUS Controller Technical Guide*, or the *RNE Controller Technical Guide*.

## Damper Force Modes


Damper Force Modes are available for testing or balancing the system. These Force Modes can be accessed and programmed from either the System Manager or Modular Service Tool.

### Modular Service Tool Instructions

When using the Modular Service Tool, simply *press* the <BALANCE - TEST> key. You will then see the *Unit Selection Screen*. Enter the unit ID of the controller you wish to access and *press* <ENTER>. You must type in the number, even if it is “1”. Once communication is established, “No Communication” will be replaced with “Press Down.” Then *press* <↓>.

NOTE: If “No Communication” remains, it indicates a communication failure to the controller.


The following screen will be displayed:

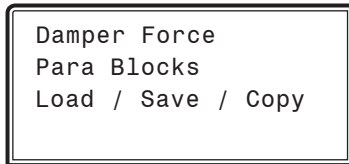

With the cursor on Damper Force, *press* <ENTER> to access the *Damper Force Mode Screen*.

### Dampers Force Mode Screen

If the unit ID you entered is for a VCM-X or RNE Controller that has VAV/Zone Controllers connected to its communication loop, the Damper Force Mode will act as a “Global” Damper Force Mode. That is, all VAV/Zone Controllers on that VCM-X or RNE Controller’s communication loop will be forced to the same Damper Force Mode setting. If the unit ID you entered is for a VAV/Zone Controller, the Damper Force Mode setting will only apply to that VAV/Zone Controller.

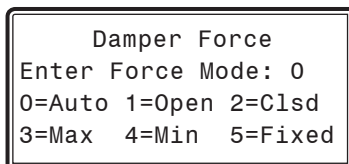

Set the appropriate Damper Force Mode by entering numbers 0 through 5. Following is a list of the force modes and their meaning:

0 = Auto      This is the default setpoint. With this setting, the damper will operate normally and modulate

according to the controller setpoints.

- 1 = Open      This setting will force the dampers to their fully-open position.
- 2 = Clsd      This setting will force the damper to its fully-closed position.
- 3 = Max      This setting will force the damper to its Maximum Position Setpoint. See *VAV/Zone Controller Setpoint Screen #5* on **page 69** for complete setpoint information.
- 4 = Min      This setting will force the damper to its Minimum Position Setpoint. See *VAV/Zone Controller Setpoint Screen #5* on **page 69** for complete setpoint information.
- 5 = Fixed      This setting will force the damper to a fixed position based on the Fixed Position Setpoint. See *VAV/Zone Controller Setpoint Screen #8* on **page 70** for complete setpoint information.

CAUTION: The Damper Force Modes should only be used by qualified service personnel. Serious damage to the ductwork could result if the dampers are all forced closed and the HVAC unit fan is operating.

## MiniLink PD Configuration Screens

### MiniLink PD Configuration

In order to correctly setup the MiniLink PD, you must first configure several parameters in regard to the type of system and operating parameters for the system it is installed on. Most of these values and operating parameters are only set once at the initial system setup and are never changed.

#### Modular Service Tool Instructions

From any menu screen, *press* <SETPOINTS>. The *Unit Selection Screen*, shown below, will appear requesting that you enter the unit ID number.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

All MiniLink PDs are set at address 60. Enter the correct unit loop number for the loop the MiniLink Polling Device is connected to (for Loop 1 you would enter <160>) and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>.

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

You will then see Setpoint Screen #1. *Press* <ENTER> to save entered data and *press* <↓> to scroll through the screens.

#### System Manager SD Instructions

From any Main screen, *press* <SETPOINTS>. The screen below will appear because this option requires passcode clearance. Only a Level 2 passcode can change setpoints.

```
THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
```

If the correct passcode was entered, the *Unit Selection Screen* will be displayed.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the Unit ID of the controller you wish to change schedules for and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>.

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

The following screen will be displayed:

```
Change Setpoints
Configure Unit
Save/Copy/Restore
```

Scroll to the 'Change Setpoints' option and *press* <ENTER>. This will take you to the first Setpoints Screen shown below.

#### Configuration Screen #1 - System Type

```
Polling Unit Config
System Type
Selection: ZONING
Use < 0r > To Change
```

Select VAV or ZONING. This screen allows you to select whether you want the system to behave as a VAV system or a Zoning System. If you select VAV, this will allow tenant logging for your VAV system.

#### Configuration Screen #2 - Last Polled Zone

```
Polling Unit Config
Last Polled Zone
Address: XX
[Enter Last Zone]
```

This zone is the last zone on the local loop of your zoning system that is to be included in zone voting. Valid entry is 1 to 25.

#### Configuration Screen #3 - Mode Changeover Time

```
Polling Unit Config
Mode Changeover Time
Minutes: XX
[Enter Period Time]
```

This is the amount of time that you want to allow between changeover from heating to cooling modes. Valid entry is 5 to 60 minutes.

## MiniLink PD Configuration and Status Screens

### Configuration Screen #4 - Optimal Start Target Zone

```

Polling Unit Config
  Optimal Start
  Target Zone.: XX
  [Enter Target Zone]
    
```

This is the unit ID of the Zone that you want to be satisfied by the normally scheduled start time. If you enter “-1” into this box, it will average all zones instead of picking a specific zone. If you do not require Optimal Start, enter “0”. Valid entry is -1 to 58.

### Configuration Screen #5 - Maverick Testing

```

Polling Unit Config
  Maverick Testing
  Disabled: YES
  Use < Or > To Change
    
```

Select YES or NO. Disabling the Maverick Testing allows known troubled zone(s) to continue voting without causing a Maverick alarm. In other words, all zones are included in the voting regardless of whether they are more than four degrees from setpoint.

### Configuration Screens #6-65 - Alarm Polling

```

Polling Unit Config
  Enable Alarm Polling
  Unit XX: YES
  Use < Or > To Change
    
```

Select YES or NO. Enabling Alarm Polling allows any alarm from the loop to be polled. You must set this for each controller on the loop.

### MiniLink PD Status

#### Status Screen #1 - Schedule Mode, System Status, and Minutes Left

```

Polling Device
  System Occupied
  Venting Mode
  XXX Min Left in Mode
    
```

- Line 2 Current Schedule Mode**  
Can be System Occupied or System Unoccupied.
- Line 3 Currently System Status**  
Can be Vent Mode, Cooling Mode, or Heat Mode.
- Line 4 Minutes Left In Mode**  
The number of minutes left in the current mode of operation before it can switch modes. This value is user-adjustable. See Configuration Screen #3.

#### Status Screen #2 - Mode Priority, Cool Total, and Heat Total

```

Polling Device
  No Mode Priority
  Cool Total.: XX.X°F
  Heat Total.: XX.X°F
    
```

- Line 2 Mode Priority**  
Can be Heat Priority or Cool Priority. This is based on the voting zones and their demand.
- Line 3 Cool Total**  
Total cooling temperature demand from all zones.
- Line 4 Heat Total**  
Total heating temperature demand from all zones.

### Outputs Force

Outputs Force settings are available for testing or troubleshooting the system. These Force settings can only be accessed and programmed from the Modular Service Tool. The System Manager does not allow for programming of this function.

**CAUTION:** The Outputs Force settings should only be applied by qualified service personnel. Serious damage to the HVAC unit could result from improper use of these Outputs Force settings.

To access the Outputs Force settings, simply *press* the <BALANCE - TEST> button on the Modular Service Tool. You will then see the *Unit Selection Screen*.

```

Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
    
```

Enter the unit ID of the VCM-X or RNE Controller you wish to access and *press* <ENTER>. Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>. You will then see the screen shown below. *Press* <ENTER> to save entered data and *press* <↓> to scroll through the screens.

**NOTE:** If "No Communication" remains, it indicates a communication failure to the controller.

**NOTE:** The Outputs Force settings are only available for the VCM-X or RNE Controller. They are not supported for the VAV/Zone Controllers or other Add-on controllers.

```

Outputs Force
Para Blocks
Save / Load / Copy
    
```

Place the cursor on Outputs Force and *press* <ENTER> to access the *Outputs Force Screen*.

```

Supply Fan Override
Auto

Use < Or > To Change
    
```

The first *Outputs Force Screen* allows the AHU fan relay to be set for Auto, Force On, or Force Off. The default setting is Auto. After you complete all troubleshooting or testing procedures, all relays should be changed back to this setting. The Force On setting will force the relay to the ON (energized) position. The Force Off selection will force the relay to the OFF (de-energized) position.

The next screen displays the Relay Overrides for Relay 2. After *pressing* <ENTER> to save any changes, *press* <↓> to have the next relay displayed. All 20 *Relay Override Screens* (including the AHU fan relay) are available by *pressing* <↓> after each setting is saved by *pressing* <ENTER>.

```

Relay Overrides
Relay 2 Override
Auto

Use < Or > To Change
    
```

After the screen for relay 21 is displayed, the first *Analog Output Override Screen* will be displayed.

#### Analog Output 1 Screen

```

Economizer Overrides
Analog Output #1
Override Volts: -1.0
[-1.0=Auto]
    
```

The default setting for normal operation is -1.0 volts. Voltages between 0 to 10.0 can be set for any of the Analog Output Overrides. *Press* <ENTER> after making a setting change and then *press* <↓> and the next *Analog Output Override Screen* will be displayed.

#### Analog Output 2 Screen

```

Supply VFD Override
Analog Output #2
Override Volts: -1.0
[-1.0=Auto]
    
```

Analog Output 3 Screen

Exhaust VFD Override  
Analog Output #3  
Override Volts: -1.0  
[-1.0=Auto]

Analog Output 5 Screen

Mod Cooling Override  
Analog Output #5  
Override Volts: -1.0  
[-1.0=Auto]

Analog Output 4 Screen

Mod Heating Override  
Analog Output #4  
Override Volts: -1.0  
[-1.0=Auto]

Analog Output 6 Screen

RA Damper Override  
Analog Output #6  
Override Volts: -1.0  
[-1.0=Auto]

Analog Output 7 Screen

RA Bypass Override  
Analog Output #7  
Override Volts: -1.0  
[-1.0=Auto]

## Saving Setpoints

### Modular Service Tool Instructions

From any menu screen, *press* <BALANCE-TEST>. The *Unit Selection Screen* will appear requesting that you enter the unit ID number.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the network unit ID for the controller you want to save the setpoints from. Example, '102' for Loop 1 / Unit 2. Then *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." After a brief pause, *press* <↓> to get to the *Balance - Test Screen* shown below.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

```
Outputs Force
Para Blocks
Save/Copy/Restore
```

Scroll down to the 'Save/Copy/Restore' option and *press* <ENTER>. This will take you to the Save Setpoints screen.

### System Manager SD Instructions

From any Main screen, *press* <SETPOINTS>. The screen below will appear because this option requires passcode clearance. Only a Level 2 passcode can change setpoints.

```
THIS ACTION REQUIRES
PASSCODE CLEARANCE
Enter Passcode: XXXX
```

If the correct passcode was entered, the *Unit Selection Screen* will be displayed.

```
Enter Unit Address
Then Press Enter
Selected Unit#: XXXX
No Communication
```

Enter the Unit ID of the controller you wish to change schedules for and *press* <ENTER>. You must type in the number, even if it is "1". Once communication is established, "No Communication" will be replaced with "Press Down." Then *press* <↓>.

---

NOTE: If "No Communication" remains, it indicates a communication failure to the controller.

---

The following screen will be displayed:

```
Change Setpoints
Configure Unit
Save/Copy/Restore
```

Scroll down to the 'Save/Copy/Restore' option and *press* <ENTER>. This will take you to the Save Setpoints screen.

## Save Setpoints - Network Mode

From the *Save Setpoints Screen* shown below:

```
Save Setpoints
Press Enter To Save
```

*Press* <ENTER> and a setpoint file will be saved to the SD card. You will receive a message that the save was successful. This file is specific to this controller on this loop.



## Copying & Restoring Previously Saved Setpoints

### Copy Setpoints - Network Mode

To copy a saved setpoints file to other controllers on the network do the following:

From the *Save Setpoints Screen* shown below:

```

Save Setpoints
Press Enter To Save
    
```

Press <↓> once to access the *Copy Setpoints Screen* shown below.

```

Copy Setpoints
From Loop 1
From Unit 2
Press Enter to Copy
    
```

In the 'From Loop' field, enter the Loop of the controller you want to copy the setpoints from. In this example it is '1'. Then *press* <ENTER>.

In the 'From Unit' field, enter the Unit ID of the controller you want to copy the setpoints from. In this example it is '2'. Then *press* <ENTER>.

Now your cursor will be on the last line, and you can *press* <ENTER> once more to copy the setpoint file from unit 102 to unit 103.

You will receive a confirmation that the copy was successful.

### Save & Copy Setpoints - Stand-Alone Mode

The instructions for Stand-Alone Mode are exactly the same as Network Mode, except that there is no need to enter a Loop number in the Unit ID number field and in the *Copy Setpoints Screen*, enter a zero in the 'From Loop' field.

### Restore Setpoints - Network or Stand-Alone Mode

The Restore Setpoints feature is used to reload a saved setpoints file from one controller back to itself. This could be useful if setpoints or configurations were changed and need to be reset.

You can perform this function on a networked system; however, the Modular Service Tool needs to be directly connected to the controller you wish to restore previously saved setpoints to.

From the *Save Setpoints Screen* shown below:

```

Save Setpoints
Press Enter To Save
    
```

Press <↓> four times to access the *Restore Setpoints Screen* shown below.

```

Restore Setpoints
Press Enter to Load
    
```

Press <ENTER>. This will reload the setpoints from the saved file. You will receive confirmation that the setpoints were loaded successfully.


## SD Memory Card Update

### Updating The SD Memory Card

You may need to update the SD memory card from time to time, either for a new release or to add data for another Controller.


Follow the instructions below to download the update file from our tech support webpage:

1. Insert the SD memory card in your computer's SD drive and open the drive's window.
2. Open your browser and type in the address: <http://wattmaster.com/techsupport>.
3. On the Tech Support webpage, locate the file Modular\_HH\_Screens.zip and *double-click* on it.
4. Click <Save File> when asked to save or open the file and then *click* <OK>. This option will save the file to the "Downloads" folder on your PC.

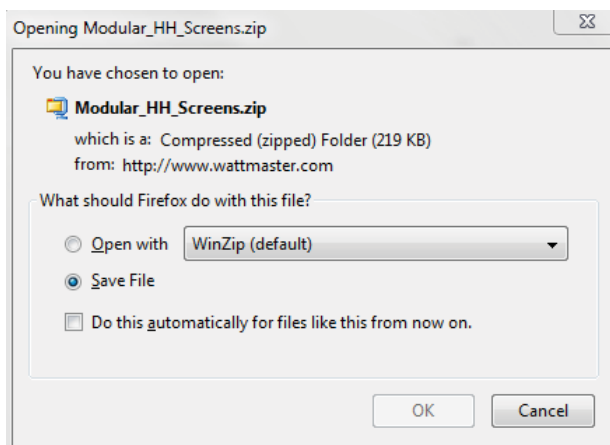

5. *Open* the "Downloads" folder in Windows Explorer. You will find a folder labeled, "Modular\_HH\_Screens.zip" *Right-click* on the folder and choose "Extract All" from the options list. **NOTE:** Any compression software can be used to extract the zip folder's contents, for example, Winzip.

6. Once you unzip the file, you will see a window similar to the one below.

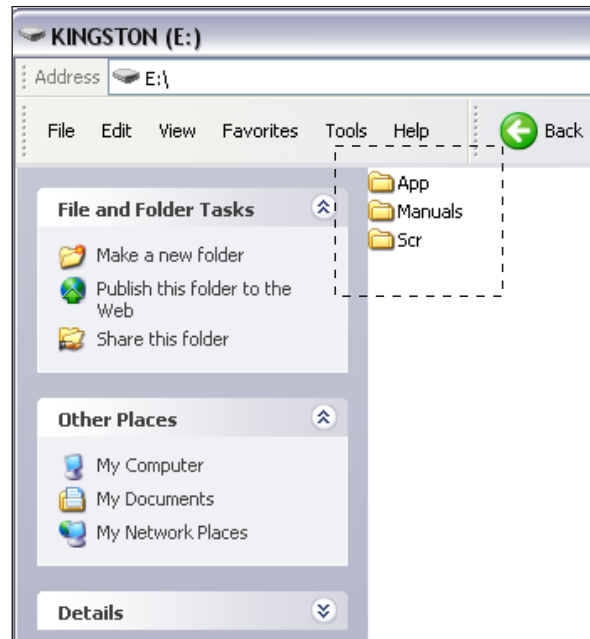

7. *Press* <CTRL> <A> to highlight the folders in the window—App, Manuals & Scr. *Press* <CTRL> <C> to copy the folders.
8. *Paste* the folders into the SD memory card drive's window by *pressing* <CTRL> <V>.
9. Remove the SD Memory Card from your computer and reinsert it in the Modular Hand Held Service Tool or Modular System Manager.

### Updating Controller & E-BUS Module Software Using the Modular Service Tool SD

To update the software for various WattMaster controllers and E-BUS modules, follow these simple steps.

1. Update your SD memory card with the new software file for the controller or module you need to update. Follow the steps on **page 81** for Updating the SD memory card.
2. Connect the Modular Service Tool to the device you wish to update using the mini DIN communication cable or EBC E-BUS cable provided.
3. Power up the controller or E-BUS module you wish to update.
4. Apply power to the Modular Service Tool SD and *press* the <ON> button.
5. After initialization of the Modular Service Tool SD, *press* <NEXT> at the first *Setup Screen* and <4> at the second *Setup Screen* shown below.

```

1) Set Time & Date
2) Communications
NEXT) More Options
ESC) Exit Menu
    
```

```

3) Energy Saving
4) Update Software
NEXT) More Options
ESC) Exit Menu
    
```

6. The *Update Software Screen* will appear as shown below:

```

Select Communication
1) WattMaster Comm
2) E-BUS Module
ESC) Exit Menu
    
```

7. Follow the instructions for WattMaster Controllers or E-BUS Modules.

### WattMaster Controllers

1. *Press* <1> to update a WattMaster Controller. The following screen will appear:

```

Enter Board Address
      0
Esc) Exit Menu
    
```

2. *Enter* the address of the controller you are updating and then *press* <ENTER>.
3. The *Software Version Screen* will appear as shown below. *Enter* <0> for the latest software version or enter the number of an older version given to you by Technical Support. Then *press* <ENTER>.

```

Software Version
Enter 0 for Latest
      0
Esc) Exit Menu
    
```

4. The screen will display the following messages:
  - “Resetting Unit”
  - “Load Sys Info”
5. If communications are successful, the screen will display, the name of the HEX file on the top line, “Flash Memory Erased” on the second line, and the progress percentage on the third line.

NOTE: If communications are not successful, the screen will display, “Press Any Key to Continue. Cannot Load Sys Info.” Make sure you have the right address and the right software version on your SD card. If these two items are correct and you still experience a problem, contact Technical Support.

6. When updating is complete, the screen will display, “Finish Download.”

## Updating Controller & E-BUS Module Software

### E-BUS Modules

1. Press <2> to update an E-BUS Module. The following screen will appear:

```
Enter Board Address
      0
Esc) Exit Menu
```

2. Enter the address of the E-BUS module you are updating and then press <ENTER>. The following is the list of Module addresses:

```
WSHP-X2 - address 17
MHGRV-X - address 132
MODGAS-X - address 138
PREHEAT-X - address 157
RSM #1 - address 152
RSM #2 - address 153
RSM #3 - address 154
RSM #4 - address 155
```

3. The *Software Version Screen* will appear as shown below. Enter <0> for the latest software version or enter the number of an older version if given to you by Technical Support. Then press <ENTER>.

```
Software Version
Enter 0 for Latest
      0
Esc) Exit Menu
```

4. The screen will display the following messages:  
“Resetting Unit”  
“Load Sys Info”

5. If communications are successful, the screen will display, the name of the HEX file on the top line, “Flash Memory Erased” on the second line, and the progress percentage on the third line.

NOTE: If communications are not successful, the screen will display, “Press Any Key to Continue. Cannot Load Sys Info.” Make sure you have the right address and the right software version on your SD card. If these two items are correct and you still experience a problem, contact Technical Support.

6. When updating is complete, the screen will display, “Finish Download.”

0-10 VDC CW.....38  
 2-10 VDC CW.....38  
 24-Hour Military Format.....14,22  
 55 - 75 Tons.....38  
 95 - 105 Tons.....38  
 120 - 140 Tons.....38  
 1111.....19  
 2222.....19  
 2359.....14,22

## A

Adaptive Defrost Timer  
   Adjustment.....53  
 AHU Heat Call Space Temperature  
   VAV/Zone.....69  
 Airflow, VAV/Zone Status.....73  
 Alarm Relay Configuration.....33,43  
 Alarms  
   Button.....10,16  
   Clearing.....13,21  
   MiniLink Polling.....20,76  
   Modular Service Tool.....13  
   VAV/Zone Status.....73  
 Alarms for VCM-X.....64  
 Analog Output Override Screen.....77  
 Arrow Keys  
   Defined.....10,12,16,18  
 Auto Damper Force Mode.....74  
 Automatic Power Down.....12

## B

Balance-Test Button, Defined.....10  
 Box Air Temperature  
   VAV/Zone Status.....72  
 Box Configuration, VAV/Zone.....65  
 Box Heat Allow, VAV/Zone.....66  
 Broadcast  
   Internal Schedule Screen.....32,42  
   Internal Time Clock Screen.....32,41  
   Outdoor Air Humidity Screen.....31,41  
   Outdoor Air Temperature Screen.....31,41  
   Status Fan & Heat Screen.....31,41  
   Supply Temperature Screen.....31,41  
   VAV Boxes Force to Fix Screen.....32,42  
   VAV Boxes Force to Max  
     Screen.....32,42  
 Broadcast to Multiple Loops.....32,42  
 Building Pressure  
   Deadband Setpoint.....51  
   Modulating Control Screen.....30,40  
   Output %.....60  
   Output Signal Screen.....30,40  
   Reverse Acting Control Screen.....30,40  
   Setpoint.....51  
   VCM-X Status.....60  
 Bypass Damper.....25,35  
 Bypass Damper Signal.....64

## C

CFM, Outdoor Air.....29,39  
 CFM, Return Air.....29,39  
 CFM, Supply Air.....29,39  
 Change Passcodes.....19  
 Circuit A.....62  
 Circuit A Temperature.....61  
 Circuit B.....62  
 Circuit B Temperature.....61  
 Clear Alarms.....13,21  
 Clear Key, Defined.....10,16  
 Closed, Damper Force Mode.....74  
 CO<sub>2</sub>  
   Level.....59  
   Protection Limit Max Level.....50  
   Protection Limit Reset Range.....50  
   Protection Limit Setpoint.....50  
   Sensor Maximum Scale Screen.....30,40  
   Sensor Output Signal Screen.....30,40  
 Coil 1 Temperature.....62  
 Coil 2 Temperature.....62  
 Coil A1 Temperature.....61  
 Coil A2 Temperature.....61  
 Coil B1 Temperature.....62  
 Coil B2 Temperature.....62  
 Coil Suction Temperature.....61  
 Coil Temperature.....58,62  
 Coil Temperature Setpoint.....58  
 Coil Temperature Status.....61  
 Communications Screen.....12,18  
 Compressor A1.....61  
 Compressor A2.....61  
 Compressor A Signal.....62  
 Compressor B1.....62  
 Compressor B2.....62  
 Compressor B Signal.....62  
 Condenser Fan Speed.....63  
 Configuration.....65  
   Button.....10  
   Reset Interval Rate.....26,36  
   Screen Index.....24  
 Configuring  
   Main Fan Maximum Voltage.....32,42  
 Connection Diagram  
   Modular Service Tool.....5  
 Continuous OFF Mode.....14,22  
 Continuous ON Mode.....14,22  
 Controlling Outdoor Air CFM.....50  
 Control Outdoor Air CFM.....29,39  
 Controllers, Updating.....82  
 Cooling Head Pressure Setpoint.....49  
 Cooling & Heating Stage Delays  
   Screens.....33,43  
 Cooling Min Off Time.....33,43  
 Cooling Min Run Time.....33,43  
 COOLING ONLY BOX  
   VAV/Zone.....65  
 Cooling Setpoints  
   VAV/Zone Status.....72  
 Cooling Stage Relay.....64

Cooling Stage Relay Configuration.....33,43  
 Cooling Status, VCM-X Controller.....56  
 Cool Total  
   MiniLink PD Status.....76  
 Copy Setpoints.....80  
 Current Active Supply Air Setpoint.....57  
 Current CO<sub>2</sub> Level.....59  
 Current Economizer Open Percentage.....59  
 Current Supply Air Temperature.....57  
 Current Wetbulb Temperature.....59  
 Cutoff Temperature Setpoints.....48

## D

Damper Airflow  
   Cool/Heat Minimum.....69  
   Fan On Min.....70  
   Fixed Position.....70  
   Integral.....69  
   Maximum.....69  
   Night Minimum.....70  
   Reheat Minimum.....70  
   Vent Minimum.....69  
 Damper Force  
   Modes.....74  
 Damper Operation  
   VAV/Zone.....65  
 Dampers Forced Closed.....74  
 Data Entry Keys  
   Described.....10,16  
 Date, Programming.....11,17  
 Day/Night Schedule  
   VAV/Zone.....71  
 Deadband  
   Outdoor Air CFM.....50  
 DEC Key, Defined.....10,16  
 Defrost Adaptive Timer.....53  
 Defrost Heat Wheel Setpoint.....53  
 Dehumidification  
   Coil Temperature Setpoint.....49  
   Control Screen.....26,36  
   Indoor RH & OA Dewpoint  
     Setpoints.....48  
   Priority Screen.....26,36  
   Unoccupied Screen.....26,36  
 Desired CFM  
   VAV/Zone Status.....73  
 Dewpoint Temp  
   VCM-X Status.....58  
 Digital Compressor Signal Screen.....28  
 Digital Scroll Compressor.....29,62  
 Dimensions  
   Modular Service Tool.....4  
   System Manager.....6  
 Direct Acting Control.....51  
 Display Screen  
   Described.....10,16  
 Dual Digital Module.....55,61,62  
   Status Screen.....55,61

Dual Digital Module Screen.....29  
 Dual Digital Signal.....62  
 Dual Digital Temperature.....61  
 Duct/Damper Size  
   Outdoor.....39  
   Return.....39  
   Supply Air.....39  
 Duct/Damper Size, Outdoor.....29  
 Duct/Damper Size, Return.....29  
 Duct/Damper Size, Supply Air.....30  
 Duct Static Pressure Screen.....25,35  
 Dump Zone, VAV/Zone.....67

## E

Economizer  
   Control Screen.....27,37  
   Maximum Position if High CO<sub>2</sub> Level  
     Setpoint.....50  
   OAT/WB Enable Setpoint.....49  
   Overrides.....77  
   Relay Configuration.....33,43  
   Status.....56  
 Economizer %.....59  
 Economizer Open Percentage.....59  
 Economizer Relay.....64  
 Emergency Heat Configuration.....33,43  
 Emergency Shutdown Input.....31,41  
 Energy Saving Timer.....12  
 Enter, Key.....10,16  
 ESC Key, Defined.....10,16  
 Exhaust  
   VFD Override.....78  
 Exhaust Fan Relay.....64  
 Exhaust Fan Relay Configuration.....33,43  
 Expansion Relays Heating Stages  
   VAV/Zone.....66

## F

Fan On Min.....70  
 Fan Status.....73  
 Fan VFD Percentage.....26,36  
 Firestat Input.....31,41  
 Fixed Damper Force Mode.....74  
 Fixed Position Damper Airflow.....70  
 Free Cooling.....49  
 Full Digital Module.....61,62,63  
   Coil Temperature Status.....61  
   Signal Status.....63  
   Status Screen.....61  
 Full Digital Module Installed.....39  
 Full Digital Module Screen.....29  
 Full Digital Signal.....62,63  
 Full Digital Temperature.....61

## G

Gas Reheat Relay.....64

## H

H/C Changeover Box  
   VAV/Zone.....65  
 Head Pressure Condenser Fan #1  
   Status.....63  
 Head Pressure Condenser Fan #2  
   Status.....63  
 Head Pressure Cooling Setpoint  
   Status Screen.....55,63  
 Head Pressure Module Screen.....28,38,39  
 Head Pressure Reheat Setpoint  
   Status Screen.....55,63  
 Head Pressure Setpoint Cooling.....49  
 Head Pressure Setpoint Reheat.....49  
 Heat During Dehumidify Screen.....27,37  
 Heating  
   Min Off Time.....33,43  
   Min Run Time.....33,43  
   Setpoints.....72  
   Stage Down.....33,43  
   Stage Up.....33,43  
   Status.....56  
 Heating/Cooling Demand  
   VAV/Zone Status.....72  
 Heating Stage Relay.....64  
 Heating Stage Relay Configuration.....33,43  
 Heat Pump  
   Auxiliary Heating Delay.....52  
   Control Screen.....30,40  
 Heat Pump Defrost Setpoints.....53  
 Heat Pump Defrost Temperature.....53  
 Heat Pump Defrost Timer.....53  
 Heat Reset Source Setpoints.....47  
 Heat Total, MiniLink PD Status.....76  
 Heat Wheel Defrost Setpoint.....53  
 Heat Wheel Relay.....64  
 HGR Relay.....64  
 Hi SAT Cutoff.....48  
 Holidays, Programming.....14  
   Start/Stop Times.....15,23  
 HVAC Mode  
   Cooling Setpoints.....45  
   Heating Setpoints.....45  
   Reset Source Screen.....26,36  
   Schedule Setpoint.....52  
   Select Deadband Setpoint.....45  
   Sensor Slide Offset Setpoint.....52  
   Setpoints.....45  
 HVAC Mode Enable  
   Screen.....26,36  
 HVAC Reset Source.....26,36  
   Fan VFD Percentage.....26,36  
   No Reset.....26,36  
   Outdoor Air Temperature  
     Sensor.....26,36  
   Remote Reset Signal.....26,36  
   Return Air Temperature  
     Sensor.....26,36  
   Single Zone VAV.....26,36  
   Space Temperature Sensor.....26,36

## I

Indoor, Humidity Screen.....27,37  
   RH Setpoint.....59  
 Initialization  
   Screen.....11,17  
 Internal Schedule Optimal Start Soak  
   Multiplier Setpoint.....53

## K

Keys, Described.....10,16

## L

Last Polled Zone, MiniLink PD.....75  
 Leaving Water Temperature.....57  
 Level 1 User, Defined.....19  
 Level 2 User, Defined.....19  
 Loop Search.....20  
 Lo SAT Cutoff.....48  
 Lowest Coil.....58

## M

Main Fan.....32,42  
 Main Fan Maximum Voltage.....32,42  
 Main Fan Status, VAV/Zone.....66  
 Maverick Testing, MiniLink PD.....76  
 Maximum  
   Damper Force Mode.....74  
   EMS Offset VAV/Zone.....71  
   Slide Offset VAV/Zone.....71  
 Maximum Outdoor Air CFM.....50  
 Maximum Voltage.....32,42  
 Maximum Voltage for Main Fan.....32,42  
 Max OA Damper Tempering Limit.....52  
 Mechanical Heat/Cool Failure Time  
   Period Setpoint.....51  
 MHGRV Output % VCM-X Status.....60  
 Min Damper Force Mode.....74  
 MiniLink PD Configuration.....75  
   Alarm Polling.....76  
   Last Polled Zone.....75  
   Maverick Testing.....76  
   Mode Changeover Time.....75  
   Optimal Start Target Zone.....76  
   System Type.....75  
 MiniLink PD Status  
   Adding Additional.....20  
   Cool Total.....76  
   Heat Total.....76  
   Minutes Left.....76  
   Mode Priority.....76  
   Schedule Mode.....76  
   System Status.....76  
 Minimum Outdoor Air CFM.....50  
 Minimum Run Times and Off  
   Times.....33,43

- Min Supply Fan VFD Speed
    - for Heating Setpoint.....48
  - Minus Key, Defined.....10,16
  - Minutes Left, MiniLink PD Status.....76
  - Mod
    - Cooling %.....60,63
    - Cooling Override.....78
    - Heating %.....60
    - Heating Override.....78
  - Mode
    - Changeover Time.....75
    - Cooling Setpoint.....56
    - Enable Temperature.....56
    - Heating Setpoint.....56
    - of Operation.....12,18,72
    - Priority.....76
    - Selection Buttons Defined.....10,16
    - VCM-X Status Screen.....56
  - MODGAS Output %, VCM-X Status.....60
  - Modular Service Tool
    - Alarms Button.....13
    - Alarm Search.....13
    - Connection Diagram.....5
    - Defined.....4
    - Dimensions.....4
    - Energy Saving Timer.....12
    - Initialization Screen.....11,17
    - Mode Selection Buttons.....10,16
    - Override Search.....13
    - Overrides Tool.....13
    - VCM-X Setpoints.....45
  - Modular System Manager
    - Connection Diagram.....7
    - Defined.....6
    - Dimensions.....6
    - Network Connection.....7
    - Stand-Alone Connection.....9
  - Modulating
    - Cooling/Heating Screen.....27,37
    - Cooling Output Signal Screen.....28
    - Cooling Proportional Window
      - Screen.....28,38
    - Cooling Reverse Acting
      - Screen.....28,38
    - Heating Output Signal Screen.....27,37
    - Heating Proportional Window
      - Screen.....28,38
    - Heating Reverse Acting Screen.....27,37
  - Modulating Cooling Type
    - 0-10 VDC CW.....38
    - 2-10 VDC CW.....38
    - VFD Full.....38
    - VFD Half.....38
  - Modulating Cooling Type Screen.....38
  - Modules, Updating.....82
  - Monitor Supply Air CFM.....29,39
  - Month.....11,17
  - Morning Warm Up
    - Max Length.....48
    - Target Temp.....48
    - Temp Setpoint.....48
  - Multiple Loops.....32,42
  - Multiple MGRS.....18
- ## N
- Network Connection
    - Modular System Manager.....7
  - Night Minimum, Damper Airflow.....70
  - No Reset.....26,36
- ## O
- OA Dewpoint, VCM-X Status.....58
  - Occupied
    - Mode.....15,23
    - Setpoints.....68
  - Occupied Relay.....64
  - Occupied Relay Configuration.....33,43
  - OE332-23-VCMX-MOD-A.....
  - OE332-23-VCMX-MOD-C.....
  - OE370-23-DD.....61,62
  - OE370-23-FD-A.....61,62,63
  - OE391-11.....4
  - OE392-07.....6
  - OFF Mode, Continuous.....14,22
  - ON Mode, Continuous.....14,22
  - Open Damper Force Mode.....74
  - Optimal Start Target Zone
    - MiniLink PD.....76
  - Outdoor
    - Humidity Sensor Screen.....27,37
    - Temperature.....58
  - Outdoor Air
    - Configuration.....26,36
    - Cooling & Heating Lockouts
      - Setpoints.....48
    - Relative Humidity.....58
    - Temperature.....58
  - Outdoor Air Airflow
    - VCM-X Output.....59
  - Outdoor Air CFM.....50,59
  - Outdoor Air CFM Deadband.....50
  - Outdoor Air Setpoint.....59
  - Outdoor Air Temperature Sensor.....26,36
  - Outdoor Duct/Damper Size.....29,39
  - Outputs Force.....77
    - Screen.....77
  - Override Relay.....64
  - Override Relay Configuration.....33,43
  - Overrides, Button.....10,16
    - Screen.....13,21
    - Search.....13,21
- ## P
- PARALLEL FAN BOX
    - VAV/Zone.....65
  - Passcode
    - 1111.....19
    - 2222.....19
    - Clearance.....18
    - Codes.....19
    - Enter New.....19
    - System Manager.....19
  - Power/Comm Board Wiring.....8
  - Power Down.....12
  - Preheat Ambient Temperature.....52
  - Pre-Heater Relay.....64
  - Pre-Heater Relay Configuration.....33,43
  - Pressure Independent Airflow Constant
    - VAV/Zone.....66
  - Programming
    - Configuring RNE.....35
    - Date.....11,17
    - Day of Week.....11,17
    - Holidays.....14
    - Holiday Start/Stop Times.....15,23
    - Month.....11,17
    - Time & Date.....11,17
    - Year.....11,17
  - Proof of Flow Input Screen.....27,37
  - Proportional Heating Signal
    - VAV/Zone.....66
  - Push-Button Override
    - Duration.....71
    - Duration Setpoint.....52
    - VAV/Zone.....66
- ## R
- R22 Refrigerant.....49
  - R410A Refrigerant Screen.....32,42
  - RA Bypass Override.....78
  - RA Damper Override.....78
  - Real Time Clock.....11,17
  - Refrigerant.....49
  - Reheat Stages.....73
  - Reheat Head Pressure Setpoint.....49
  - Reheat Minimum Damper Airflow.....70
  - Re-Heat Relay.....64
  - Reheat Relay Configuration.....33,43
  - Relay Configuration Screens.....33,43
    - Overrides.....77
  - Relay Configuration
    - Alarm.....33,43
    - Cooling Stage.....33,43
    - Economizer.....33,43
    - Emergency Heat.....33,43
    - Exhaust Fan.....33,43
    - Occupied.....33,43
    - Override.....33,43
    - Pre-Heater.....33,43
    - Reheat.....33,43
    - Reversing Valve.....33,43
    - Warm-up Mode.....33,43
  - Relays.....64

- Remote
    - Signal Contact.....14,22
  - Remote Reset Signal.....26,36
  - Reset Source.....26,36
    - Cooling Setpoint.....46
    - Reset Interval Rate Screen.....26,36
  - Restore Setpoints.....80
  - Return Air
    - Bypass Control Screen.....31,41
    - Bypass Damper Factor Setpoint.....51
    - Configuration.....26,36
  - Return Air CFM Status.....60
  - Return Air Damper Signal.....64
  - Return Air Temperature.....57
  - Return Air Temperature Sensor.....26,36
  - Return Duct/Damper Size.....29,39
  - Reverse Acting Control.....51
  - Reversing Valve Active During Heat/
    - Cool.....31,40
  - Reversing Valve Relay.....64
  - Reversing Valve Relay
    - Configuration.....33,43
  - RNE Controller
    - Configuration Screens.....35
    - Leaving Water Temperature.....57
  - RNE Tonnage
    - 55 - 75 Tons.....38
    - 95 - 105 Tons.....38
    - 120 - 140 Tons.....38
  - RNE Tonnage Screen.....38
- S**
- SAT Heating Setpoints.....47
  - Saturation Vapor Pressure.....49
  - Schedule
    - Button.....10,16
    - Mode.....76
    - Override.....14,15,22,23
    - Time & Date.....11,17
  - Scheduling
    - VCM-X Controller.....14,22
  - Screens
    - 1 HVAC Unit w/Boxes on Multiple
      - Loops.....32,42
    - Adaptive Defrost Adjustment
      - Setpoint.....53
    - Analog Output Override Screen.....77
    - Broadcast Internal Schedule
      - Screen.....32,42
    - Broadcast Internal Time Clock
      - Screen.....32,41
    - Broadcast Outdoor Air Humidity
      - Screens.....31,41
    - Broadcast Outdoor Air Temperature
      - Screen.....31,41
    - Broadcast Status Fan & Heat
      - Screens.....31,41
    - Broadcast Supply Temperature
      - Screen.....31,41
    - Broadcast VAV Boxes Force to Fixed
      - Screen.....32,42
    - Broadcast VAV Boxes Force to Max
      - Screen.....32,42
    - Building Pressure Deadband Setpoint.....51
    - Building Pressure Modulating Control
      - Screens.....30,40
    - Building Pressure Output Signal
      - Screens.....30,40
    - Building Pressure Reverse Acting
      - Screens.....30,40
    - Building Pressure Setpoint.....51
    - CO<sub>2</sub> Protection Limit Setpoint.....50
    - CO<sub>2</sub> Sensor Maximum Scale
      - Screen.....30,40
    - CO<sub>2</sub> Sensor Output Signal
      - Screen.....30,40
    - Communications Screen.....12,18
    - Configuration Screens.....24
    - Control Outdoor Air CFM.....29,39
    - Cooling & Heating Stage Delays
      - Screens.....33,43
    - Cool Reset Source Setpoints.....46
    - Cutoff Temperature Setpoints.....48
    - Damper Force Mode Screen.....
    - Dehumidification Coil Temperature
      - Setpoints.....49
    - Dehumidification Control
      - Screens.....26,36
    - Dehumidification Indoor RH & OA
      - Dewpoint Setpoints.....48
    - Dehumidification Priority
      - Screen.....26,36
    - Dehumidification Unoccupied
      - Screens.....26,36
    - Digital Compressor Signal
      - Screen.....28
    - Dual Digital.....29
    - Duct Static Pressure Screen.....25,35
    - Economizer Control Screen.....27,37
    - Economizer Maximum Position if High
      - CO<sub>2</sub> Level Setpoint.....50
    - Economizer Minimum Position &
      - Control Rate Setpoints.....49
    - Economizer OAT/WB Enable
      - Setpoint.....49
    - Economizer Overrides.....77
    - Emergency Shutdown Input.....31,41
    - Exhaust VFD Override.....78
    - Full Digital Module.....29
    - Head Pressure Module.....28,38,39
    - Head Pressure Setpoint
      - Cooling.....49
    - Head Pressure Setpoint Reheat.....49
    - Heat During Dehumidify
      - Screen.....27,37
    - Heat Pump Auxiliary Heating
      - Delay.....52
    - Heat Pump Control.....30,40
    - Heat Pump Defrost Setpoints.....53
    - Heat Reset Source.....47
    - Heat Wheel Defrost Setpoint.....53
    - Holiday Schedule.....15,23
    - HVAC Mode Enable Screen.....26,36
    - HVAC Mode Select Deadband
      - Setpoints.....45
    - HVAC Mode Sensor Slide Offset
      - Setpoint.....52
    - HVAC Mode Setpoints.....45
    - HVAC Reset Source.....26,36
    - HVAC Schedule Setpoint.....52
    - Indoor Humidity Sensor
      - Screen.....27,37
    - Initialization for Modular Service
      - Tool.....11,17
    - Internal Schedule Optimal Start Soak
      - Multiplier Setpoint.....53
    - Loop Search Screen.....20
    - Max OA Damper Tempering
      - Limit.....52
    - Mechanical Heat/Cool Failure Time
      - Period Setpoints.....51
    - MiniLink PD Configuration.....75
    - Minimum Supply Fan VFD Speed for
      - Heating Setpoint.....48
    - Mod Cooling Override.....78
    - Mod Heating Override.....78
    - Modulating Cooling/Heating
      - Screen.....27,37
    - Modulating Cooling Output
      - Signal.....28
    - Modulating Cooling Proportional
      - Window Screen.....28,38
    - Modulating Cooling Reverse Acting
      - Screens.....28,38
    - Modulating Cooling Type.....38
    - Modulating Heating Output Signal
      - Screen.....27,37
    - Modulating Heating Proportional
      - Window Screen.....28,38
    - Modulating Heating Reverse Acting
      - Screen.....27,37
    - Monitor Outdoor Air CFM.....29,39
    - Monitor Return Air CFM.....29,39
    - Monitor Supply Air CFM.....29,39
    - Morning Warm Up Temp
      - Setpoint.....48
    - Outdoor Air CFM Deadband Setpoint.....50
    - Outdoor Air CFM Setpoint.....50
    - Outdoor Air Cooling & Heating
      - Lockouts Setpoints.....48
    - Outdoor Duct/Damper Size.....29,39
    - Outdoor Humidity Sensor
      - Screen.....27,37
    - Outputs Force Screen.....77
    - Overrides Screen.....13,21
    - Preheat/Low Ambient Temperature
      - Setpoint.....52
    - Proof of Flow Input Screen.....27,37



- SCREENS, CONT.
- Push-Button Override Duration Setpoint.....52
  - RA Bypass Override.....78
  - RA Damper Override.....78
  - Relay Configuration Screens.....33,43
  - Relay Overrides.....77
  - Return Air Bypass Control Screens.....31,41
  - Return Air Bypass Damper Factor Setpoint.....51
  - Return Duct/Damper Size.....29,39
  - Reversing Valve Active During Heat/Cool.....31,40
  - RNE Configuration Screens.....35
  - RNE Tonnage.....38
  - SAT Cooling Setpoints.....46
  - Schedule Override.....15,23
  - Sensor Calibration for COIL.....54
  - Sensor Calibration for RAT & OAT.....54
  - Sensor Calibration for SPC & SAT.....54
  - Set Time & Date Screens.....11,17
  - Space Sensor Overrides Screen.....21
  - Split Condenser.....
  - Stage Control Window Setpoints.....47
  - Static Setpoint, Deadband & Control Rate Setpoints.....50
  - Supply Duct/Damper Size.....30,39
  - Supply Fan Cycle Screen.....25,35
  - Supply Fan Starting Delay Timer Setpoint.....51
  - Supply VFD Override.....77
  - Trend Log Interval Setpoint.....53
  - Unit Selection Screens.....25,35,45, 56,65,68,75,77,79
  - Unoccupied Cooling & Heating Setbacks Setpoints.....46
  - Uses R410A.....32,42
  - VAV/Zone Box Configuration.....65
  - VAV/Zone Configuration.....65
  - VAV/Zone Controller Setpoints.....68
  - VAV/Zone Damper Force Modes.....
  - VAV/Zone Damper Operation.....65
  - VAV/Zone Status.....72
  - VCM-X Configuration Screens.....25
  - Water Source Heat Pump Installed.....38
  - Week Schedules.....14,22
  - WSHP Protection Module.....29
- Search
- For Loops.....20
  - For Overrides.....21
- Selection Buttons
- Defined.....10,16
- Sensor, RAT & OAT Setpoint.....54
- Sensor Calibration
- COIL.....54
  - Space Temperature.....71
  - SPC & SAT Setpoint.....54
  - Supply Air Temperature.....71
- SERIES FAN BOX
- VAV/Zone.....65
- Setpoints.....49
- Button.....10,16
  - Cool Reset Source.....46
  - Defrost Heat Wheel.....53
  - SAT Heating Setpoints.....47
- Setting
- Date.....11,17
  - Day of Week.....11,17
  - Month.....11,17
  - Year.....11,17
- Signal Percentage.....63
- Signal Status.....63
- Single Zone VAV Mode.....26,36
- Slide Adjust.....57
- Slide Offset VAV/Zone Status.....72
- Smoke Detector Input.....31,41
- Space Sensor Overrides Screen.....21
- Space Temperature.....57
- Configuration.....26,36
- Space Temperature Return Air and Slide Adjust VCM-X Status.....57
- Space Temperature Sensor.....26,36
- Split Condenser Screen.....
- Stage 1 Signal Percentage.....62,63
- Stage 2 Signal Percentage.....62,63
- Stage Control Window Setpoint.....47
- Staging Up and Down Delay Periods.....33,43
- Stand-Alone Connection.....9
- Start and Stop Times
- 2359.....14,22
  - ZERO.....14,22
- Static Pressure
- Output % VCM-X Status.....59
  - VCM-X Output.....59
- Static Spt, Deadband & Control Rate Setpoints.....50
- Status Key.....10,16
- Status Screens
- Dual Digital Module.....55,61
  - Full Digital Module.....61
  - Head Pressure Condenser Fan #1.....63
  - Head Pressure Condenser Fan #2.....63
  - Outdoor Air CFM.....59
  - Supply Air & Return Air CFM.....60
- Suction Pressure.....49
- Suction Pressure Transducer.....49
- Supply Air Configuration.....26,36
- Temperature.....72
- Supply Air CFM
- Status.....60
- Supply Air & Return Air CFM.....60
- Supply Air Temperature Reset.....26,36
- Supply Air Temperature & Setpoint.....57
- Supply Air with Supply Air Tempering.....26,36
- Supply Duct/Damper Size.....30,39
- Supply Fan
- Cycle Screen.....25,35
  - Relay.....64
  - Starting Delay Timer Setpoint.....51
- Supply Fan VFD.....26,36
- Supply VFD Override.....77
- System Status.....76
- Type.....75
- System A.....57
- System A Signal.....62,63
- System A Signal Percentage.....62,63
- System B.....57
- System B Signal.....62,63
- System B Signal Percentage.....62,63
- System Manager
- Dimensions.....6
  - Override Search.....21
  - Passcodes.....19
- System Manager TS.....10,16
- T
- Temperature
- Circuit A.....61
  - Circuit B.....61
  - Coil B1.....62
  - Coil B2.....62
  - Dual Digital.....61
  - Full Digital.....61
- Testing the System
- Outputs Force.....77
- Time, 24-Hour Military Format.....14,22
- Time & Date.....11,17
- Touch Screen System Manager.....10,16
- Trend Log Interval.....53
- Troubleshooting the System
- Outputs Force.....77
- Two Condenser Head Pressure Module.....63
- Type of Head Pressure Module Installed.....28,38
- U
- Unit Selection Screen.....25,35,45, 56,65,68,75,77,79
- Unoccupied
- Cooling & Heating Setbacks Setpoints.....46
  - Mode.....15,23
  - Setbacks.....68
- Updating Controllers & Modules.....82

### V

#### VAV/Zone

- AHU Heat Call Space
  - Temperature.....69
- Box Heat Allow.....66
- Configuration.....65
- Controllers.....65,74
- COOLING ONLY BOX.....65
- Damper Airflow
  - Cool/Heat Minimum.....69
  - Integral.....69
  - Maximum.....69
  - Vent Minimum.....69
- Damper Airflow Fixed Position.....70
- Damper Airflow Night
  - Minimum.....70
- Damper Airflow Reheat
  - Minimum.....70
- Day/Night Schedule.....71
- Dump Zone.....67
- Expansion Relays Heating
  - Stages.....66
- H/C CHANGEOVER BOX.....65
- Main Fan Status.....66
- Maximum EMS Offset.....71
- Maximum Slide Offset.....71
- Occupied Setpoints.....68
- PARALLEL FAN BOX.....65
- Pressure Independent Airflow
  - Constant.....66
- Proportional Heating Signal.....66
- Push-Button Override.....66
- Push-Button Override Duration.....71
- Sensor Calibration for Space
  - Temperature.....71
- Sensor Calibration for Supply Air
  - Temperature.....71
- SERIES FAN BOX.....65
- Unoccupied Setbacks.....68
- Voting Zone.....66
- Zone Alarm Delay.....70
- Zone Alarm Offsets.....70

#### VAV/Zone Configuration

- Damper Operation.....65

#### VAV/Zone Setpoints

- AHU Heat Call Space
  - Temperature.....69
- Damper Airflow
  - Cool Minimum.....69
  - Heat Minimum.....69
  - Integral.....69
  - Maximum.....69
  - Vent Minimum.....69
- Damper Airflow Fixed Position.....70
- Damper Airflow Night
  - Minimum.....70
- Damper Airflow Reheat
  - Minimum.....70
- Day/Night Schedule.....71
- Fan On Min.....70

- Maximum EMS Offset.....71
- Maximum Slide Offset.....71
- Occupied Setpoints.....68
- Push-Button Override Duration.....71
- Sensor Calibration for Space
  - Temperature.....71
- Sensor Calibration for Supply Air
  - Temperature.....71
- Unoccupied Setbacks.....68
- Zone Alarm Delay.....70
- Zone Alarm Offsets.....70

#### VAV/Zone Status

- Airflow.....73
- Alarm Status.....73
- Box Air Temperature.....72
- Cooling Setpoints.....72
- Desired CFM.....73
- Fan Status.....73
- Heating/Cooling Demand.....72
- Heating Setpoints.....72
- Mode of Operation.....72
- Reheat Stages.....73
- Screens.....72
- Slide Offset.....72
- Supply Air Temperature.....72
- Zone Damper Position.....73
- Zone Temperature.....72

#### VCM-X Controller

- Alarm Conditions.....64
- Analog Output Override.....77
- Building Pressure Output %.....60
- Bypass Damper Signal.....64
- Coil Temperature.....58
- Configuration Screens.....25
- Cooling.....56
- Damper Force Modes.....74
- Date.....11,17
- Dewpoint Temp.....58
- Economizer.....56
- Economizer Overrides.....77
- Exhaust VFD Override.....78
- Heating.....56
- Holidays.....14
- Holiday Start/Stop Times.....15,23
- Indoor RH Setpoint.....59
- Leaving Water Temperature.....57
- MHGRV Output %.....60
- Mod Cooling %.....60,63
- Mod Cooling Override.....78
- Mode.....56
- Mode Cooling Setpoint.....56
- Mode Enable Temperature.....56
- Mode Heating Setpoint.....56
- MODGAS Output %.....60
- Mod Heating %.....60
- Mod Heating Override.....78
- OA Dewpoint.....58
- Occupied Mode.....15,23
- Outdoor Air Relative Humidity.....58
- Outdoor Air Temperature.....58
- Outputs Force.....77

- RA Bypass Override.....78
- RA Damper Override.....78
- Relay Overrides.....77
- Return Air Damper Signal.....64
- Schedule Override.....15,23
- Scheduling.....14,22
- Space Temperature Return Air and Slide Adjust.....57
- Static Pressure Output %.....59
- Supply Air Temperature & Setpoint.....57
- Supply Fan Relay.....64
- Supply VFD Override.....77
- Time & Date.....11,17
- Unoccupied Mode.....15,23
- Week Schedules.....14,22

#### VCM-X Modular

- Controller.....29,61,62,63

#### VCM-X Schedule Holidays.....14,22

#### VCM-X WSHP Controller.....61,62

#### VFD.....25,35

- VFD Full.....38
- VFD Half.....38

#### Voltage

- Maximum for Main Fan.....32,42

#### Voting Zone Configuration.....66

### W

- Warm-up Mode Relay.....64
- Warm-up Mode Relay
  - Configuration.....33,43
- Water Source Heat Module
  - Coil Temperature Status.....61
  - Signal Status.....63
- Water Source Heat Pump.....61
- Water Source Heat Pump Installed
  - Screen.....38
- Week Schedules
  - VCM-X Controller.....14,22
- Wetbulb Temperature.....59
- Wiring
  - Power/Comm Board.....8
- WSHP Protection Module Screen.....29

### Y

- Year.....11,17

### Z

- Zone Alarm
  - Delay.....70
  - Offsets.....70
- Zone Damper Position
  - VAV/Zone Status.....73
- Zone Temperature
  - VAV/Zone Status.....72





Form: OR-VCMXRNEOISD-TGD-01H    Printed in the USA    September 2016  
All rights reserved.    Copyright 2016  
WattMaster Controls Inc. • 8500 NW River Park Drive • Parkville, MO • 64152  
Phone: 866-918-1100    [www.orioncontrols.com](http://www.orioncontrols.com)    Fax (816) 505-1101